



Diesel injection: List and location of components

K9K, and 796

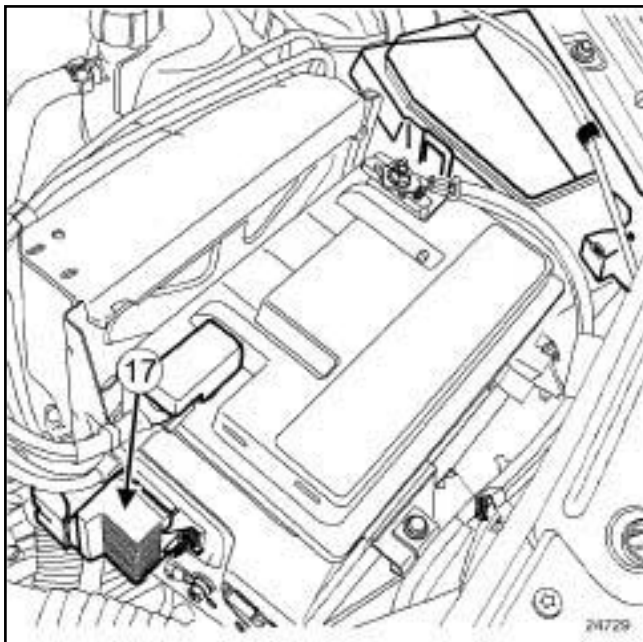

24729

Pre-postheating unit (17) .

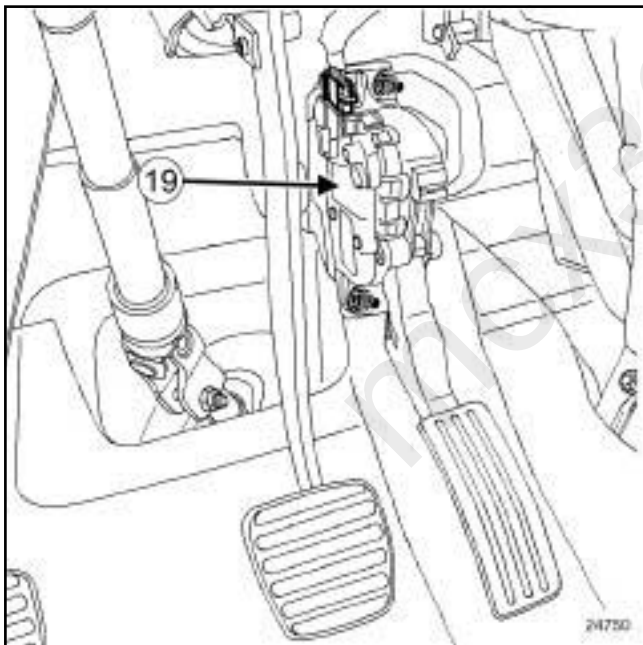

24750

Accelerator pedal potentiometer (19) .

K9K

Equipment required

Diagnostic tool

Tightening torques

injection computer nuts	8 N.m
-------------------------	-------

injection computer protector bolts	8 N.m
------------------------------------	-------

Note:


When programming, reprogramming or replacing the computer, it is necessary to program the new computer with the C2I parameters (injector flow correction) and the engine adaptives using the **Diagnostic tool**.

There are two ways to do this (see **Fault finding - Replacement of components**) (13B, Diesel injection):

- an automatic method which can be used if it is possible to read the information contained in the old computer,
- a manual method which is to be used if it is not possible to read the information contained in the old computer.


REMOVAL**I - REMOVAL PREPARATION OPERATION**

- ☐ Remove the battery (see **Battery: Removal - Refitting**) (80A, Battery).

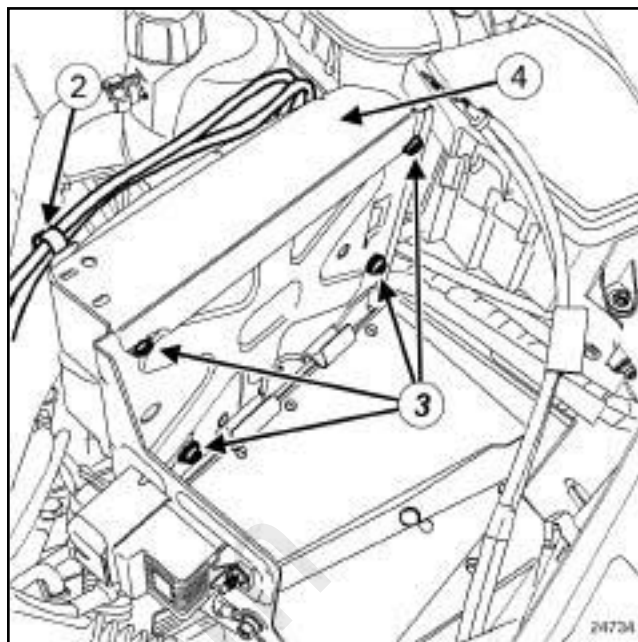

24734

- ☐ Unclip the positive terminal wiring (2) .
- ☐ Remove:
 - the bolts (3) from the injection computer protector,
 - the injection computer protector (4) .

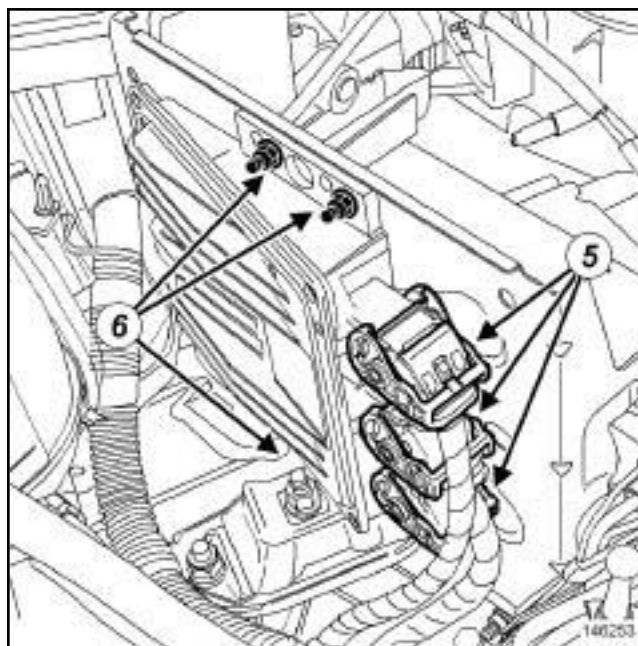II - REMOVAL OPERATION

146253

- ☐ Remove the injection computer nuts (6) .
- ☐ Disconnect the three connectors (5) from the injection computer.
- ☐ Remove the injection computer.