

Diesel injection computer: Removal - Refitting

K9K

REFITTING

I - REFITTING OPERATION

- ☐ Fit the injection computer on its mounting studs.
- ☐ Torque tighten the **injection computer nuts (8 N.m)**.
- ☐ Connect the injection computer connectors.

II - FINAL OPERATION

- ☐ Refit the injection computer protector.
- ☐ Tighten to torque the **injection computer protector bolts (8 N.m)**.
- ☐ Clip on the positive terminal wiring.
- ☐ Refit the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- ☐ Respect the programming settings for the C2I (individual injector correction) parameters and the engine adaptives (see **Fault finding - Replacement of components**) (13B, Diesel injection).
- ☐ Switch on the ignition and read the fault codes using the **Diagnostic tool**.
- ☐ If necessary, repair the faults indicated.
- ☐ Clear the faults.
- ☐ Check that the vehicle is working properly.