


K9K

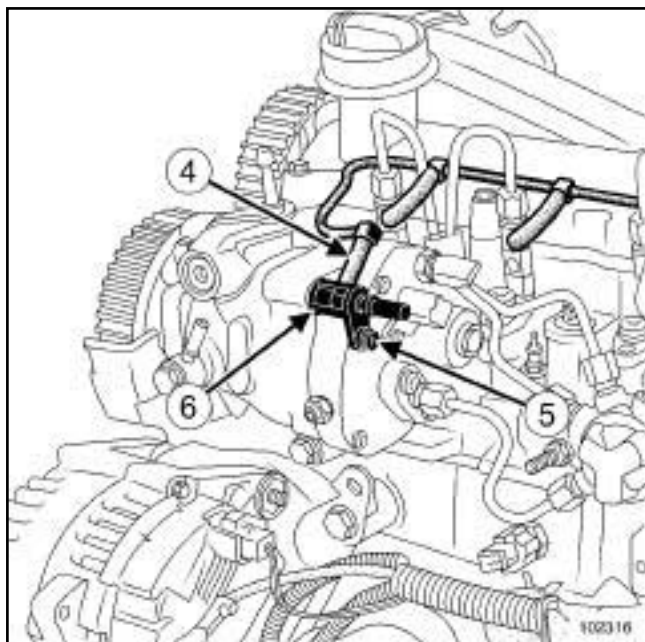

102316

- ☐ Disconnect the return pipe (4) connecting the injector to the high pressure pump.

## II - REMOVAL OPERATION

- ☐ Remove:
  - the bolt (5) of the Venturi (6) ,
  - the Venturi.
- ☐ Plug the openings.

## REFITTING

### I - REFITTING PREPARATION OPERATION

☐

#### **WARNING**

Do not remove the blanking plugs from each component until the last moment.

- ☐ Lubricate the O-ring with lubricant from the applicator supplied with the new part.

### II - REFITTING OPERATION

- ☐ **parts always to be replaced: Venturi.**

#### **Note:**

Do not damage the seal when refitting.

- ☐ Fit the Venturi.
- ☐ Torque tighten the **Venturi bolt (6 N.m)**.

### III - FINAL OPERATION

- ☐ Connect the return pipe connecting the injector to the high-pressure pump.
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).
- ☐ Start the engine.
- ☐ Check that there are no fuel leaks.
- ☐ Refit the engine cover.