


IGNITION

Coils: Removal - Refitting

17A

K4M

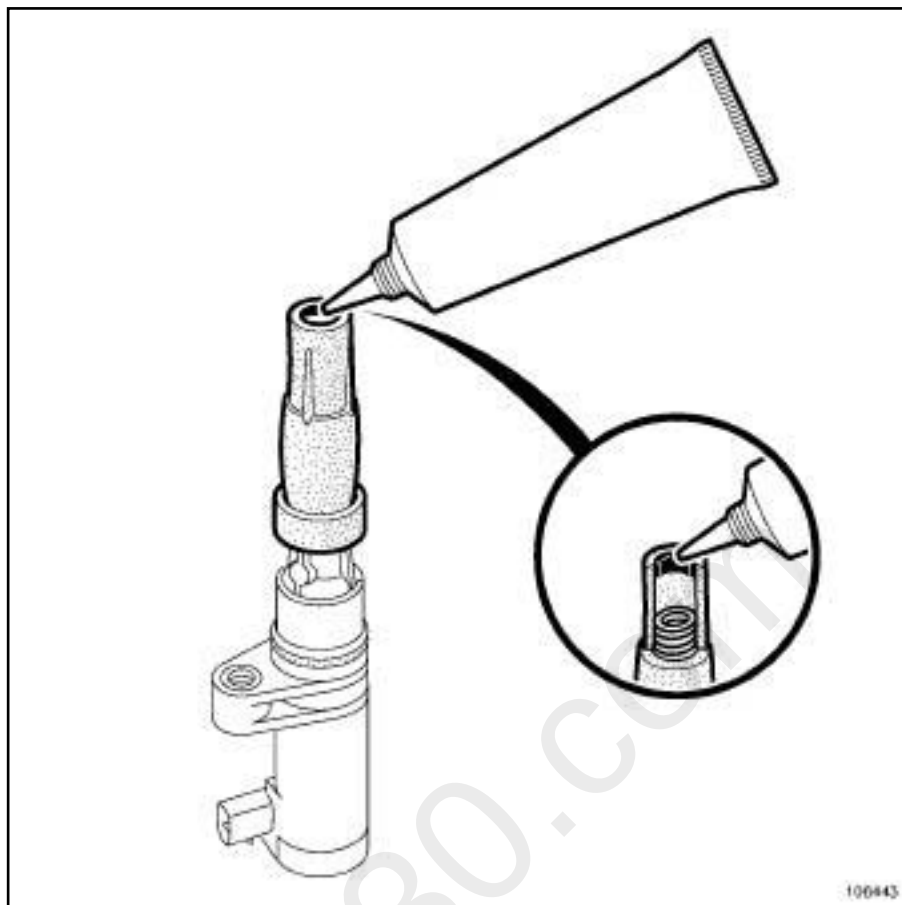

106443

- ☐ When refitting the ignition harness, it is essential to apply a bead of **FLUOSTAR 2L 2 mm** in diameter around the inner edge of the high-tension caps on the side of the spark plugs and coil (see **Vehicle: Parts and consumables for the repair**) (04B, Consumables-Products).

II - REFITTING OPERATION

- ☐ Refit:
 - the ignition coils,
 - the new ignition coil bolts.
- ☐ Torque tighten the **ignition coil bolts (14 N.m)**.
- ☐ Connect the ignition coil connectors.