

Petrol injection computer: Removal - Refitting

K4M

REFITTING

I - REFITTING OPERATION

- ☐ Refit the injection computer.
- ☐ Torque tighten the **injection computer nuts (8 N.m)**.
- ☐ Connect the two connectors of the injection computer.

II - FINAL OPERATION

- ☐ Refit the channel.
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

III - WHEN REPLACING THE INJECTION COMPUTER

- ☐ The computer supplied as a spare part is not operational (also known as "blank").
- ☐ After replacing the injection computer, program it using the **Diagnostic tool** (see **Technical Note 9869A, Procedure for programming and reprogramming the computer**).
- ☐ Carry out the configuration and/or necessary programming (see **Fault finding - Replacement of components**) (17B, Petrol injection).