


PETROL INJECTION

Injector rail - Injectors: Removal - Refitting

17B


K4M

II - REMOVAL OPERATION

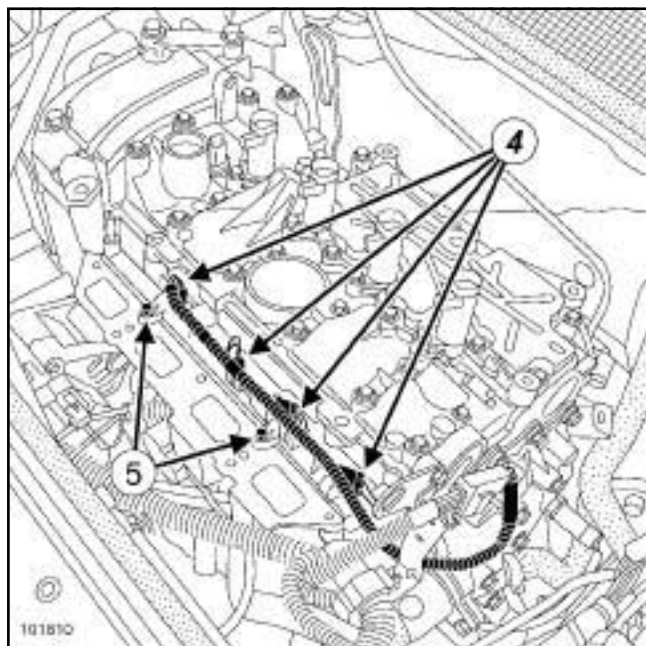

101810

- ☐ Disconnect the injector connectors (4) .
- ☐ Remove:
 - the injector rail bolts (5) ,
 - the « injector rail-injector » assembly by pulling it carefully towards the front of the vehicle.

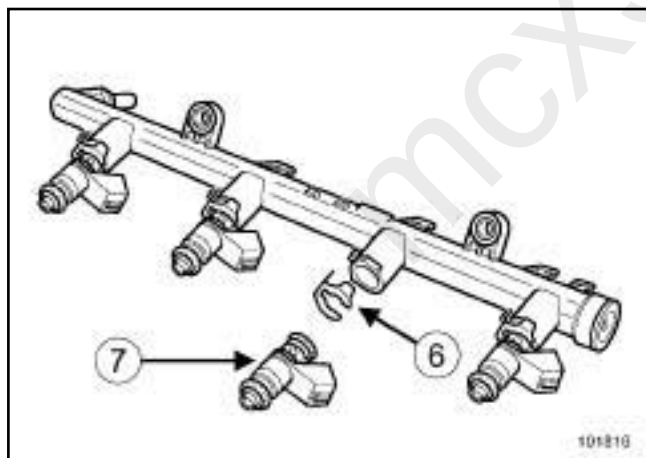

101816

- ☐ Remove:
 - the retaining clips (6) from the injectors,
 - the injectors (7) .
- ☐ Insert the blanking plugs.

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ parts always to be replaced: injector clip on injector rail.
- ☐ parts always to be replaced: injector seal.
- ☐ Refit:
 - new seals on each injector,
 - the injectors on the injector rail,
 - a new clip on each injector.

II - REFITTING OPERATION

- ☐ Remove the blanking plugs.
- ☐ Fit the « injector rail-injector » assembly.
- ☐ Torque tighten the **injector rail bolts (9 N.m)**.

III - FINAL OPERATION

- ☐ Connect:
 - the injector connectors,
 - the fuel supply union onto the injector rail,
- ☐ Refit the injector rail protector.
- ☐ Torque tighten the two **injector rail protector nuts (21 N.m)**.
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).