

Coolant temperature sensor: Removal - Refitting

K4M

III - FINAL OPERATION

- ☐ Refit the air resonator (see **12A, Fuel mixture, Air resonator: Removal - Refitting**, page **12A-2**).
- ☐ Perform the following operations:
 - top up the coolant level,
 - bleed the cooling system (see **19A, Cooling, Cooling system: Draining - Refilling**, page **19A-6**).