


Fuel level sensor module: Removal - Refitting


K4M or K9K

II - REFITTING OPERATION

K4M

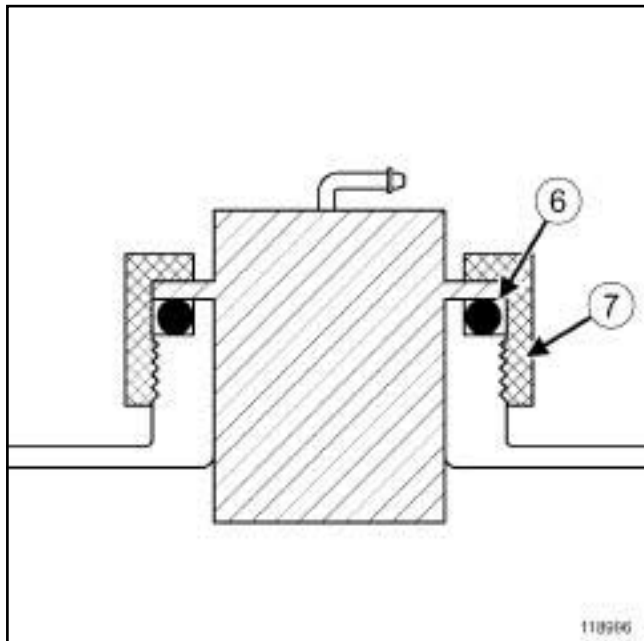

118996

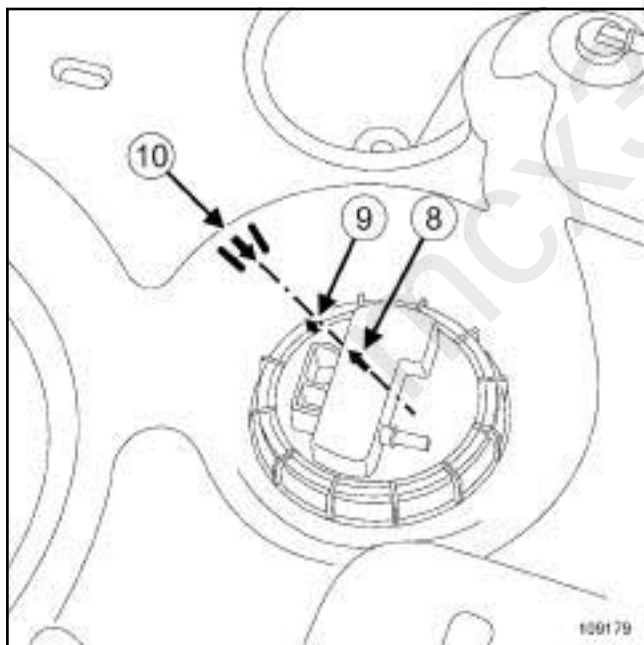

109179

☐ Position:

- the new seal (6) in the neck correctly,
- the fuel level sensor module on the fuel tank. A lug on the fuel level sensor module and a recess in the fuel tank ensure correct positioning in the fuel tank;

the mark (8) on the fuel level sensor module must be positioned opposite the mark on the fuel tank (10) .

- ☐ Press the fuel level sensor module by hand (to prevent the seal from moving) and finger tighten the nut on the fuel tank.
- ☐ Then use the tool (**Mot. 1397**) to tighten the nut of the fuel level sensor module to the mark on the fuel tank.

K4M

- ☐ Tighten the nut (7) until the mark (9) on the nut is located opposite the mark (10) on the fuel tank using the tool (**Mot. 1397**).

- ☐ Proceed in the reverse order to removal.