

ENGINE MOUNTING

Lower engine tie-bar: Removal - Refitting

19D

Tightening torques 	
rear suspended engine mounting bolt on the subframe	105 N.m
rear suspended engine mounting bolts on the gearbox	105 N.m


REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Position the vehicle on a two-post lift (see **Vehicle: Towing and lifting**) (02A, Lifting equipment).
- ☐ Remove the engine undertray.

II - REMOVAL OPERATION

JR5

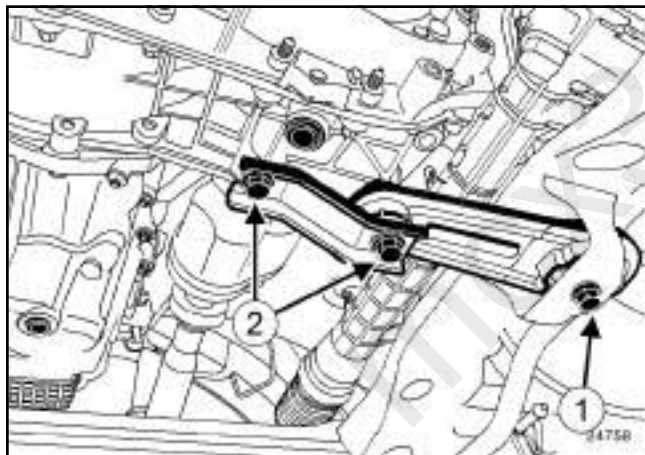

- ☐ Remove:
 - the rear suspended engine mounting bolt (1) from the subframe,
 - the rear suspended engine bolts (2) from the gearbox,
 - the rear suspended engine mounting.

REFITTING

I - REFITTING OPERATION

- ☐ Refit:
 - the rear suspended engine mounting,
 - the rear suspended engine mounting bolts.
- ☐ Torque tighten:
 - the **rear suspended engine mounting bolt on the subframe (105 N.m)**,
 - the **rear suspended engine mounting bolts on the gearbox (105 N.m)**.

II - FINAL OPERATION

- ☐ Refit the engine undertray.
- ☐ Tighten the engine undertray bolts.

RENAULT

1 Engine and peripherals

10A ENGINE AND CYLINDER BLOCK ASSEMBLY

11A TOP AND FRONT OF ENGINE

12A FUEL MIXTURE

12B TURBOCHARGING

13A FUEL SUPPLY

13B DIESEL INJECTION

13C PREHEATING

14A ANTIPOLLUTION

16A STARTING - CHARGING

17A IGNITION

17B PETROL INJECTION

EDITION ANGLAISE

"The repair procedures given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The procedures may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are constructed".

All rights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.

19A COOLING

19B EXHAUST

19B EXHAUST

19C TANK

19D ENGINE MOUNTING

mcx30.com

EDITION ANGLAISE

"The repair procedures given by the manufacturer in this document are based on the technical specifications current when it was prepared.

The procedures may be modified as a result of changes introduced by the manufacturer in the production of the various component units and accessories from which the vehicles are constructed".

All rights reserved by Renault.

Copying or translating, in part or in full, of this document or use of the service part reference numbering system is forbidden without the prior written authority of Renault.

Section 1

Contents

Pages

10A	ENGINE AND CYLINDER BLOCK ASSEMBLY		10A	ENGINE AND CYLINDER BLOCK ASSEMBLY	
	Crankshaft seal on timing end: Removal - Refitting	10A-1		Flywheel: Removal - Refitting	10A-238
	Crankshaft seal, gearbox end: Removal - Refitting	10A-7		Drive plate: Removal - Refitting	10A-242
	Engine oil: Draining - Refilling	10A-13	11A	TOP AND FRONT OF ENGINE	
	Oil filter: Removal - Refitting	10A-20		Pressure at end of compression: Check	11A-1
	Oil-coolant heat exchanger: Removal - Refitting	10A-26		Accessories belt: Removal - Refitting	11A-5
	Oil pressure sensor: Removal - Refitting	10A-40		Crankshaft accessories pulley: Removal - Refitting	11A-31
	Oil level sensor: Removal - Refitting	10A-47		Accessories dummy pulley: Removal - Refitting	11A-47
	Lower cover: Removal - Refitting	10A-53		Timing belt: Removal - Refitting	11A-48
	Conrod bearing shell: Removal - Refitting	10A-71		Timing chain: Removal - Refitting	11A-170
	Oil pump: Removal - Refitting	10A-79		Rocker cover: Removal - Refitting	11A-183
	Multifunction support: Removal - Refitting	10A-97		Camshaft dephaser: Function	11A-224
	Engine - gearbox assembly: Removal - Refitting	10A-113		Camshaft dephaser: Function	11A-228
	Engine - gearbox assembly: Removal - Refitting	10A-162		Camshaft dephaser: Removal - Refitting	11A-234
	Valves: Adjustment	10A-232		Camshaft: Removal - Refitting	11A-247
	Oil pressure: Check	10A-236			

Contents

11A TOP AND FRONT OF ENGINE

Camshaft seal, timing end: Removal - Refitting	11A-284
Oil decanter: Removal - Refitting	11A-302
Lifting eyes: Removal - Refitting	11A-305
Cylinder head: Removal - Refitting	11A-308
Cylinder head: Removal - Refitting	11A-356

12A FUEL MIXTURE

Air inlet: Description	12A-1
Air resonator: Removal - Refitting	12A-10
Air filter: Removal - Refitting	12A-15
Air filter unit: Removal - Refitting	12A-17
Air flowmeter: Removal - Refitting	12A-27
Damper valve: Removal - Refitting	12A-31
Throttle valve: Removal - Refitting	12A-33
Throttle valve: Cleaning	12A-44
Inlet distributor: Removal - Refitting	12A-46
Injector holder shim: Removal - Refitting	12A-70
Exhaust manifold: Removal - Refitting	12A-75

12B TURBOCHARGING

Turbocharging: Precautions for the repair	12B-1
Turbocharger: Removal - Refitting	12B-4
Turbocharger oil pipe: Removal - Refitting	12B-15
Intercooler: Removal - Refitting	12B-21

13A FUEL SUPPLY

Fuel circuit: Operating diagram	13A-1
Petrol supply circuit: Operating diagram	13A-2
Diesel supply circuit: Operating diagram	13A-3
Diesel filter: Removal - Refitting	13A-6
Fuel filter: Removal - Refitting	13A-9
Particle filter injector fuel filter: Removal - Refitting	13A-10
Injector rail - Injectors: Removal - Refitting	13A-11
Fuel pressure: Check	13A-23
Fuel flow: Check	13A-31

13B DIESEL INJECTION

Diesel injection: Precautions for the repair	13B-1
Diesel injection: List and location of components	13B-8
Diesel injection computer: Configuration	13B-17
Diesel injection computer: Removal - Refitting	13B-18

Contents

13B DIESEL INJECTION

Flow regulation solenoid valve: Removal - Refitting	13B-19
Pressure regulation solenoid valve: Removal - Refitting	13B-20
High pressure pump leak flow: Check	13B-21
High pressure pump: Removal - Refitting	13B-23
Flow actuator: Removal - Refitting	13B-39
Venturi: Removal - Refitting	13B-42
Diesel return pipe: Removal - Refitting	13B-45
High pressure pipe between pump and rail: Removal - Refitting	13B-50
High pressure pipe between rail and injector: Removal - Refitting	13B-56
Injector rail: Removal - Refitting	13B-64
Rail pressure sensor: Removal - Refitting	13B-74
Fuel temperature sensor: Removal - Refitting	13B-76
Injector leak flow: Check	13B-80
Diesel injector: Configurations	13B-82
Diesel injector: Removal - Refitting	13B-83
High pressure pipe: Check	13B-99
Accelerometer: Removal - Refitting	13B-101
Crankshaft position sensor: Removal - Refitting	13B-105

13C PREHEATING

Pre-postheating unit: Removal - Refitting	13C-1
Heater plugs: Removal - Refitting	13C-2

14A ANTIPOLLUTION

Exhaust gas recirculation: List and location of components	14A-1
Exhaust gas recirculation solenoid valve: Removal - Refitting	14A-3
Exhaust gas cooler: Removal - Refitting	14A-7
Exhaust gas recirculation unit: Removal - Refitting	14A-12
Exhaust gas recirculation mounting: Removal - Refitting	14A-17
Exhaust gas recirculation rigid pipe: Removal - Refitting	14A-20
Fuel vapour recirculation circuit: Function	14A-23
Fuel vapour recirculation circuit: Operating diagram	14A-24
Fuel vapour recirculation circuit: Check	14A-25
Fuel vapour absorber: Removal - Refitting	14A-26
Fuel vapour absorber: Check	14A-27
Oil vapour rebreathing circuit: Descriptions	14A-28
Oil vapour rebreathing circuit: Operating diagram	14A-29
Oil vapour rebreathing circuit: Operating diagram	14A-31

Contents

16A STARTING - CHARGING

Charge circuit: Specifications	16A-1
Charge circuit: Function	16A-2
Charge circuit: Check	16A-3
Alternator: Removal - Refitting	16A-5
Starter: Removal - Refitting	16A-23

17A IGNITION

Ignition: Specifications	17A-1
Coils: Removal - Refitting	17A-2
Plugs: Removal - Refitting	17A-11

17B PETROL INJECTION

Petrol injection: List and location of components	17B-1
Oxygen sensors: Removal - Refitting	17B-19
Crankshaft position sensor: Removal - Refitting	17B-32
Petrol injection computer: Removal - Refitting	17B-37

19A COOLING

Engine cooling: Parts and consumables for the repair	19A-1
Engine cooling: Precautions for the repair	19A-2
Engine cooling system: Specifications	19A-3
Engine cooling system: Check	19A-5
Engine cooling system: Operating diagram	19A-7

19A COOLING

Cooling system: Draining - Refilling	19A-16
Cooling radiator: Removal - Refitting	19A-20
Coolant pump: Removal - Refitting	19A-41
Thermostat: Removal - Refitting	19A-59
Water chamber: Removal - Refitting	19A-63
Coolant temperature sensor: Removal - Refitting	19A-77
Engine cooling fan assembly: Removal - Refitting	19A-85
Coolant pump inlet pipe: Removal - Refitting	19A-93
Expansion bottle: Removal - Refitting	19A-101

19B EXHAUST

Exhaust: List and location of components	19B-1
Exhaust: Precautions for the repair	19B-17
Catalytic pre-converter: Removal - Refitting	19B-21
Catalytic converter: Removal - Refitting	19B-27
Expansion chamber: Removal - Refitting	19B-45
Intermediate pipe: Removal - Refitting	19B-47
Silencer: Removal - Refitting	19B-48
Particle filter: Removal - Refitting	19B-54
Particle filter pressure sensor: Removal - Refitting	19B-57