

Contents

19B EXHAUST

Particle filter temperature sensors: Removal - Refitting	19B-60
Exhaust fuel injector: Removal - Refitting	19B-64
Exhaust fuel injector cooler: Removal - Refitting	19B-67

19B EXHAUST

Exhaust: Precautions for the repair	19B-69
Catalytic converter: Removal - Refitting	19B-73
Expansion chamber: Removal - Refitting	19B-91
Intermediate pipe: Removal - Refitting	19B-93
Silencer: Removal - Refitting	19B-94

19C TANK

Fuel tank: Removal - Refitting	19C-1
Filler neck: Removal - Refitting	19C-6
Fuel tank: Draining	19C-8
Sender: Removal - Refitting	19C-14
Pump - sender: Removal - Refitting	19C-16
Pump - sender - filter: Removal - Refitting	19C-18
Fuel level sensor: Check	19C-20

19D ENGINE MOUNTING

Suspended engine mounting: Tightening torque	19D-1
Lower engine tie-bar: Removal - Refitting	19D-13
Right-hand suspended engine mounting: Removal - Refitting	19D-22
Left-hand suspended engine mounting: Removal - Refitting	19D-34