

TOP AND FRONT OF ENGINE

Cylinder head: Removal - Refitting

11A

F4R, and 830

- the throttle valve (see **12A, Fuel mixture, Throttle valve: Removal - Refitting**, page **12A-33**) ,
- ☐ Perform the following operations:
 - top up the engine oil (see **10A, Engine and cylinder block assembly, Engine oil: Draining - Refilling**, page **10A-13**) ,
 - refill the cooling system (see **19A, Cooling, Cooling system: Draining - Refilling**, page **19A-16**) .
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).
- ☐ Bleed the cooling system (see **Cooling system: Bleed**) .
- ☐ Refit the engine undertray.
- ☐ Using the **Diagnostic tool**, check that there are no faults stored by the injection computer and clear them if necessary.