


FUEL MIXTURE

Air resonator: Removal - Refitting


12A

M4R

II - REMOVAL OF PART CONCERNED

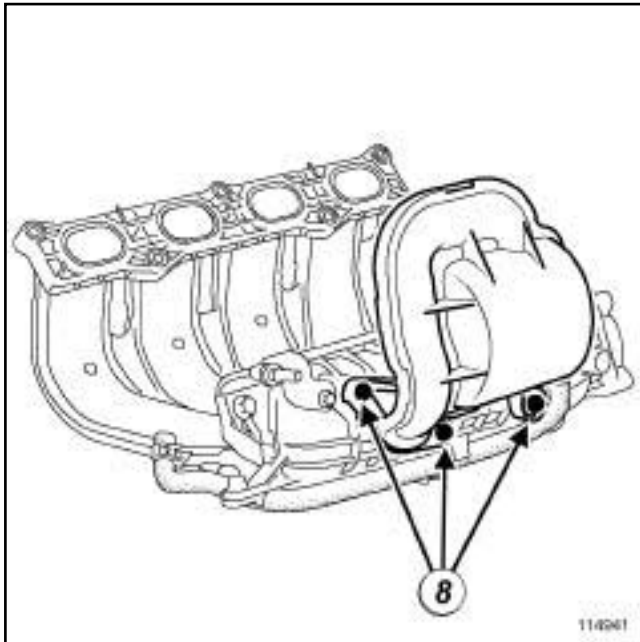

114941

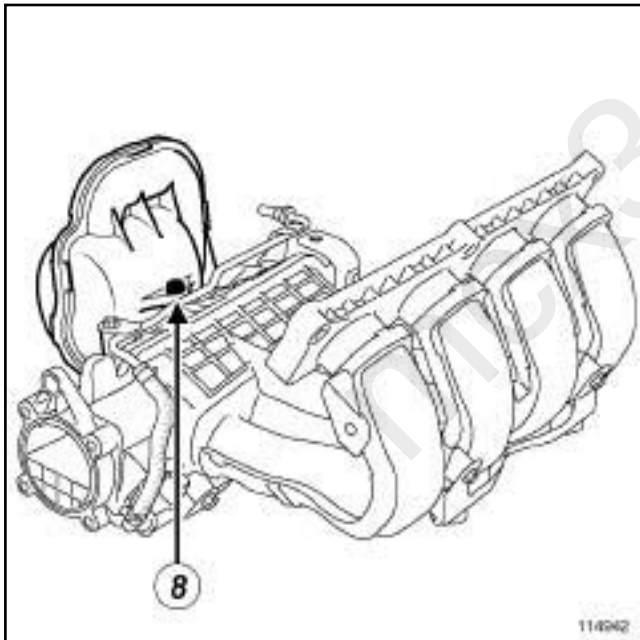

114942

- ☐ Remove the mounting bolts (8) from the air resonator on the intake distributor.

REFITTING THE AIR RESONATOR ON THE INLET MANIFOLD

I - REFITTING PREPARATIONS OPERATION

- ☐ The O-ring of the air resonator on the inlet manifold must always be replaced.

II - REFITTING PART CONCERNED

- ☐ Torque tighten the **air resonator mounting bolt on the intake distributor (11 Nm)**.

III - FINAL OPERATION.

- ☐ Refit the intake distributor (see **12A, Fuel mixture, Inlet distributor: Removal - Refitting**, page **12A-46**) .

FUEL MIXTURE

Air filter: Removal - Refitting

12A


D4F, and 740 or 742 or 764

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Remove the air filter unit (see **12A, Fuel mixture, Air filter unit: Removal - Refitting**, page 12A-17) .

II - OPERATION FOR REMOVAL OF PART CONCERNED

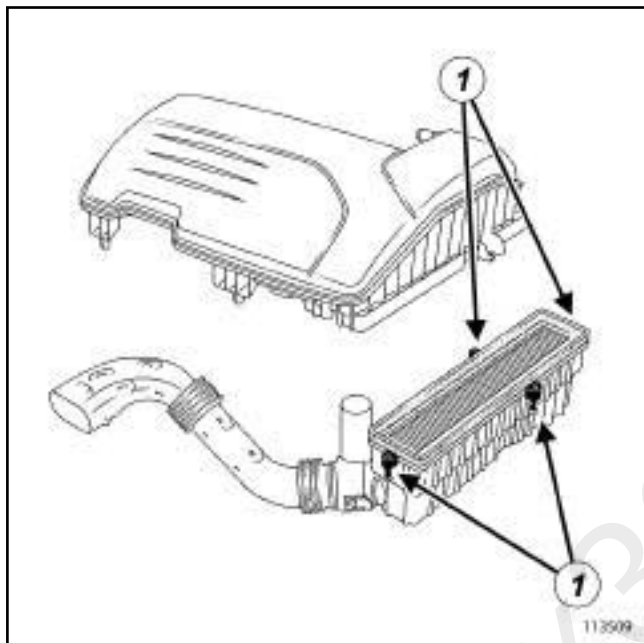

- ☐ Remove:
 - the mounting bolts (1) from the air filter unit cover,
 - the air filter.

REFITTING

I - REFITTING PREPARATION OPERATION

- ☐ Clean the air filter housing.

II - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the air filter,
 - the bolts mounting the air filter unit cover.

III - FINAL OPERATION.

- ☐ Refit the air filter unit (see **12A, Fuel mixture, Air filter unit: Removal - Refitting**, page 12A-17) .