

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Position the vehicle on a two-post lift (see **Vehicle: Towing and lifting**) (02A, Lifting equipment).
- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

IMPORTANT

During this operation, be sure to:

- refrain from smoking or bringing red hot objects close to the working area,
- be careful of fuel splashes when disconnecting the union.


IMPORTANT

Wear goggles with side protectors for this operation.


IMPORTANT

Wear heat protective gloves during the operation.

II - OPERATION FOR REMOVAL OF PART CONCERNED

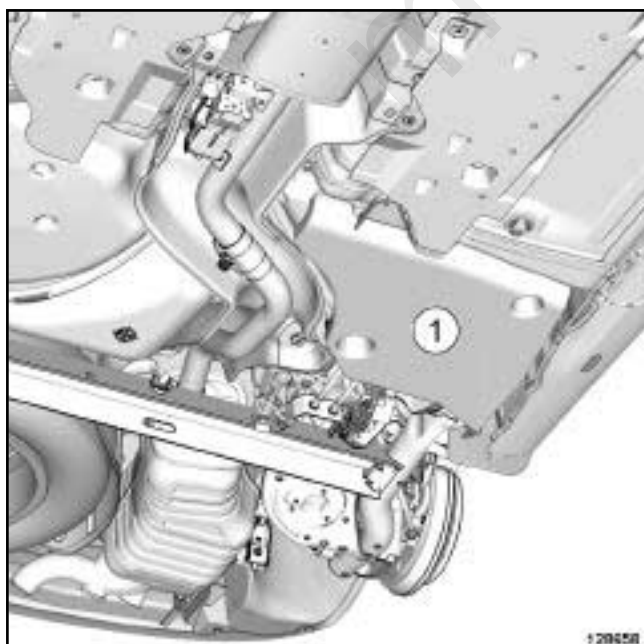

- ☐ Remove the fuel filter guard (1) .

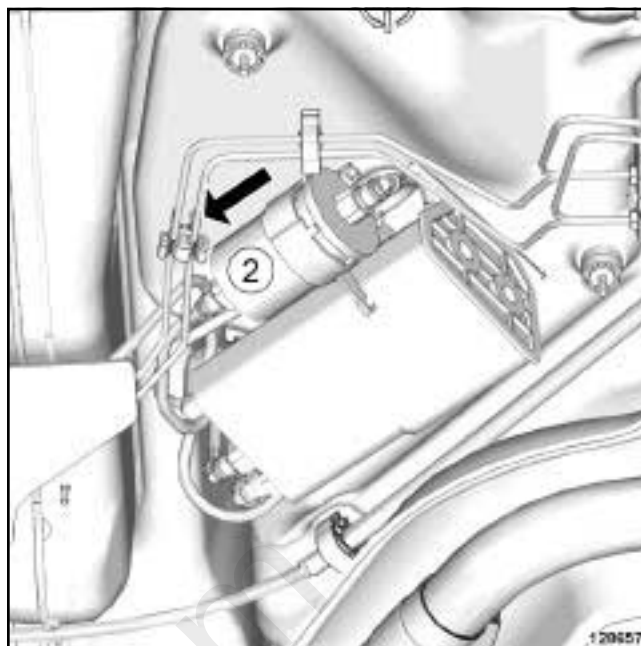

- ☐ Unclip the fuel filter (2) on the fuel vapour absorber in the direction of the arrow.
- ☐ Disconnect the fuel filter pipes.
- ☐ Remove the fuel filter.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit the fuel filter.
- ☐ Connect the fuel filter pipes.
- ☐ Clip the fuel filter onto the fuel vapour absorber.
- ☐ Refit the fuel filter guard.

II - FINAL OPERATION.

- ☐ Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).