



F4R

- ❑ Remove:
 - the soundproofing unit,
 - the UPC cover.

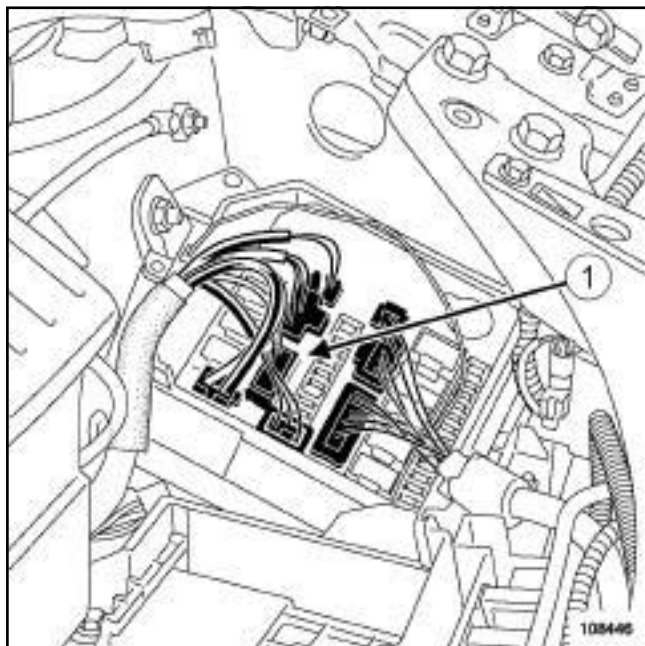

- ❑ Disconnect the brown 12-track connector (1) .

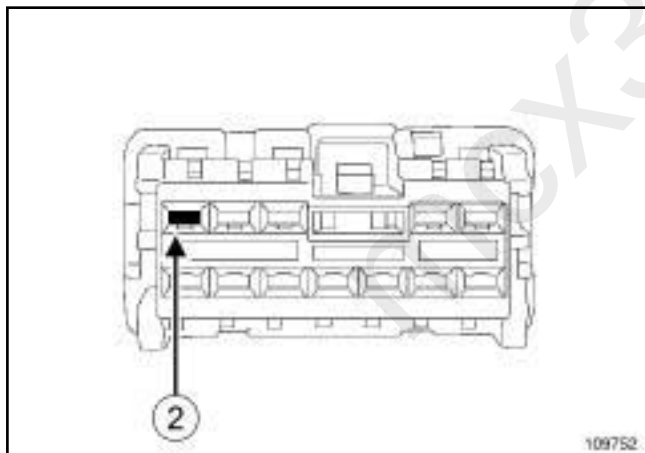

- ❑ Connect terminal (2) of the brown connector to a + battery supply to operate the fuel pump.


Note:

The flow reading should be **80 to 120 l/h**.

- ❑ Remove the + battery feed brown connector terminal

III - FINAL OPERATION

- ❑ Refit:
 - the UPC unit cover,
 - the soundproofing unit.

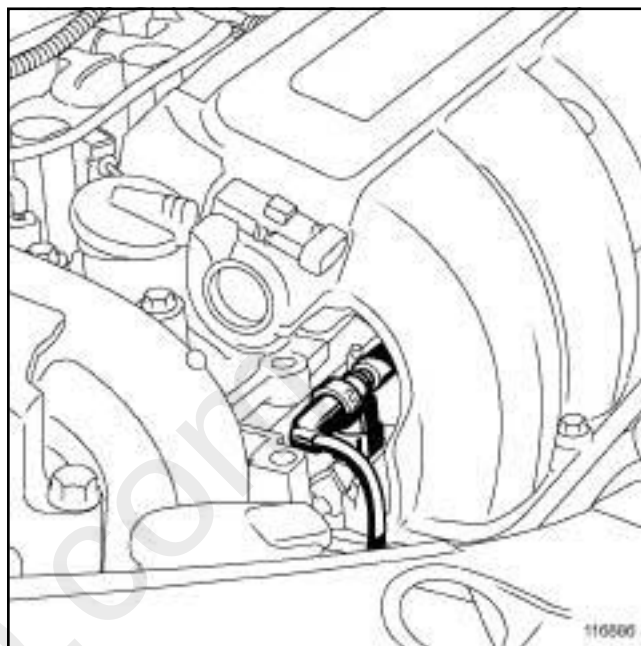

- ❑ Disconnect the fuel supply union on the (**Mot. 1311-08**).
- ❑ Disconnect:
 - the fuel supply union of the (**Mot. 1311-08**),
 - the (**Mot. 1311-08**) from the injector rail.
- ❑ Remove the flexible pipe of the (**Mot. 1311-01**) fitted with the (**Mot. 1311-08**).
- ❑ Separate the (**Mot. 1311-01**) from (**Mot. 1311-08**).
- ❑ Connect the fuel supply union on the injector rail.