

DIESEL INJECTION

Diesel injection computer: Removal - Refitting

13B

K9K


Tightening torques 		
injection computer mounting bolts		10 Nm

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Remove:
 - the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery),
 - the battery heat shield,
 - the air filter box (see **12A, Fuel mixture, Air filter unit: Removal - Refitting**, page 12A-17) .

II - REMOVAL OF PART CONCERNED

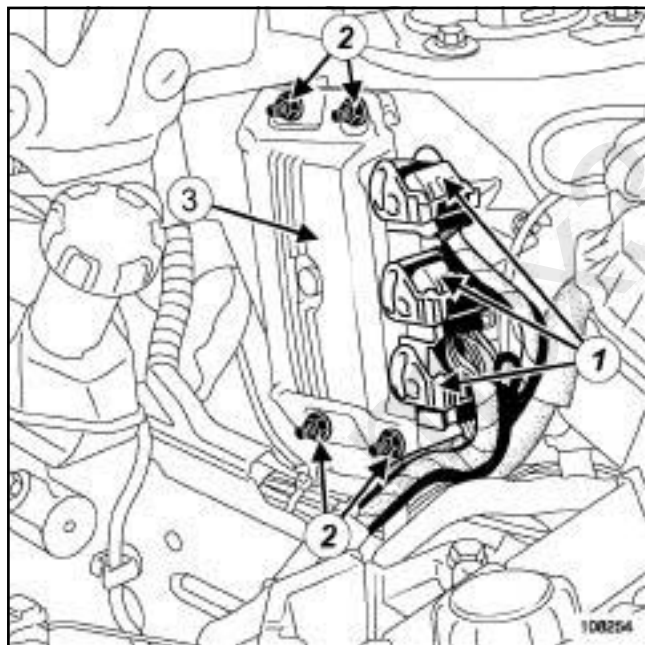

108254

- ☐ Disconnect the three connectors (1) from the injection computer.
- ☐ Remove:
 - the injection computer mounting bolts (2) ,
 - the injection computer (3) .

REFITTING

I - REFITTING PART CONCERNED

- ☐ Refit the injection computer.

- ☐ Torque tighten the injection computer mounting bolts (10 Nm).

II - FINAL OPERATION.

- ☐ Connect the injection computer connectors.
- ☐ Refit the air filter box (see **12A, Fuel mixture, Air filter unit: Removal - Refitting**, page 12A-17) .
- ☐ Refit the battery heat shield,
- ☐ Refit the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).