

Crankshaft position sensor: Removal - Refitting


K9K, and 750 or 752

REMOVAL

I - REMOVAL PREPARATION OPERATION

- ☐ Remove the air filter unit air inlet pipe.

II - OPERATION FOR REMOVAL OF PART CONCERNED

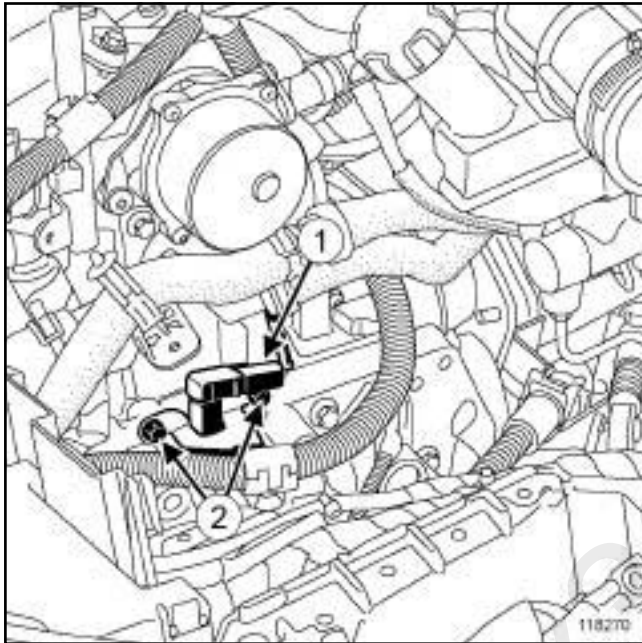

118270

- ☐ Disconnect the connector (1) from the engine speed and position sensor.
- ☐ Remove:
 - the engine speed and position sensor bolts (2) ,
 - the engine speed and position sensor.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Refit:
 - the speed and position sensor,
 - the engine speed and position sensor bolts.
- ☐ Connect the engine speed and position sensor connector.

II - FINAL OPERATION

- ☐ Refit the air filter unit air inlet pipe.