


Expansion bottle: Removal - Refitting

D4F, and 784

II - OPERATION FOR REMOVAL OF PART CONCERNED

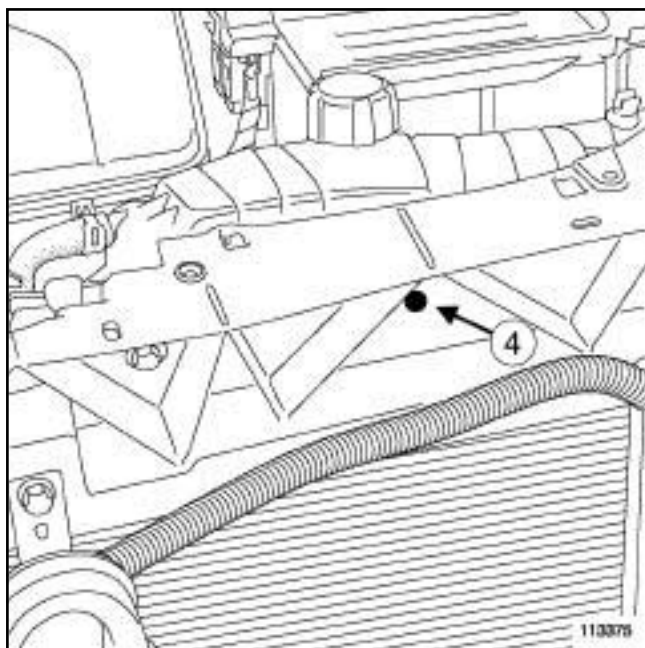

113375

- ☐ Remove clip (4) .
- ☐ Remove the expansion bottle.
- ☐ Fit the **(Ms. 583)** to the expansion bottle hoses.
- ☐ Using the **(Mot. 1448)**, remove:
 - the expansion bottle bottom hose clip,
 - the expansion bottle top hose clip.
- ☐ Disconnect:
 - the expansion bottle's bottom hose,
 - the expansion bottle top hose.
- ☐ Remove the expansion bottle.

REFITTING

I - REFITTING OPERATION FOR PART CONCERNED

- ☐ Connect:
 - the expansion bottle's top hose,
 - the expansion bottle bottom hose.
- ☐ Using the **(Mot. 1448)**, refit:
 - the clamp of the top hose of the expansion bottle,
 - the clamp of the bottom hose of the expansion bottle.
- ☐ Remove the **(Ms. 583)**.

- ☐ Refit:
 - the expansion bottle,
 - the expansion bottle clip.

II - FINAL OPERATION.

- ☐ Clip the fuse board onto the battery tray.
- ☐ Position the fuse board wiring harness.
- ☐ Refit the fuse board wiring harness nut.
- ☐ Clip the **30 A** fuse connector onto the fuse board.
- ☐ Refit:
 - the **30 A** fuse,
 - the fuse board mounting cover,
 - the air filter unit air inlet pipe.
- ☐ Top-up the coolant level in the expansion bottle.
- ☐ Refit:
 - the front bumper (see **Front bumper: Removal - Refitting**) (MR 393, 55A, Exterior protection),
 - the engine undertray.
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).