

Fuel tank: Removal - Refitting

D4F or F4R or K4J or K4M or K9K or M4R – S85

- ☐ Refit the rear bench seat.

S85

- ☐ Refit the rear loading trim (see **Rear loading trim: Removal - Refitting**) (71A, Body internal trim).
- ☐ Connect the battery (see **Battery: Removal - Refitting**) (80A, Battery).

TANK

Filler neck: Removal - Refitting

19C

D4F or F4R or K4J or K4M or K9K or M4R

Tightening torques

filler neck earth bolt	21 Nm
------------------------	-------

IMPORTANT

During this operation, be sure to:

- refrain from smoking or bringing red hot objects close to the working area,
- be careful of fuel splashes when disconnecting the union.

IMPORTANT

Wear goggles with side protectors for this operation.

IMPORTANT

Wear latex gloves during the operation.

WARNING

To prevent impurities from entering the circuit, plugs must be fitted to the openings of all the fuel circuit components exposed to the open air.

WARNING


To avoid any corrosion or damage, protect the areas on which fuel is likely to run.

REMOVAL

I - REMOVAL PREPARATION OPERATION


- ☐ Drain the tank (see **19C, Tank, Fuel tank: Draining**, page **19C-8**).
- ☐ Position the vehicle on a two-post lift (see **Vehicle: Towing and lifting**) (MR 392, 02, Lifting equipment).
- ☐ Disconnect the battery (see **Battery: Removal - Refitting**) (MR 392, 80A, Battery).
- ☐ Remove:
 - the rear right-hand wheel,
 - the rear right-hand wheel arch liner.

II - OPERATION FOR REMOVAL OF PART CONCERNED

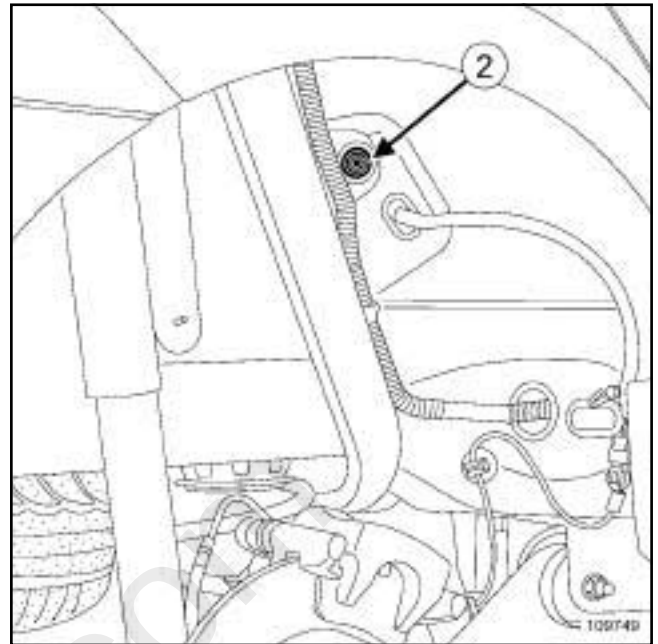

109749

- ☐ Remove the earth bolt (2) from the filler neck.

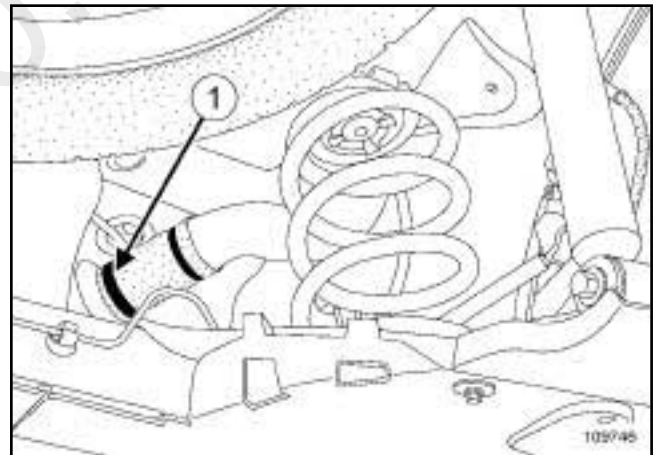

109746

- ☐ Disconnect the anti-return pipe.
- ☐ Remove the filler pipe clip (1).