

TANK
Fuel level sensor: Check

19C

K9K

Value between the termi- nals 2 and 4 (Ω)	Capacity	Height H (mm $\pm$ 6 mm)
55 $\pm$ 11	full tank	upper stop
110 $\pm$ 23	tank 3/4 full	144
164 $\pm$ 23	tank 1/2 full	112
230 $\pm$ 23	tank 1/4 full	73
290 $\pm$ 24	reserve	39
317 $\pm$ 7	tank empty	lower stop

Check that the resistance varies when the float is moved.

Place the sender unit on a flat surface.

H is the height between the sender unit float pivot and the flat surface.