

K9K engine

Contents

Page

10A	ENGINE AND LOWER ENGINE ASSEMBLY	10A	ENGINE AND LOWER ENGINE ASSEMBLY
	Engine: Specifications	10A-1	
	Engine: Precautions for repair	10A-4	Piston base cooling jet: Removal 10A-207
	Engine: Parts and consumables for the repair work	10A-14	Lower engine: Cleaning 10A-209
	Upper engine: Tightening torque	10A-15	Lower engine: Check 10A-211
	Lower engine: Tightening torque	10A-20	Piston base cooling jet: Refitting 10A-224
	Diesel injection: Tightening torque	10A-23	Running gear Refitting 10A-227
	Accessories belt: Tightening torque	10A-26	Cylinder block: Refitting 10A-239
	Upper engine: Specifications	10A-28	Timing - cylinder head: Refitting 10A-280
	Engine peripherals: Specifications	10A-36	Accessories belt: Refitting 10A-326
	Standard replacement	10A-46	Engine: Refitting 10A-329
	Special tooling	10A-47	Timing belt: Removal 10A-336
	Equipment	10A-65	Timing belts: Refitting 10A-351
	Engine: Dismantling	10A-84	
	Accessories belt: Removal	10A-89	
	Timing - cylinder head: Removal	10A-90	
	Cylinder head: Dismantling	10A-113	
	Upper engine: Cleaning	10A-129	
	Upper engine: Checking	10A-135	
	Cylinder head: Refitting	10A-144	
	Cylinder block: Dismantling	10A-192	
	Running gear: Removal	10A-204	