

the difference between T1 and T2 must be less than or equal to 2°C.

Note:



If one of these two conditions is not met, then the air conditioning system is not working properly. Should this be the case, refer to the fault finding procedure for the air conditioning system for the vehicle concerned.



[Repair-30x02x02-01x58-1-9-1.xml](#)



XSL version : 3.02 du 22/07/11

mcx30.com

AIRCONDITIONING COMPUTER: REMOVAL-REFITTING



Note, one or more warnings are present in this procedure



Equipment required

Diagnostic tool

WARNING



To avoid all risk of damage to the systems, apply the safety and cleanliness instructions and operation recommendations before carrying out any repair:



(see 62A, Air conditioning, Air conditioning: Precautions for the repair) ,



Vehicle: Precautions for the repair .

Locations and specifications (tightening torques, parts to always be replaced, etc.)Passenger compartment heating and ventilation assembly: Exploded view .

REMOVAL

1. REMOVAL PREPARATION OPERATION



Disconnect the batteryBattery: Removal - Refitting .



Remove the gloveboxDashboard assembly: Exploded view .

2. REMOVAL OPERATION



Disconnect the connectors from the air conditioning computer.