



Unclip the air conditioning computer from its support [Passenger compartment heating and ventilation assembly: Exploded view](#) .

REFITTING

1. REFITTING OPERATION



Refit the air conditioning computer [Passenger compartment heating and ventilation assembly: Exploded view](#) .



Connect the air conditioning computer connectors.

2. FINAL OPERATION



Proceed in the reverse order to removal.



Apply the after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :
-Computer concerned by the After repair procedure:

"Air conditioning computer."



Repair-30x02x02x26-01x37-1-7-1.xml



XSL version : 3.02 du 22/07/11

AIR CONDITIONING: PARTS AND CONSUMABLES FOR THE REPAIR

To find out the oil part numbers [Vehicle: Parts and consumables for the repair](#)

TABLE OF VEHICLE REFRIGERANT CAPACITIES ACCORDING TO THEIR ENGINES AND VARIOUS FEATURES.

Engine	Refrigerant capacity (g)	Type of compressor	Type of oil	Quantity of oil (ml)
D4F	430 ± 35	Valeo VCS-14EC	PAG 488	120 ± 10
H4B				
H5F				
M5M				100 ± 10
K9K				

TABLE OF QUANTITIES OF OIL TO ADD WHEN REPLACING COMPONENTS: