

 Unclip the air filter unit cover at(1) .



Remove:



the air filter unit cover(2) ,



the air filter.

## REFITTING

### 1. REFITTING PREPARATION OPERATION



Clean the air filter housing.

### 2. REFITTING OPERATION



#### CAUTION

If the air filter is fitted incorrectly in the air filter unit, unfiltered air may enter the engine.



Proceed in the reverse order to removal.



Repair-11x01x01-01x37-1-87-1.xml



# AIR FILTER: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



## REMOVAL

### 1. REMOVAL OPERATION

