

 Unclip the air filter unit cover at(1) .



Remove:



the air filter unit cover(2) ,



the air filter.

REFITTING

1. REFITTING PREPARATION OPERATION



Clean the air filter housing.

2. REFITTING OPERATION



CAUTION

If the air filter is fitted incorrectly in the air filter unit, unfiltered air may enter the engine.



Proceed in the reverse order to removal.



Repair-11x01x01-01x37-1-87-1.xml



AIR FILTER UNIT: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts to always be replaced, etc.)[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Disconnect the air filter unit air inlet pipe[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) :
 - from the front end panel,
 - from the air filter unit.
- Remove the air filter unit air inlet pipe[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .
- Remove the battery[Battery: Removal - Refitting](#) .

2. REMOVAL OPERATION

- Loosen the air filter unit air outlet pipe clip[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .
- Disconnect the air filter unit air outlet pipe[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .
- Remove [\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) :
 - the air filter unit bolt,
 - the air filter unit.

1- IN THE EVENT OF REPLACEMENT

- Remove the air filter[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .

REFITTING

1. REFITTING PREPARATION OPERATION