



Refit the air filter([see 12A, Fuel mixture, Air inlet assembly: Exploded view](#)) .

2. REFITTING OPERATION



Proceed in the reverse order to removal.



Repair-11x01x01x02-01x37-1-119-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

AIR FILTER UNIT: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts to always be replaced, etc.)[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

■ Disconnect the air filter unit air inlet pipe[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) :

- from the front end panel,
- from the air filter unit.

■ Remove the air filter unit air inlet pipe[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .



Remove the battery[Battery: Removal - Refitting](#) .

2. REMOVAL OPERATION



Loosen the air filter unit air outlet pipe clip[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .



Disconnect the air filter unit air outlet pipe[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .



Remove [\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) :



the air filter unit bolt,



the air filter unit.

1- IN THE EVENT OF REPLACEMENT



Remove the air filter[\(see 12A, Fuel mixture, Air inlet assembly: Exploded view\)](#) .