

31	Air inlet pipe nut	
32	Fuel pressure control hose clip	
33	Fuel pressure control hose clip	
34	Fuel pressure control hose	
35	Fuel injection rail	Petrol injection
36	Air pressure hose for high pressure discharge valve diaphragm	
37	Air duct link between air-air cooler outlet duct and high pressure discharge valve	
38	High pressure discharge valve	
39	High pressure discharge valve clamp	
40	High pressure discharge duct	
41	Air filter slider	
42	Air filter	(see 12A, Fuel mixture, Air filter: Removal - Refitting)




Repair-11x01x10-02x50-1-8-1.xml



XSL version : 3.02 du 22/07/11

AIR INLET ASSEMBLY: EXPLODED VIEW

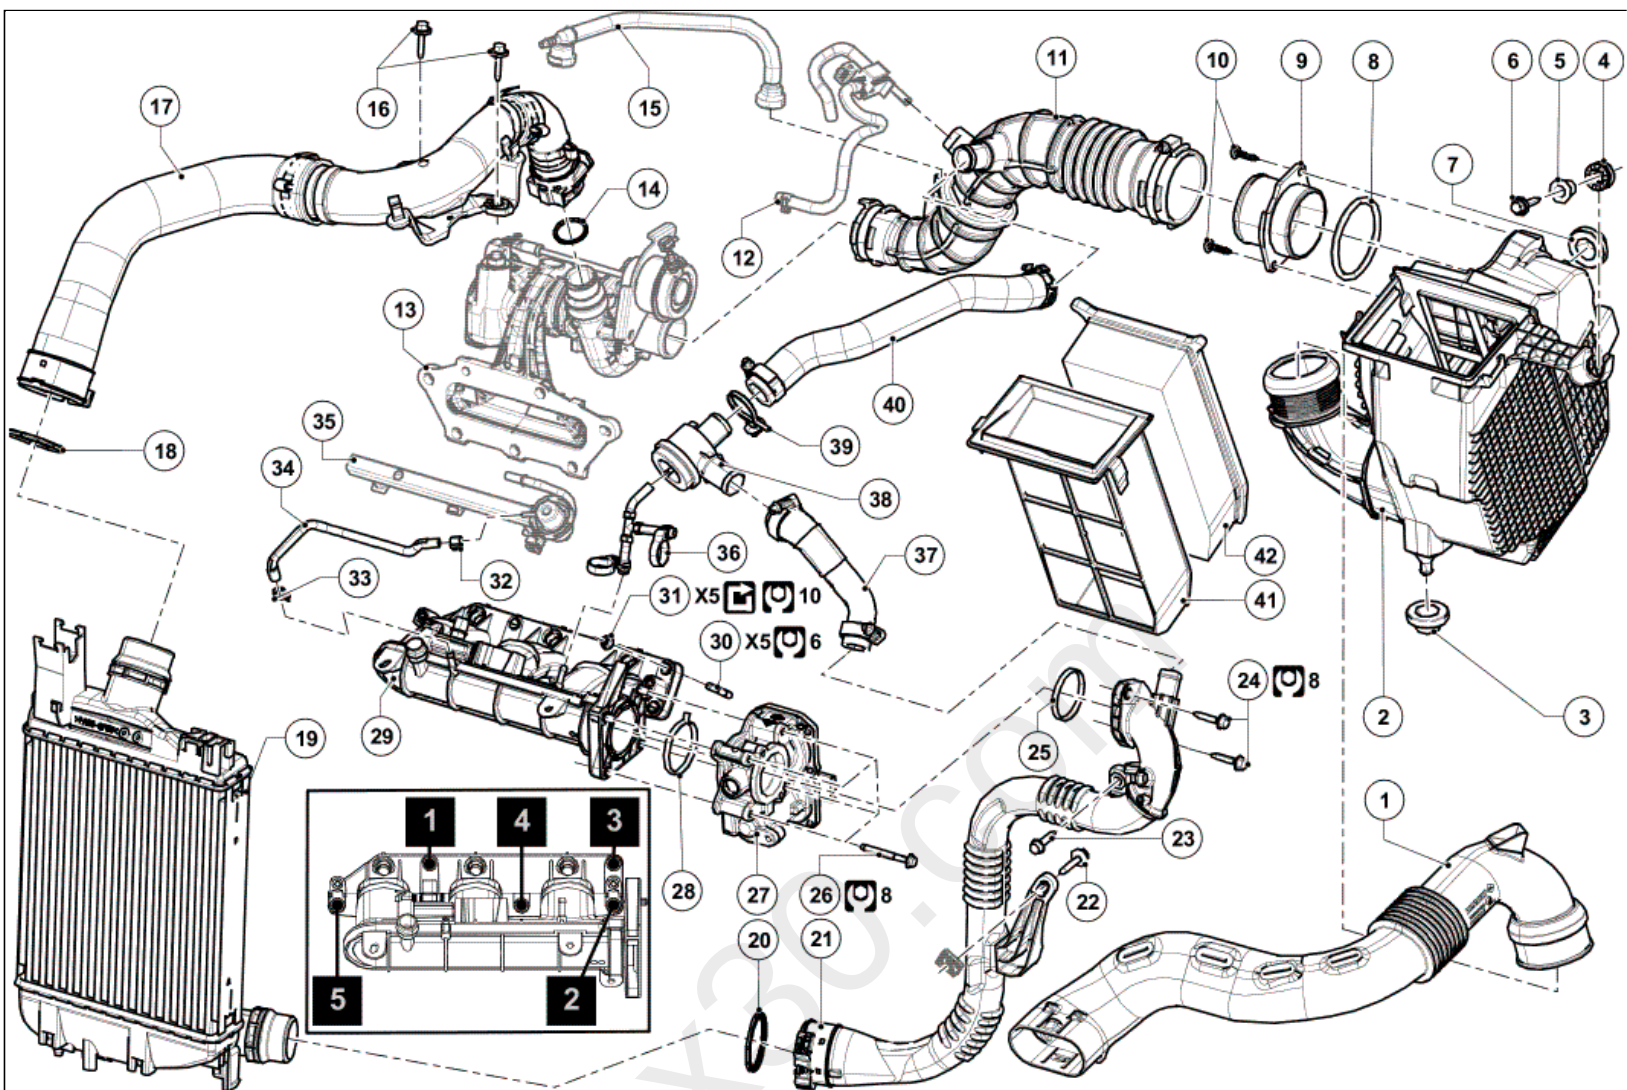

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques: [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Air inlet pipe	
2	Air filter unit	(see 12A, Fuel mixture, Air filter unit: Removal - Refitting)
3	Air filter unit plastic stud	
4	Air filter unit plastic stud	
5	Air filter unit plastic stud	
6	Air filter unit bolt	
7	Air filter unit plastic stud	
8	Air filter unit outer link seal	
9	Air filter unit outer link	
10	Air filter unit outer link bolts	
11	Turbo-manifold inlet air duct	
12	Turbo-manifold pressure management pipe	
13	Turbo-manifold	(see 19B, Exhaust, Exhaust assembly in engine compartment: Exploded view)
14	Air-air cooler inlet duct seal, turbo-manifold side	
15	Rebreathing pipe	
16	Air-air cooler inlet duct bolts	
17	Air-air cooler inlet duct	(see 12B, Turbocharging, Intercooler air inlet pipe: Removal - Refitting)
18	Air-air cooler inlet duct seal, cooler side	
19	Air-air cooler	
20	Air-air cooler outlet duct seal, cooler side	
21	Air-air cooler outlet duct	(see 12B, Turbocharging, Intercooler air outlet pipe: Removal - Refitting)
22	Air-air cooler outlet duct bracket bolt	
23	Air-air cooler outlet duct bracket bolt	
24	Air-air cooler outlet duct bracket bolts	
25	Air-air cooler outlet duct seal, throttle valve unit side	
26	Throttle valve unit bolt	
27	Throttle valve unit	(see 12A, Fuel mixture, Throttle valve: Removal - Refitting)
28	Throttle valve unit seal on air inlet pipe	
29	Air inlet pipe	(see 12A, Fuel mixture, Inlet distributor: Removal - Refitting)
30	Air inlet pipe gudgeon	