

Torque tighten the airbag computer nuts 8 N.m.

Clip the carpet where it was cut using clips (part number: 77 01 047 751).

In the event of a replacement, apply the after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Calculateur concerné by the After repair procedure:

"Airbag computer" .

Unlock the airbag computer by applying the after repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :

-Computer concerné by the After repair procedure:

"Airbag computer" .



Repair-31x02x01x03-01x37-1-33-1.xml



XSL version : 3.02 du 22/07/11

ALTERNATOR:REMOVAL-REFITTING


Locations and specifications (tightening torques, parts always to be replaced, etc.)[Engine accessories assembly: Exploded view](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift[Vehicle: Towing and lifting](#) .
- Disconnect the battery[Battery: Removal - Refitting](#) .
- Remove:
 - the front bumper[Front bumper assembly: Exploded view](#) ,
 - the air deflectors,
 - the intercooler air inlet pipe[Air inlet assembly: Exploded view](#) ,
 - the intercooler[Air inlet assembly: Exploded view](#)
 - the accessories belt[Engine accessories assembly: Exploded view](#) .

2. REMOVAL OPERATION

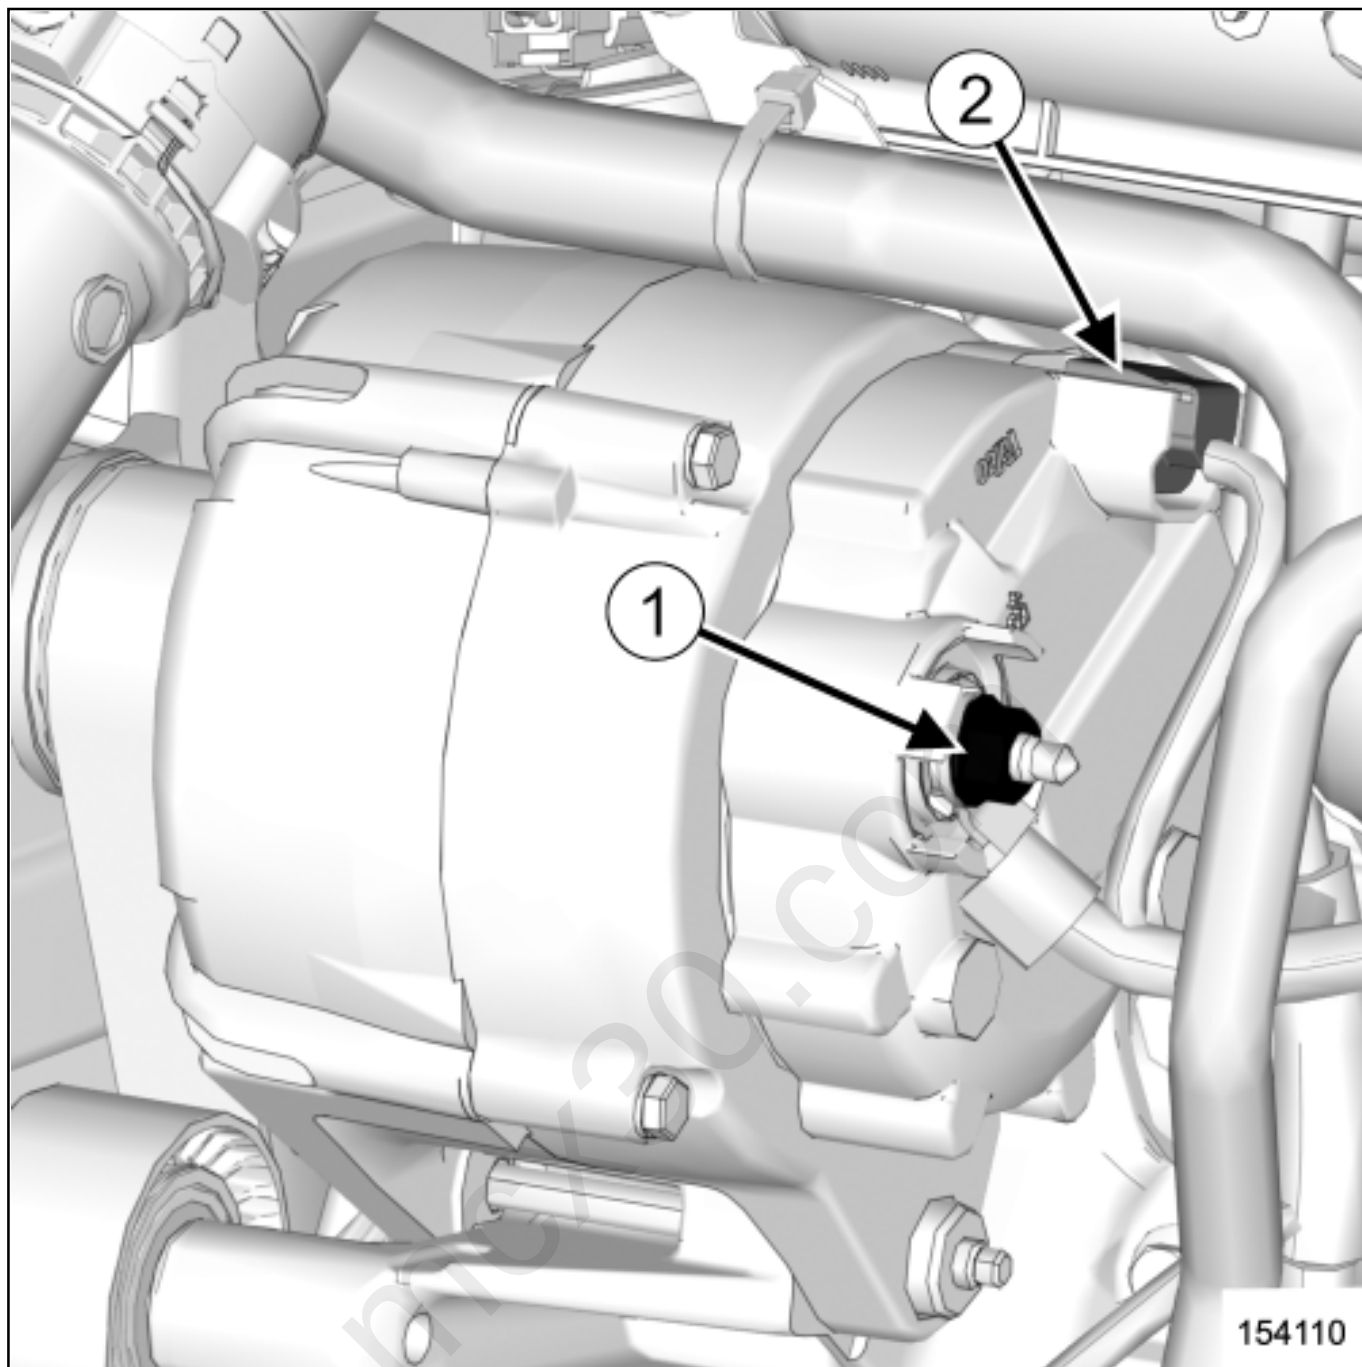

Remove the nut(1) from the alternator positive terminal.

Disconnect the alternator connector(2) .

Move aside the alternator wiring.

Remove [Engine accessories assembly: Exploded view](#) :

-
- the alternator bolts,
-
- the alternator.

REFITTING

1. REFITTING PREPARATION OPERATION

