

■
vehicle empty (without luggage, etc.).

■
Consult:

■
the front axle geometry values([see 30A, General information, Front axle assembly: Adjustment values](#)) ,

the rear axle geometry values([see 30A, General information, Rear axle assembly: Adjustment values](#)) .

■
Refer to the user manual for the geometry tester.

■
Check the geometry using the geometry tester.

■
If there is an inconsistency between the manufacturer's values and the measured values:

■
Adjust the front axle([see 30A, General information, Front axle system: Adjustment](#)) .



Repair-13x02x12-01x58-1-1-1.xml

