

"Camshaft sensor" .



Repair-11x04x05x01-01x37-1-16-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

CAMSHAFT POSITION SENSOR: REMOVAL - REFITTING

Equipment required

Diagnostic tool

Locations and specifications (tightening torques, parts always to be replaced etc.)(see **Engine and transmission assembly sensors: List and location of components**) .

Note:




This procedure deals with removing and refitting the inlet camshaft position sensor and the exhaust camshaft position sensor.

REMOVAL

1. REMOVAL PREPARATION OPERATION


1- REMOVING THE INLET CAMSHAFT POSITION SENSOR

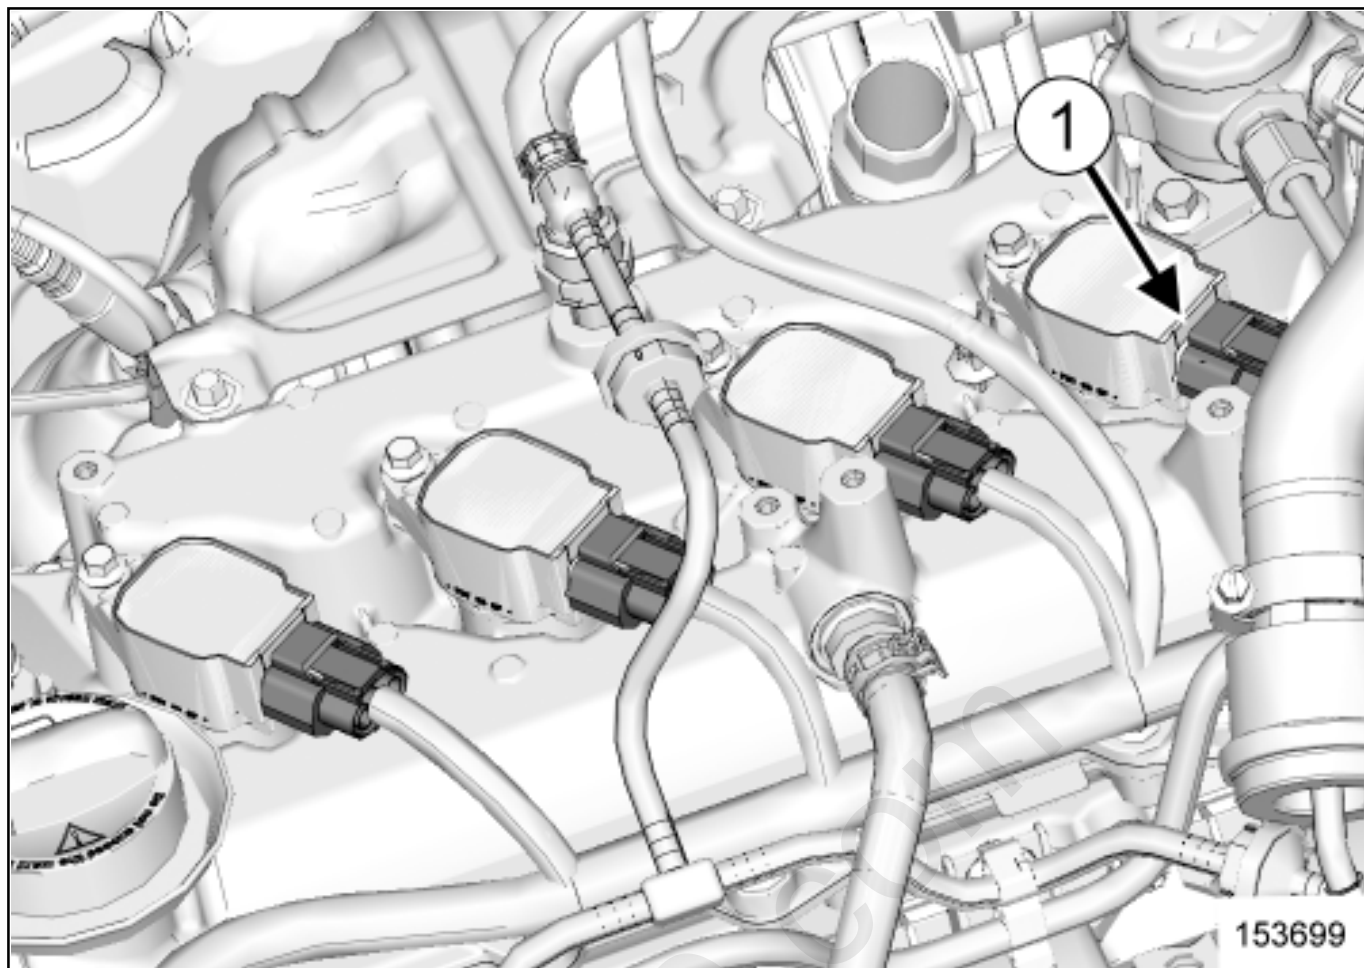

- Disconnect the ignition coil connector(1) .

2. REMOVAL OPERATION

1- REMOVING THE INLET CAMSHAFT POSITION SENSOR

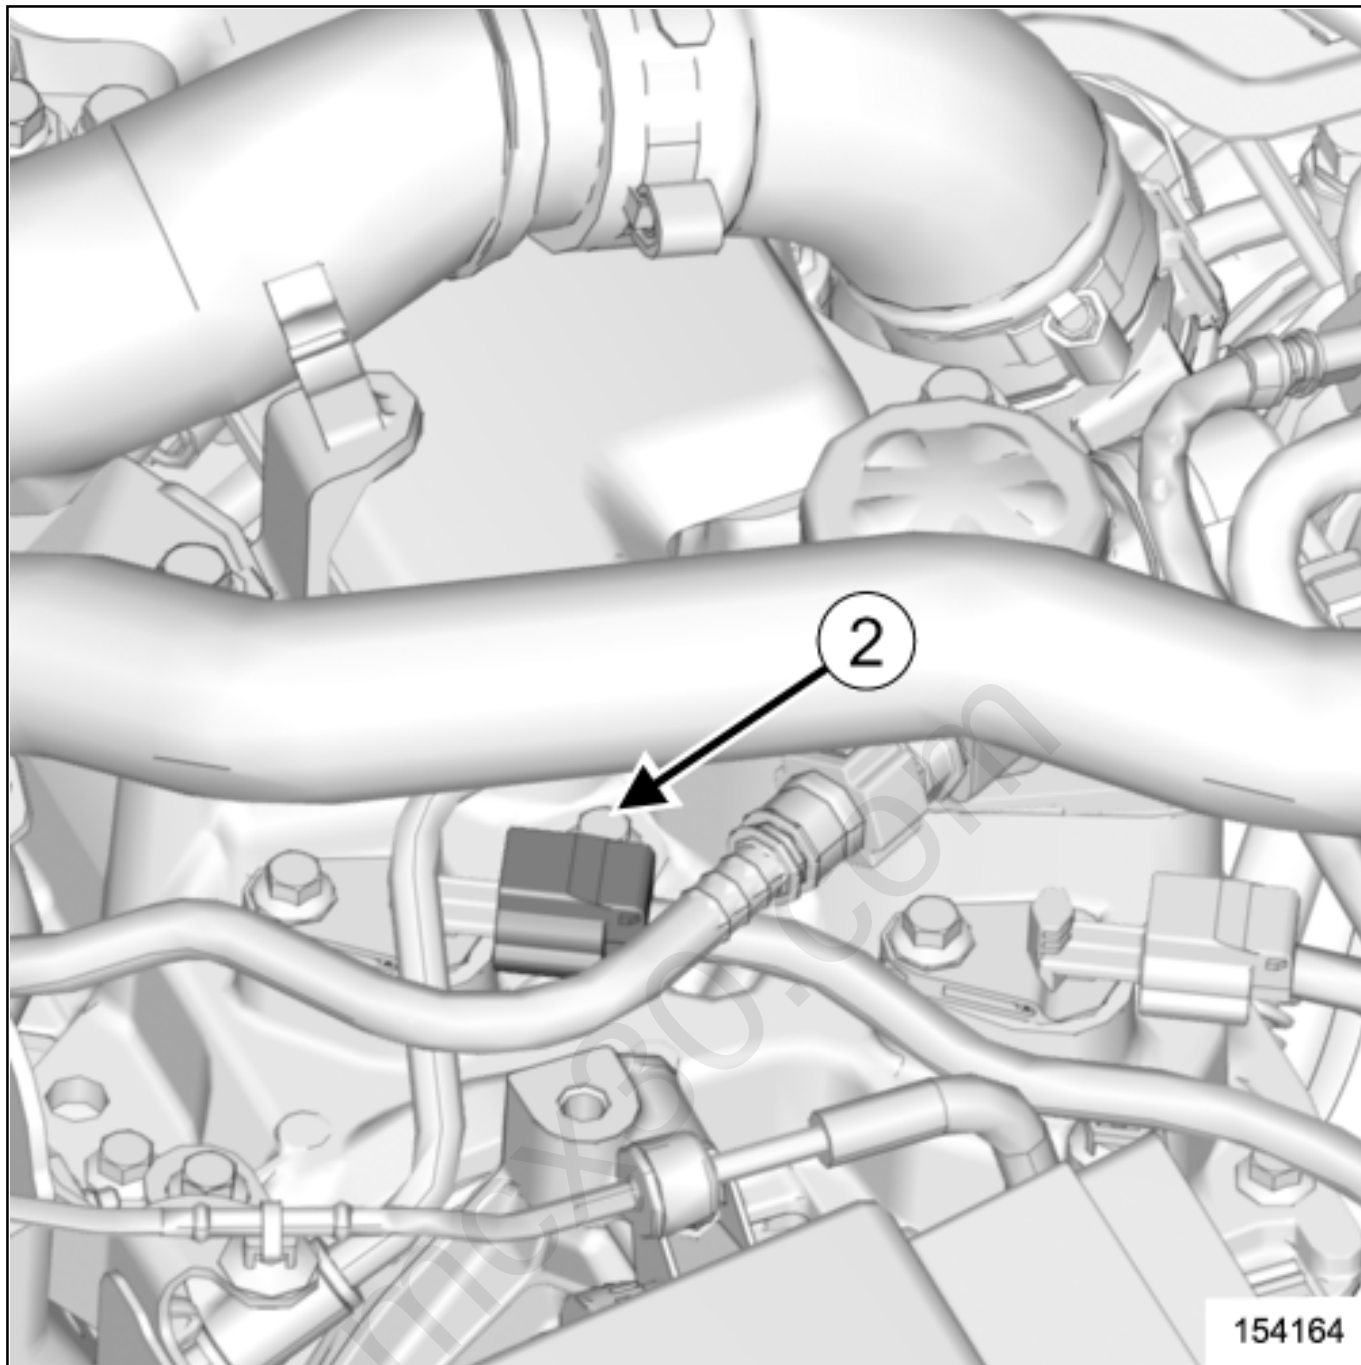


■ Disconnect the inlet camshaft position sensor connector(2) .

■ Remove:

- the inlet camshaft position sensor bolt,
- the inlet camshaft position sensor,
- the inlet camshaft position sensor seal.

2- REMOVING THE EXHAUST CAMSHAFT POSITION SENSOR

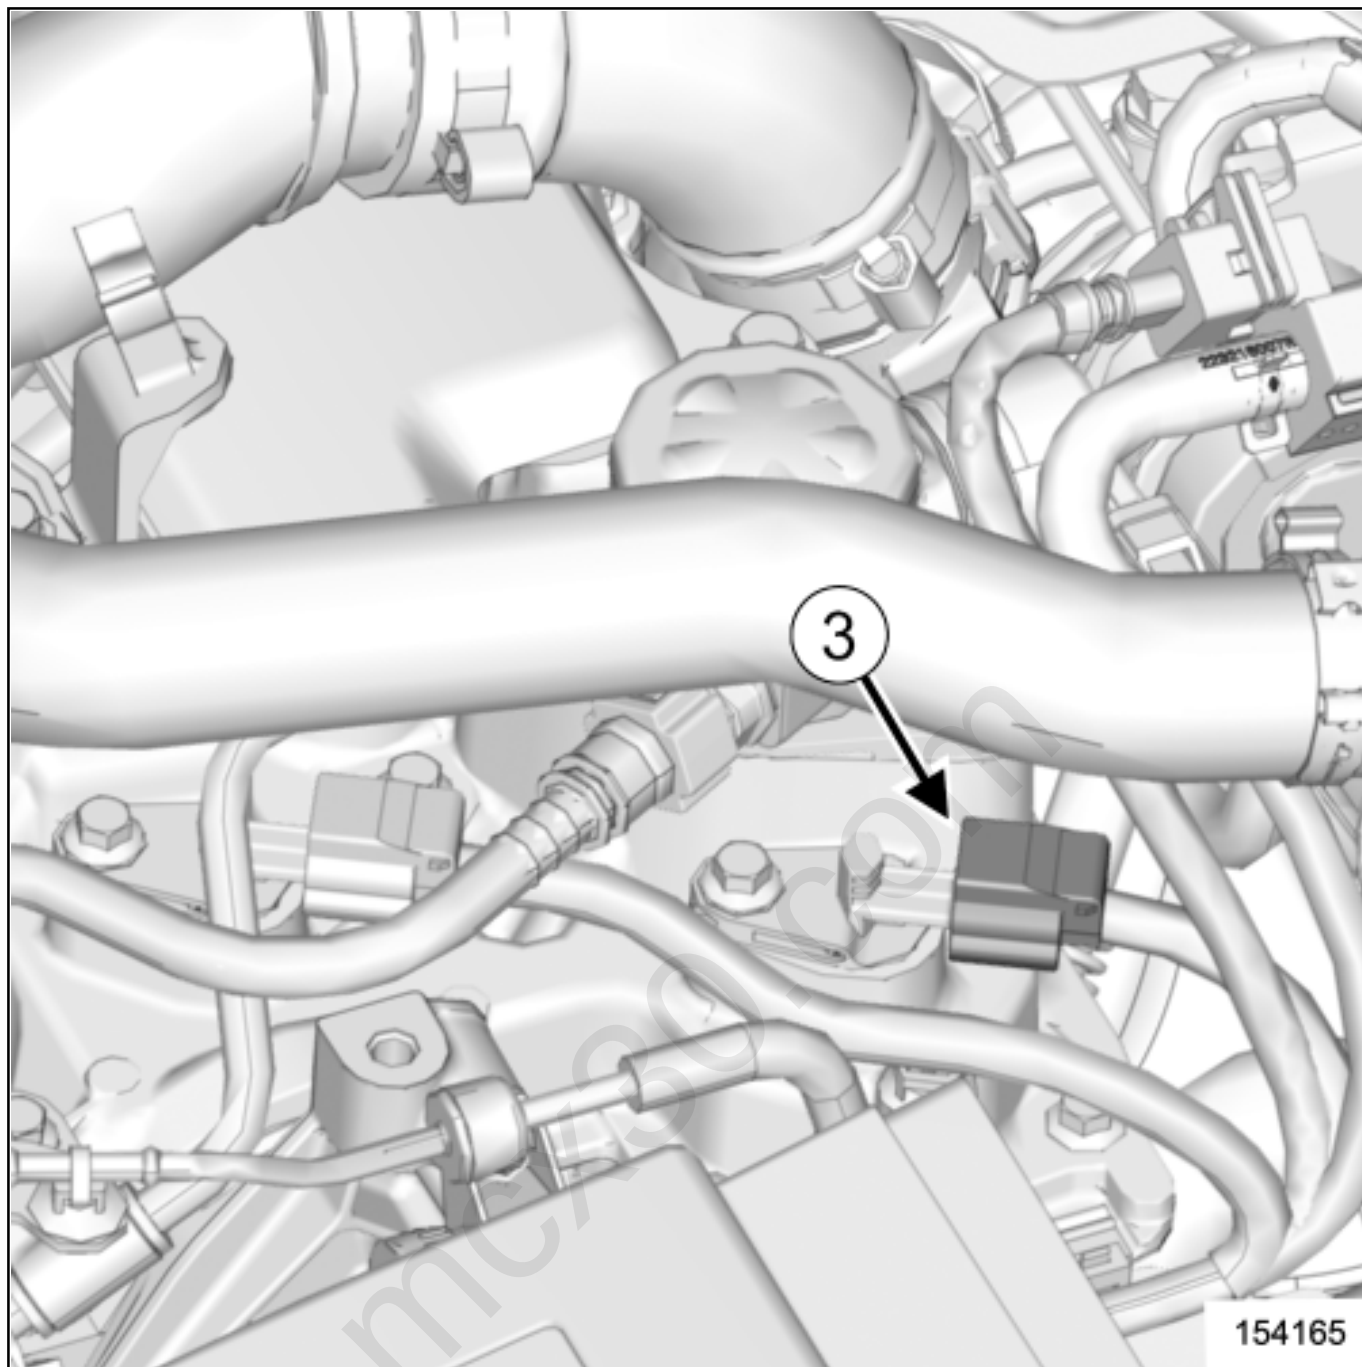

■ Disconnect the exhaust camshaft position sensor connector(3) .

■ Remove:

- the exhaust camshaft position sensor bolt,
- the exhaust camshaft position sensor,
- the exhaust camshaft position sensor seal.