

Connect:



the upstream oxygen sensor connector,



the downstream oxygen sensor connector.

Fit the exhaust pipe to one side.

Refit [\(see 19B, Exhaust, Exhaust assembly under body: Exploded view\)](#) :



the flexible pipe support bolts,



the new exhaust flange seal,



the exhaust flange nuts.

Torque tighten [\(see 19B, Exhaust, Exhaust assembly under body: Exploded view\)](#) :



the flexible pipe support bolts,



the exhaust flange nuts.

Proceed in the reverse order to removal.



Repair-10x08x02x07-01x37-2-52-1.xml



CENTRE CONSOLE: REMOVAL - REFITTING

Special tooling required


Set of trim removal levers.

Car. 1363

REMOVAL

1. REMOVAL OPERATION

- Switch off the ignition.

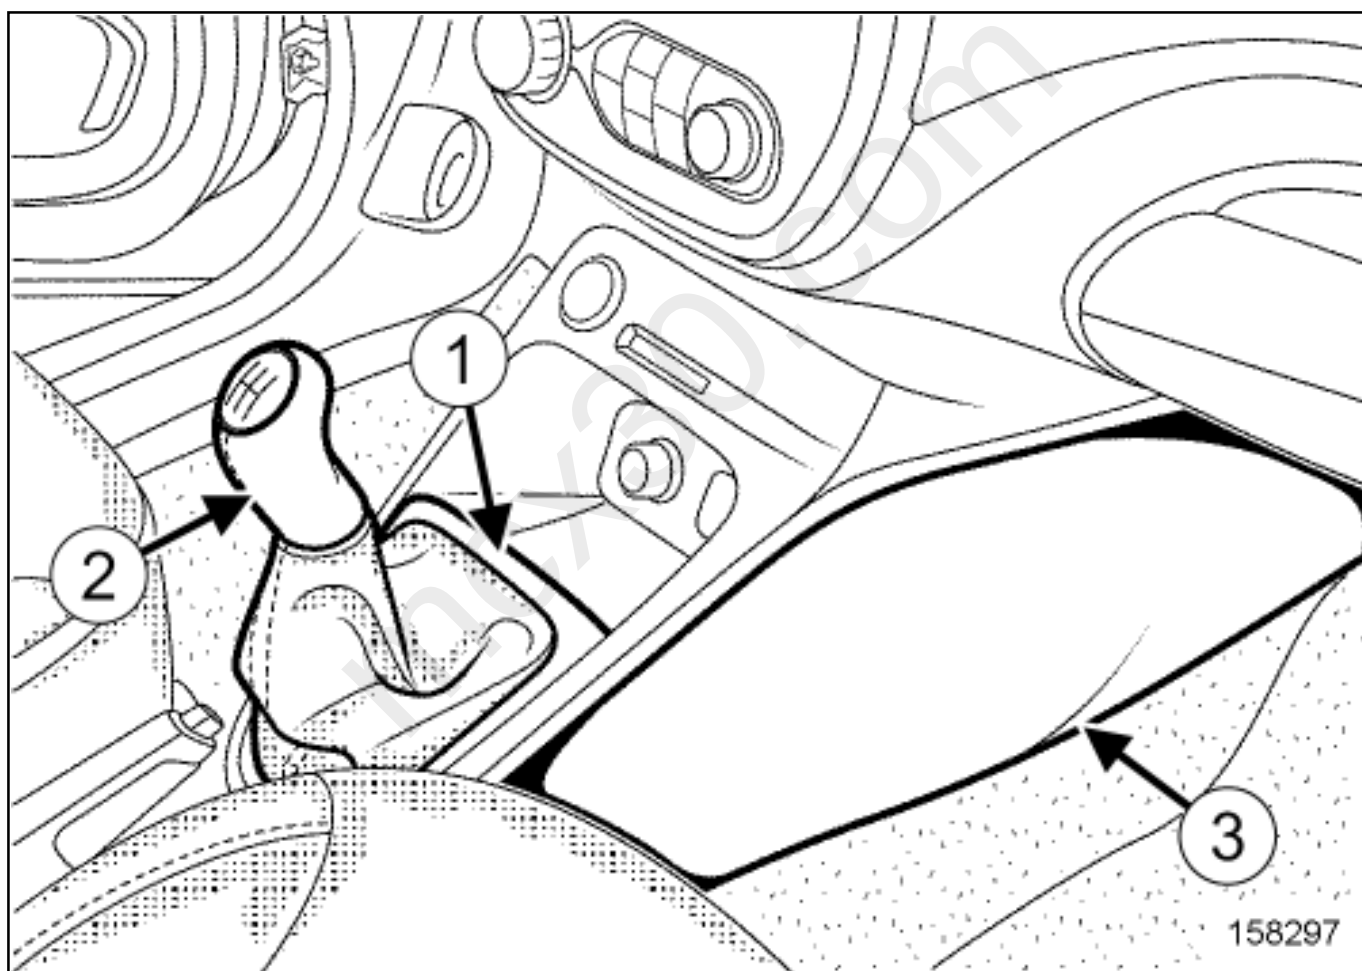


- Unclip the gear lever gaiter trim(1) .

- Remove:

the gear lever knob(2) ,

the gear lever gaiter.

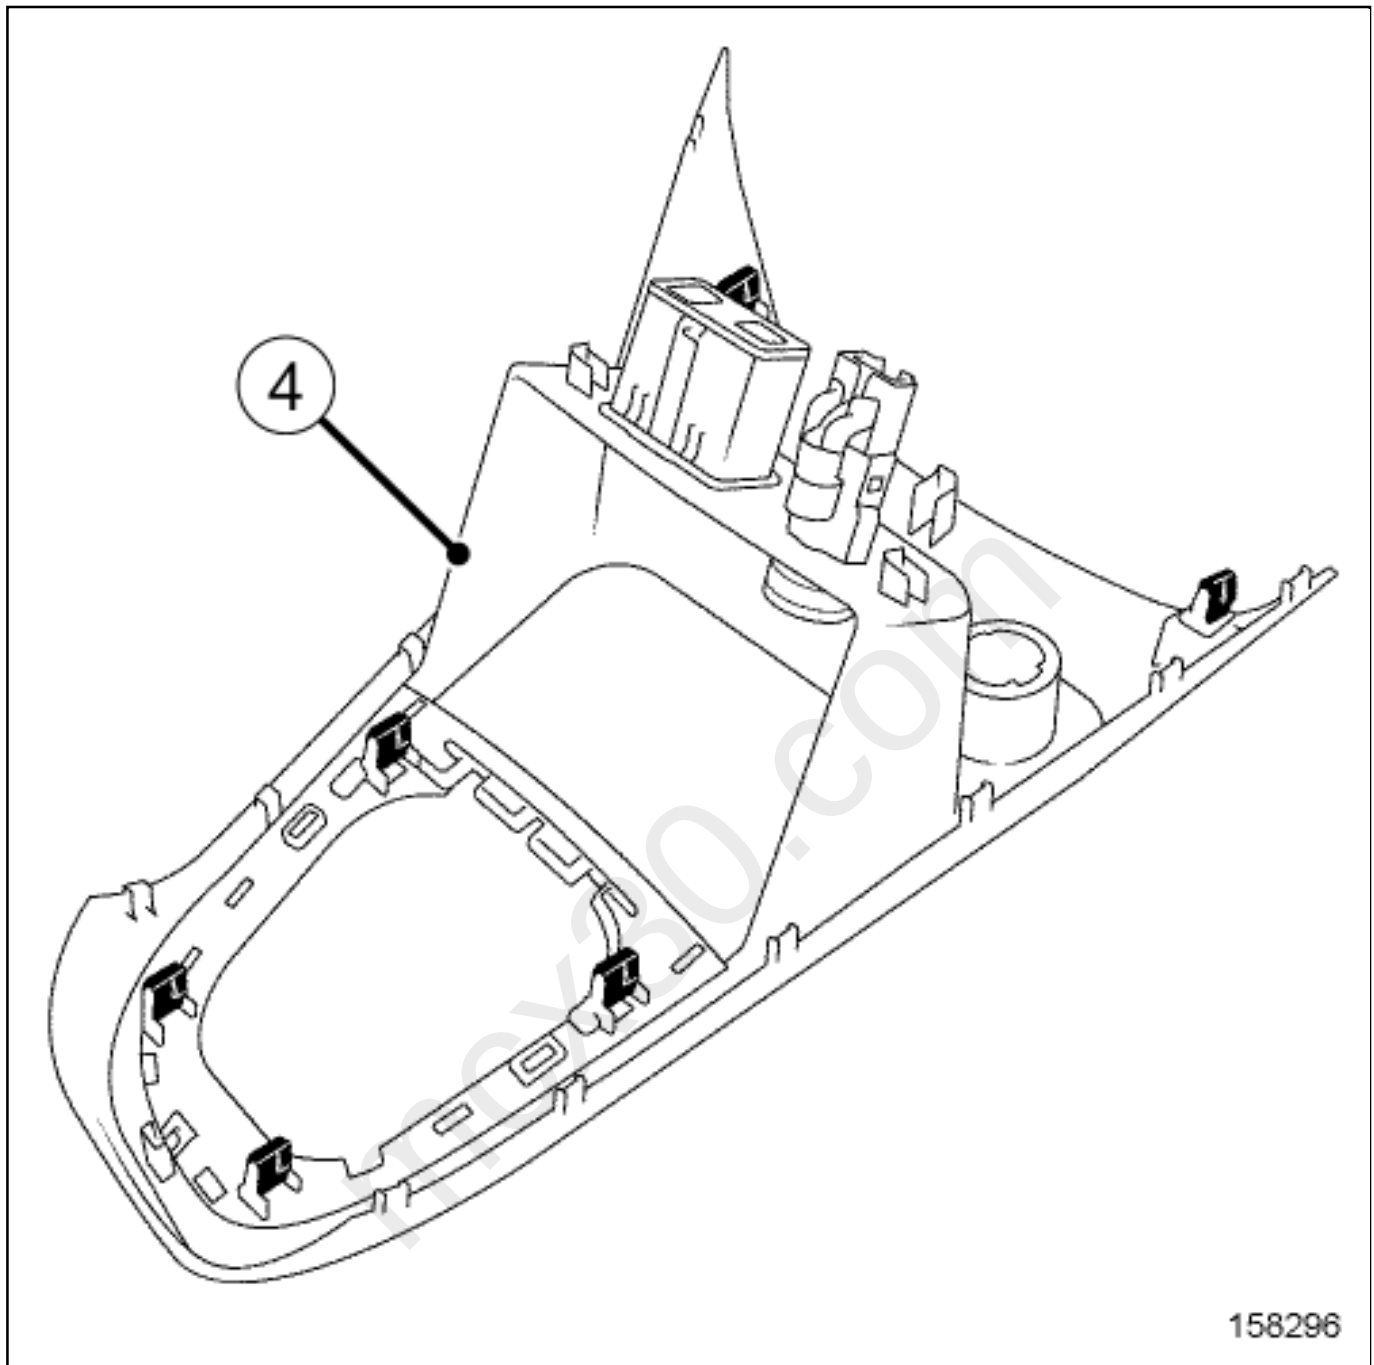


Unclip:

the upper section of the centre console(4) ,

the centre console side panels(3) using the toolSet of trim removal levers.(Car. 1363) .

Disconnect the connector of:

-
- the offset multimedia socket,
- the cigarette lighter,
- the start button.

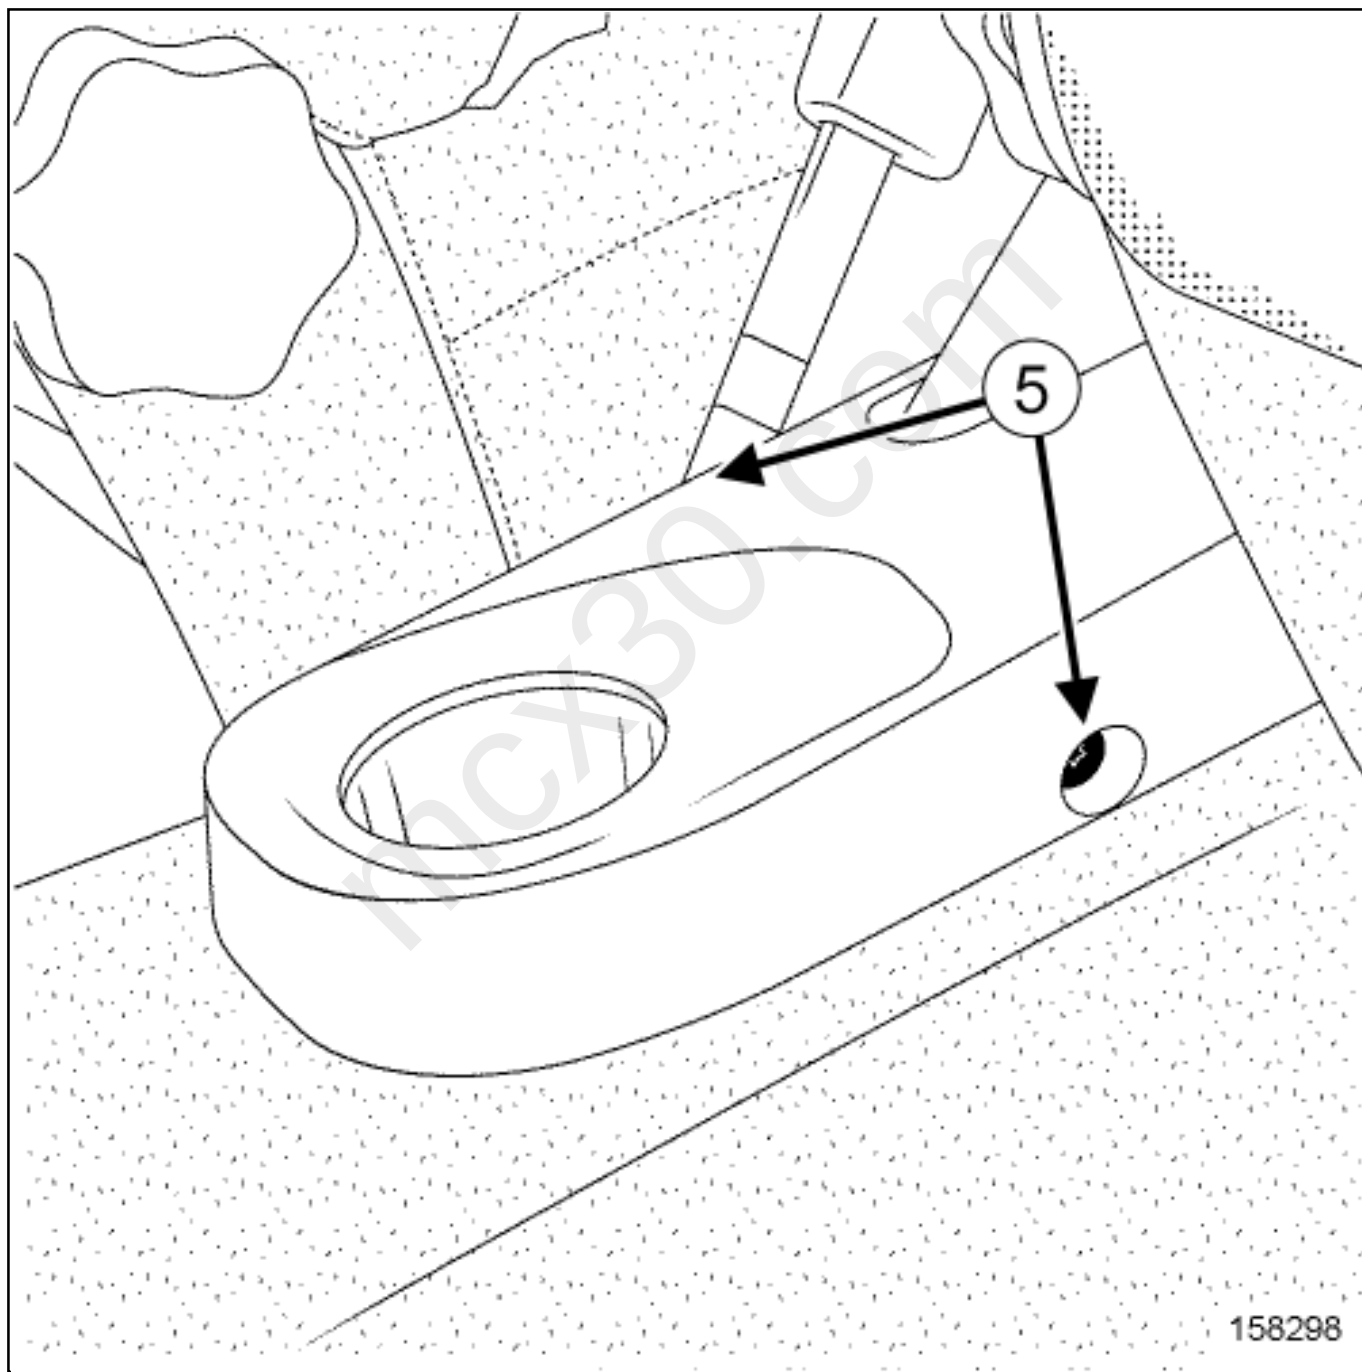

Unclip the parking brake cover.

Remove on each side the screws(5) .

Unclip the lower section of the centre console.

Disconnect:




the "Driving mode" switch,



the cruise control-speed limiter switch.


Remove the lower section of the centre console.

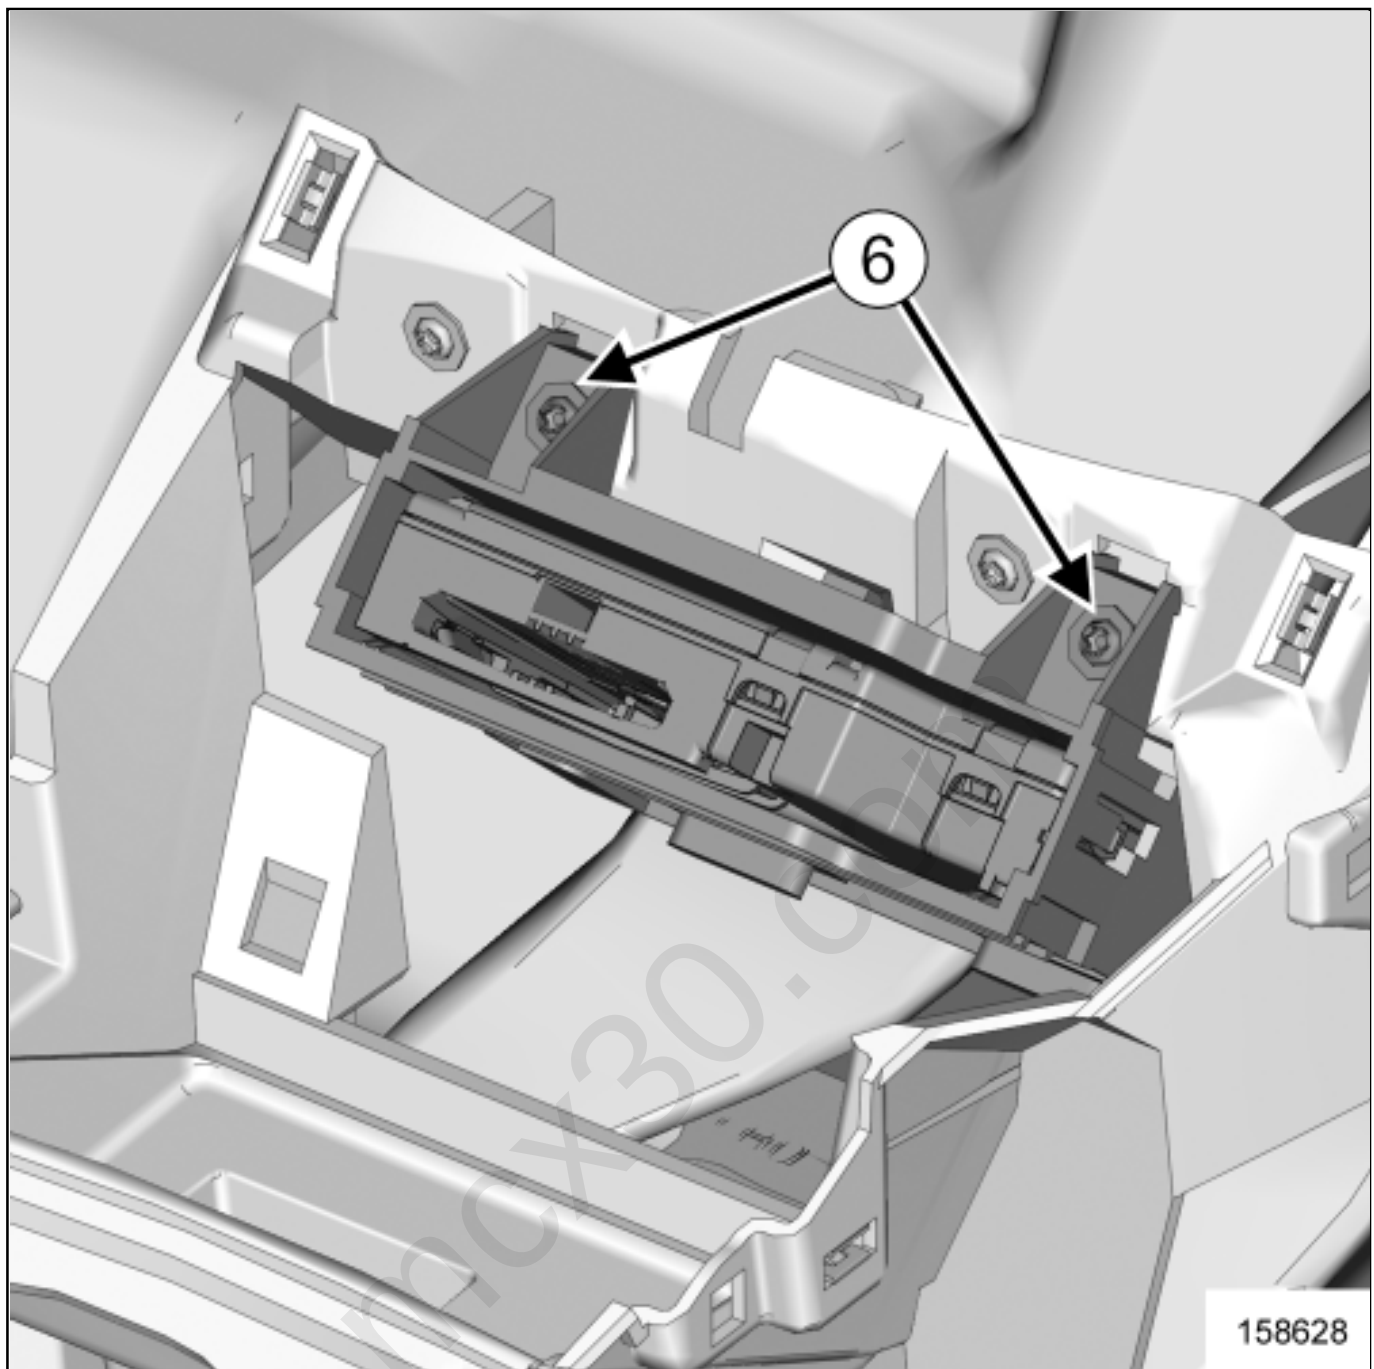


Remove the card reader support bolts(6) .

Disconnect the card reader connector.

Remove the "card reader - support" assembly.

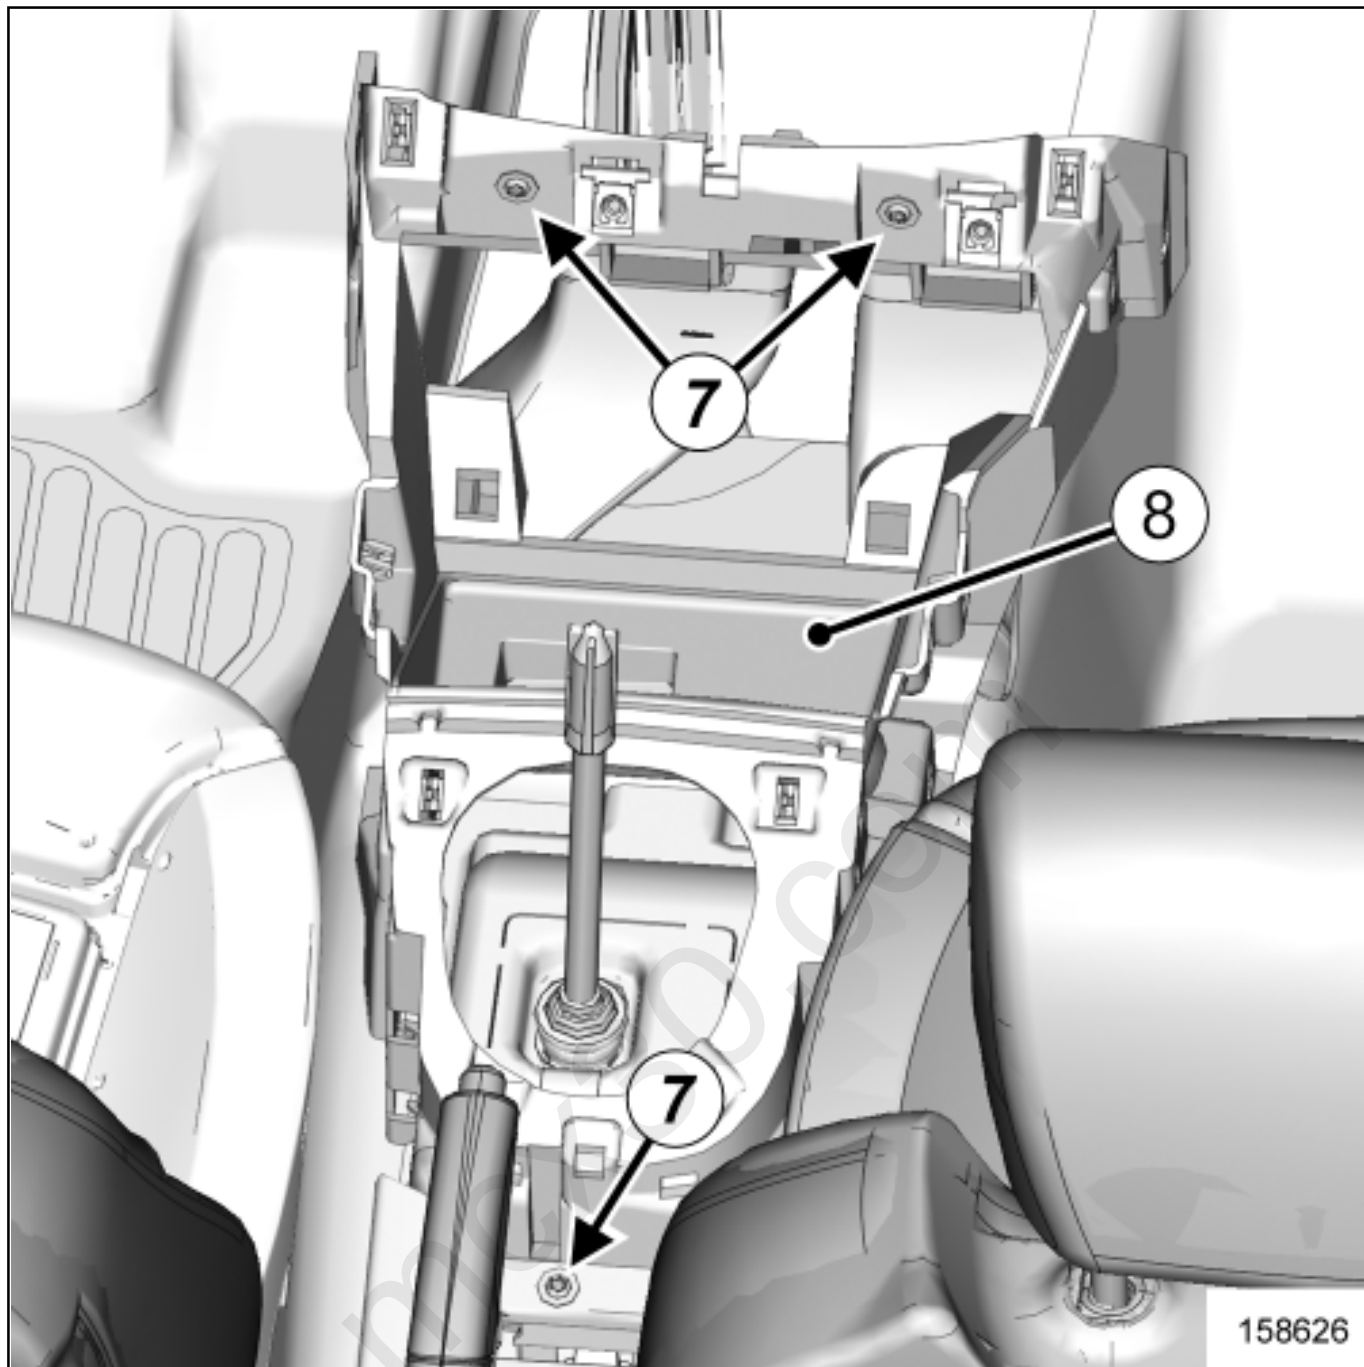

158626

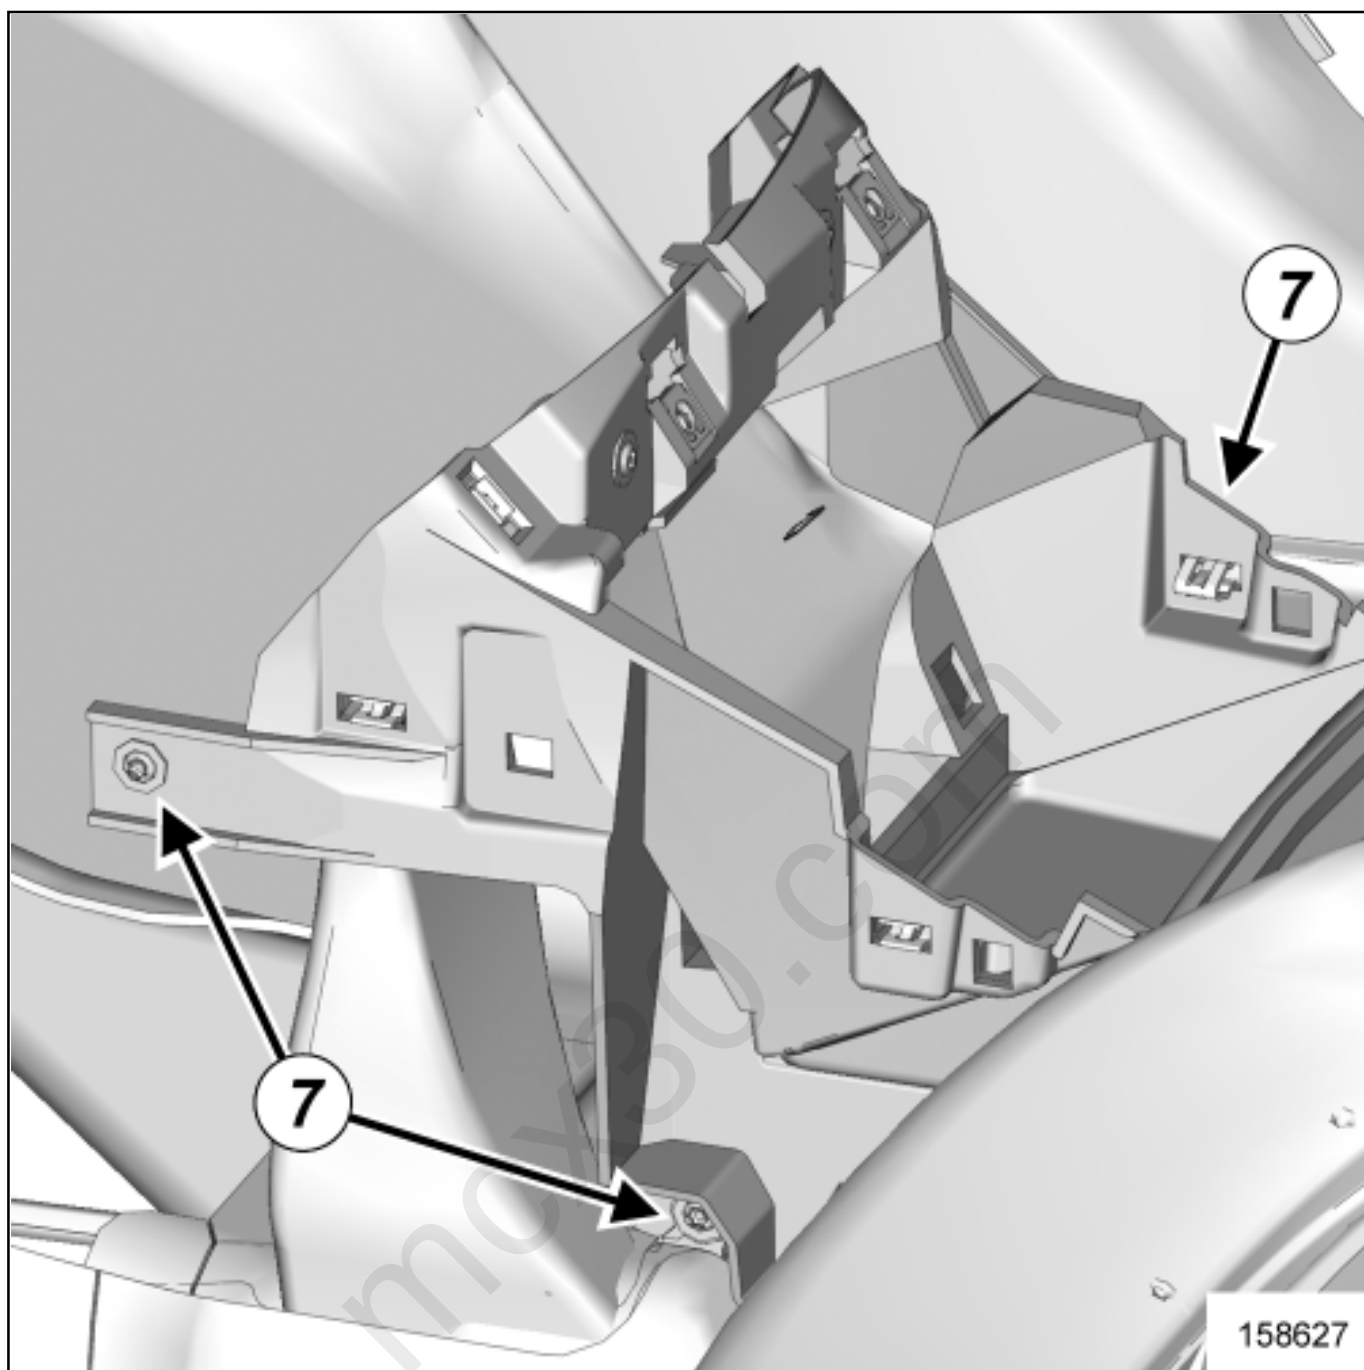

Remove:

- the centre console mounting bolts(7) ,
- the centre console mounting(8) .