



CAUTION

Do not retighten the cylinder head bolts after applying this procedure.

Refit ([see 11A, Top and front of engine, Cylinder head assembly: Exploded view](#)) :

-
- the new cylinder head gasket,
- the cylinder head,
- the new cylinder head bolts.

3. FINAL OPERATION


Proceed in the reverse order to removal.



Repair-10x02x01-01x37-1-135-1.xml



DASHBOARD ASSEMBLY: EXPLODED VIEW

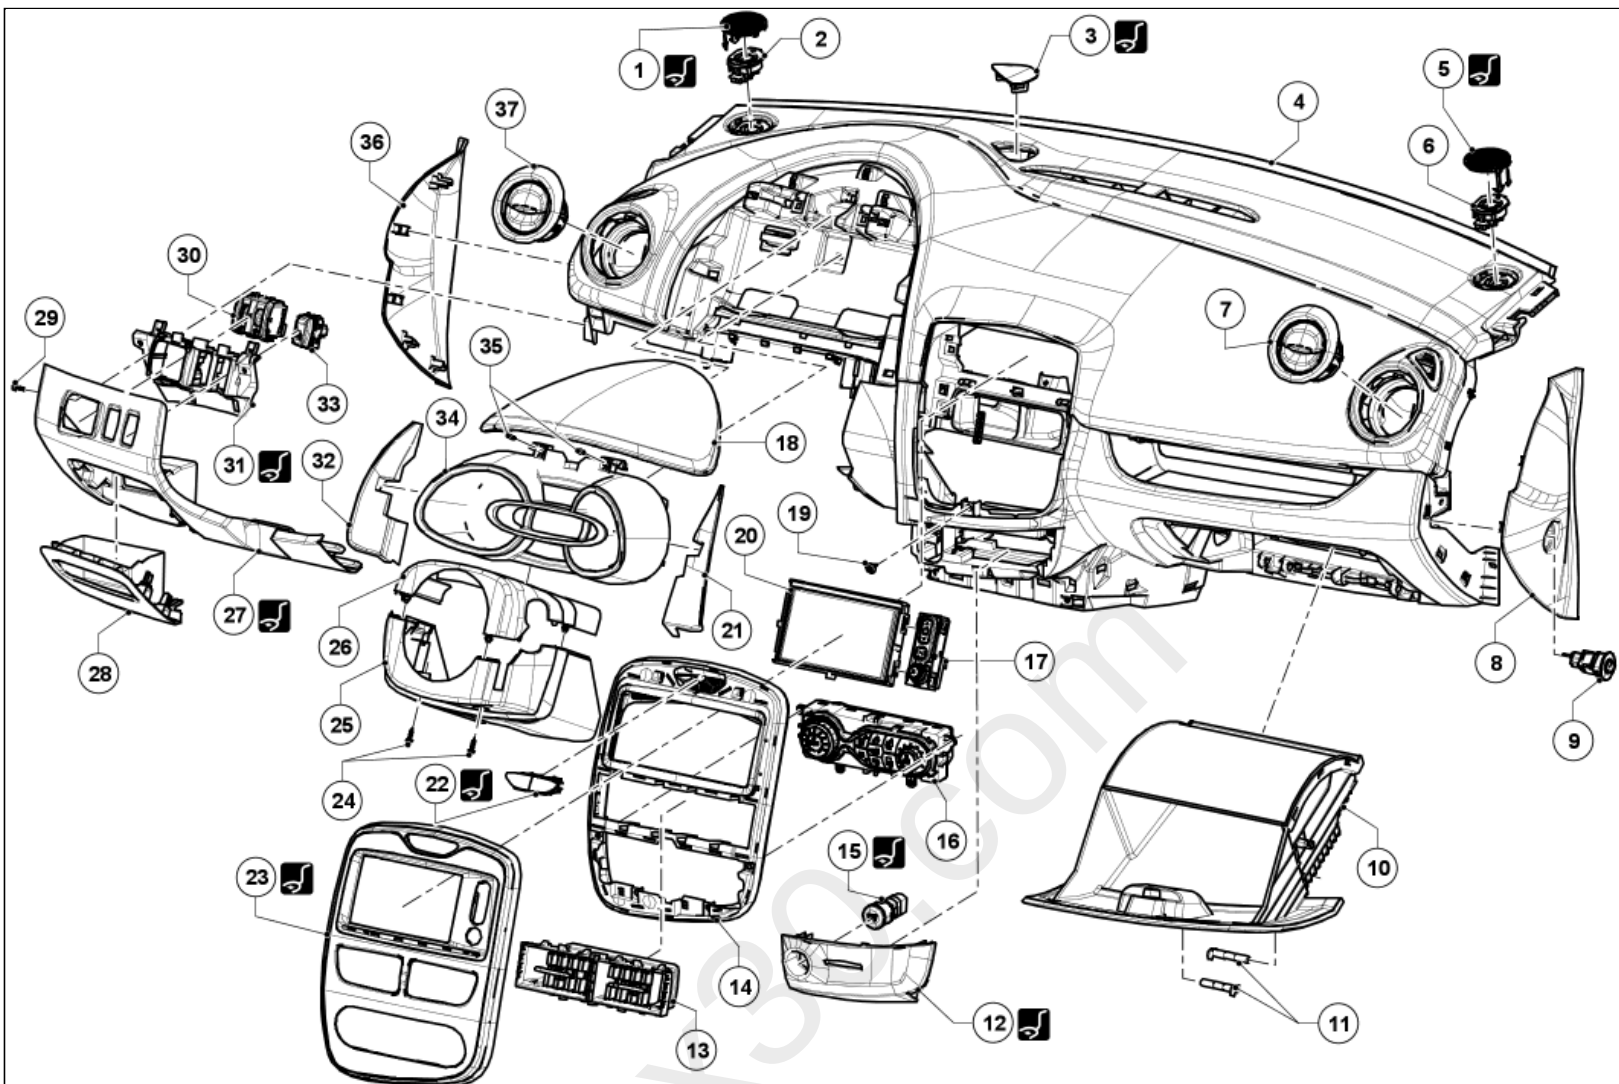

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Tweeter grille	(Car. 1363)
2	Tweeter	Radio: List and location of components
3	Dashboard cross member cover	(Car. 1363)
4	Dashboard	
5	Tweeter grille	(Car. 1363)
6	Tweeter	Radio: List and location of components
7	Dashboard air vent	
8	Right-hand dashboard side panel	
9	Airbag inhibitor switch	Passenger compartment switches : List and location of components
10	Glovebox	
11	Glovebox hinges	
12	Centre front panel lower trim	(Car. 1363)
13	Dashboard centre air vent	
14	Centre front panel support	
15	Start button	Immobiliser system: List and location of components (Car. 1363)
16	Air conditioning control panel	Passenger compartment heating and ventilation assembly: Exploded view
17	Navigation keypad	Navigation: List and location of components
18	Dashboard centre visor	
19	Dashboard screws	
20	Multifunction screen	Navigation: List and location of components
21	Instrument panel right-hand trim	
22	Switch	(Car. 1363)
23	Centre front panel trim	(Car. 1363)
24	Screws	
25	Under steering wheel shell	
26	Under steering wheel shell	
27	Dashoard lower trim	(Car. 1363)
28	Fuse flap	
29	Screws	