

30	Switch	
31	Switch plate	(Car. 1363)
32	Instrument panel left-hand trim	
33	Switch	
34	Instrument panel	Instrument panel: Removal - Refitting
35	Instrument panel upper screws	
36	Left-hand dashboard side panel	
37	Dashboard air vent	



Repair-50x08x02x01-02x50-1-4-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

DASHBOARD CROSS MEMBER: REMOVAL - REFITTING

Location and specifications (tightening torques, parts always to be replaced, etc.) [Dashboard assembly: Exploded view](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION

 Disconnect the battery [Battery: Removal - Refitting](#) .

 Remove:

- the front door seals [Interior body side trim assembly: Exploded view](#) ,
- the front door [Front opening element: Removal - Refitting](#) ,
- the windscreen pillar trims [Interior body side trim assembly: Exploded view](#) ,
-
- the right-hand dashboard side panel [Dashboard assembly: Exploded view](#) ,
-
- the glovebox [Dashboard assembly: Exploded view](#) ,
-
- the airbag inhibitor switch [Passenger compartment switches : List and location of components](#) ,
-
- the centre console [Centre console: Removal - Refitting](#) ,
-
- the card reader [Immobiliser system: List and location of components](#) ,

 Remove:

-
- the centre front panel [Dashboard assembly: Exploded view](#) ,
-
- the air conditioning control panel [Dashboard assembly: Exploded view](#) ,
-
- the multimedia network interface unit [Navigation: List and location of components](#) .

 Remove:

-
- the dashboard lower trim [Dashboard assembly: Exploded view](#) ,


- the passenger compartment central unit [UCH: Removal - Refitting](#) [UCH: Removal - Refitting](#) ,
 - the driver's front airbag [Driver's frontal airbag: Removal - Refitting](#) ,
 - the steering wheel [Steering assembly: Exploded view](#) ,
 - the shells under steering wheel [Dashboard assembly: Exploded view](#) ,
 - the steering column switch assembly [Control - Signals: List and location of components](#) ,
 - the left-hand dashboard side panel [Dashboard assembly: Exploded view](#) ,
 - the instrument panel visor trim [Dashboard assembly: Exploded view](#) ,
 - the instrument panel trim [Dashboard assembly: Exploded view](#) ,
 - the instrument panel [Dashboard assembly: Exploded view](#) ,
 - the tweeters from the upper section of the dashboard [Dashboard assembly: Exploded view](#) ,
 - the dashboard screws [Dashboard assembly: Exploded view](#)
- the dashboard (this operation requires two people).

2. REMOVAL OPERATION


Remove the dashboard wiring [Dashboard wiring: Removal - Refitting](#) .

Unclip on the dashboard cross member [Air distribution circuit assembly: Exploded view](#) :

- the front side air distribution duct,
- the front air inlet duct.

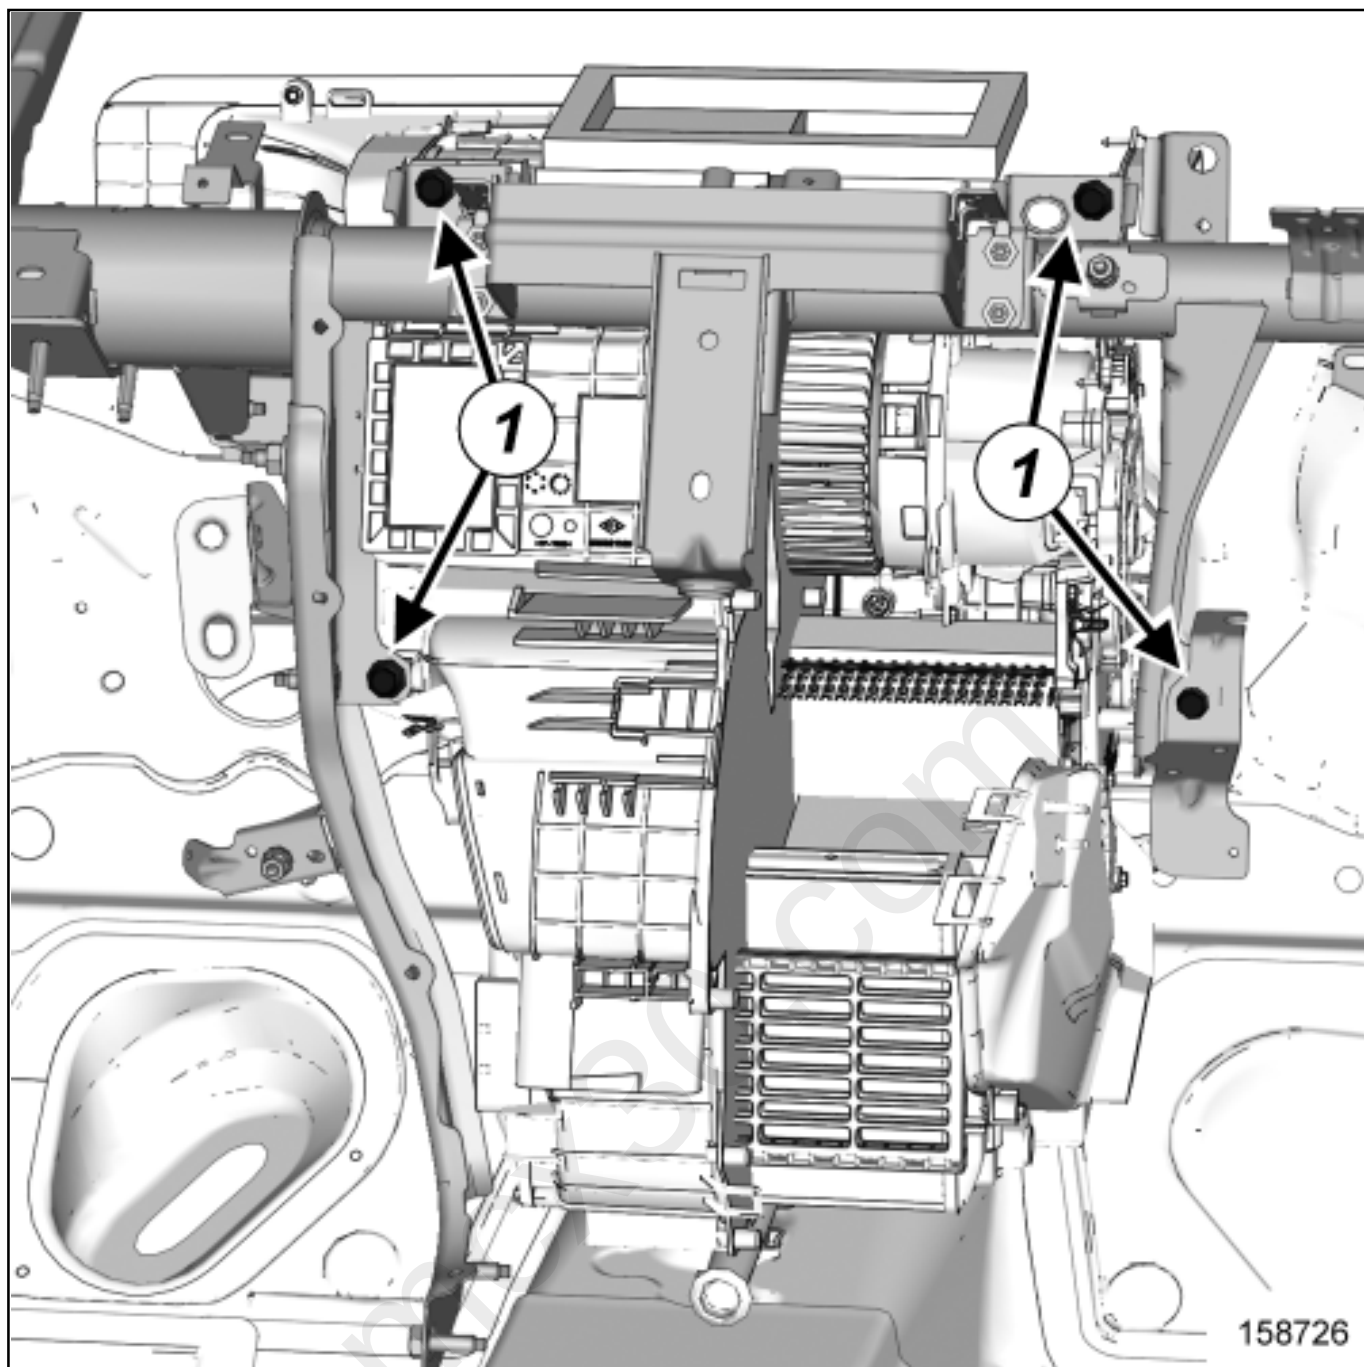

Remove the bolts(1) .

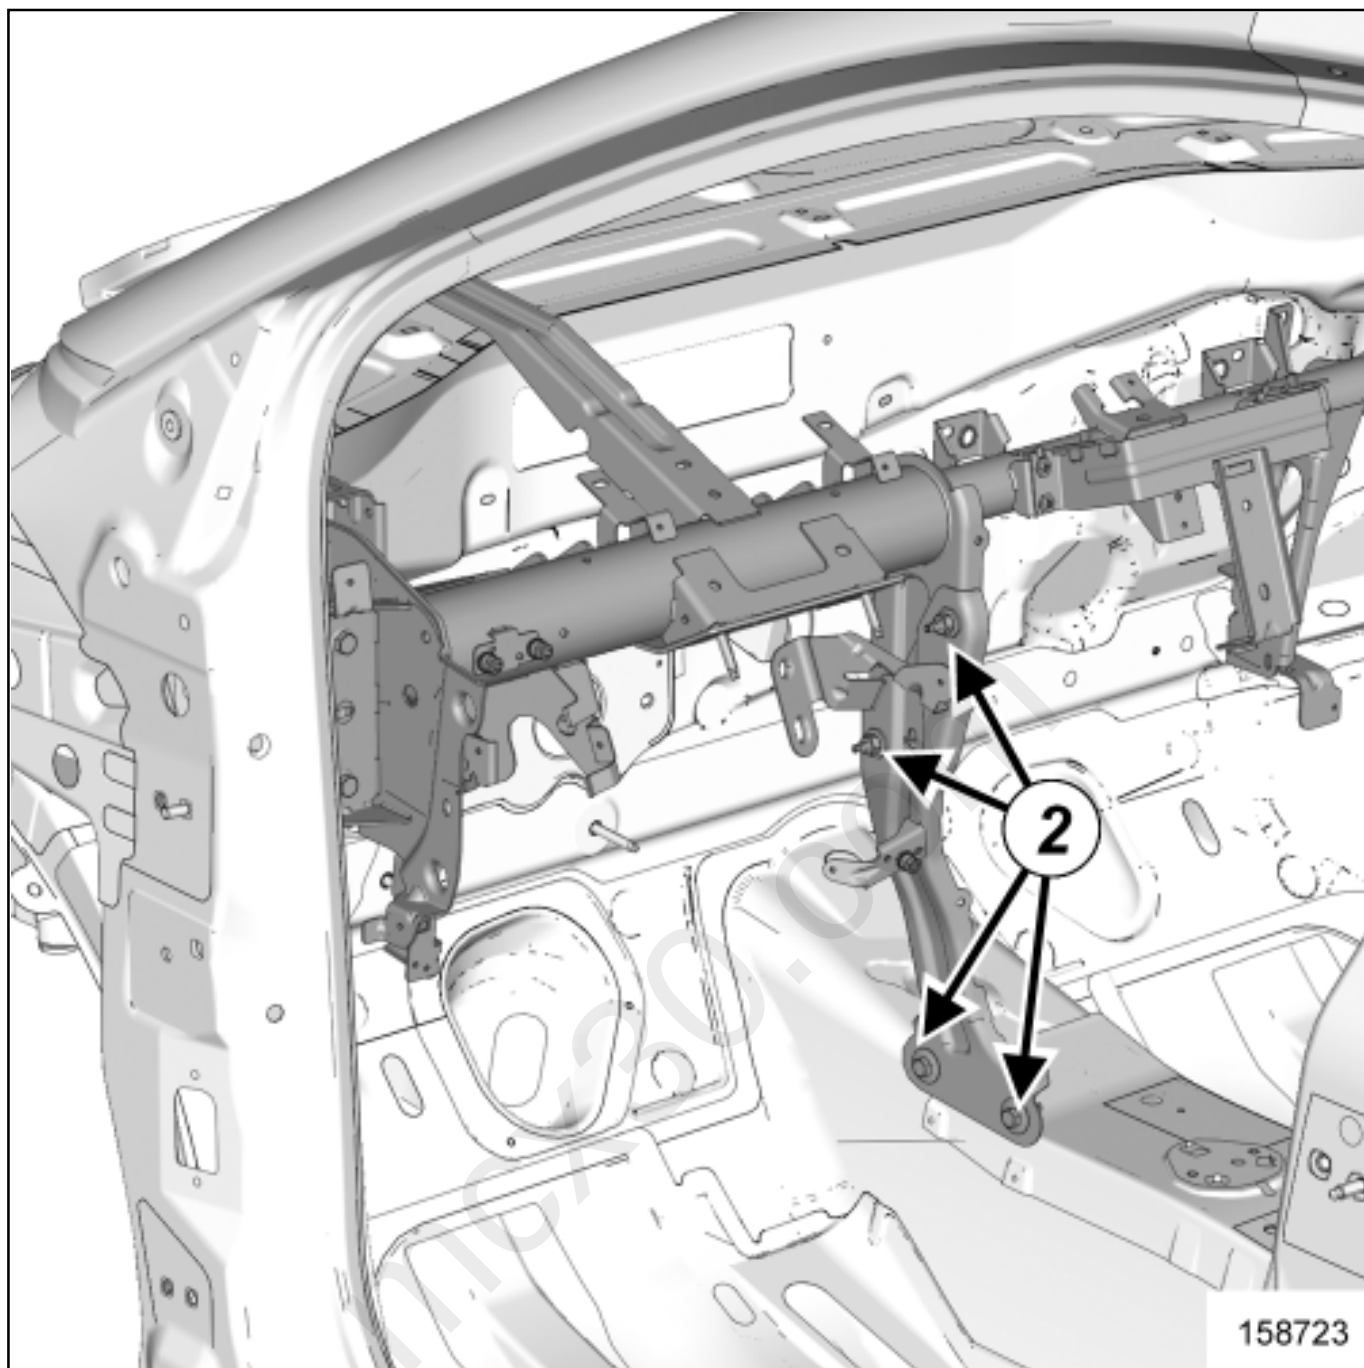


Remove:



the dashboard flange bolts(2) ,



the dashboard flange.

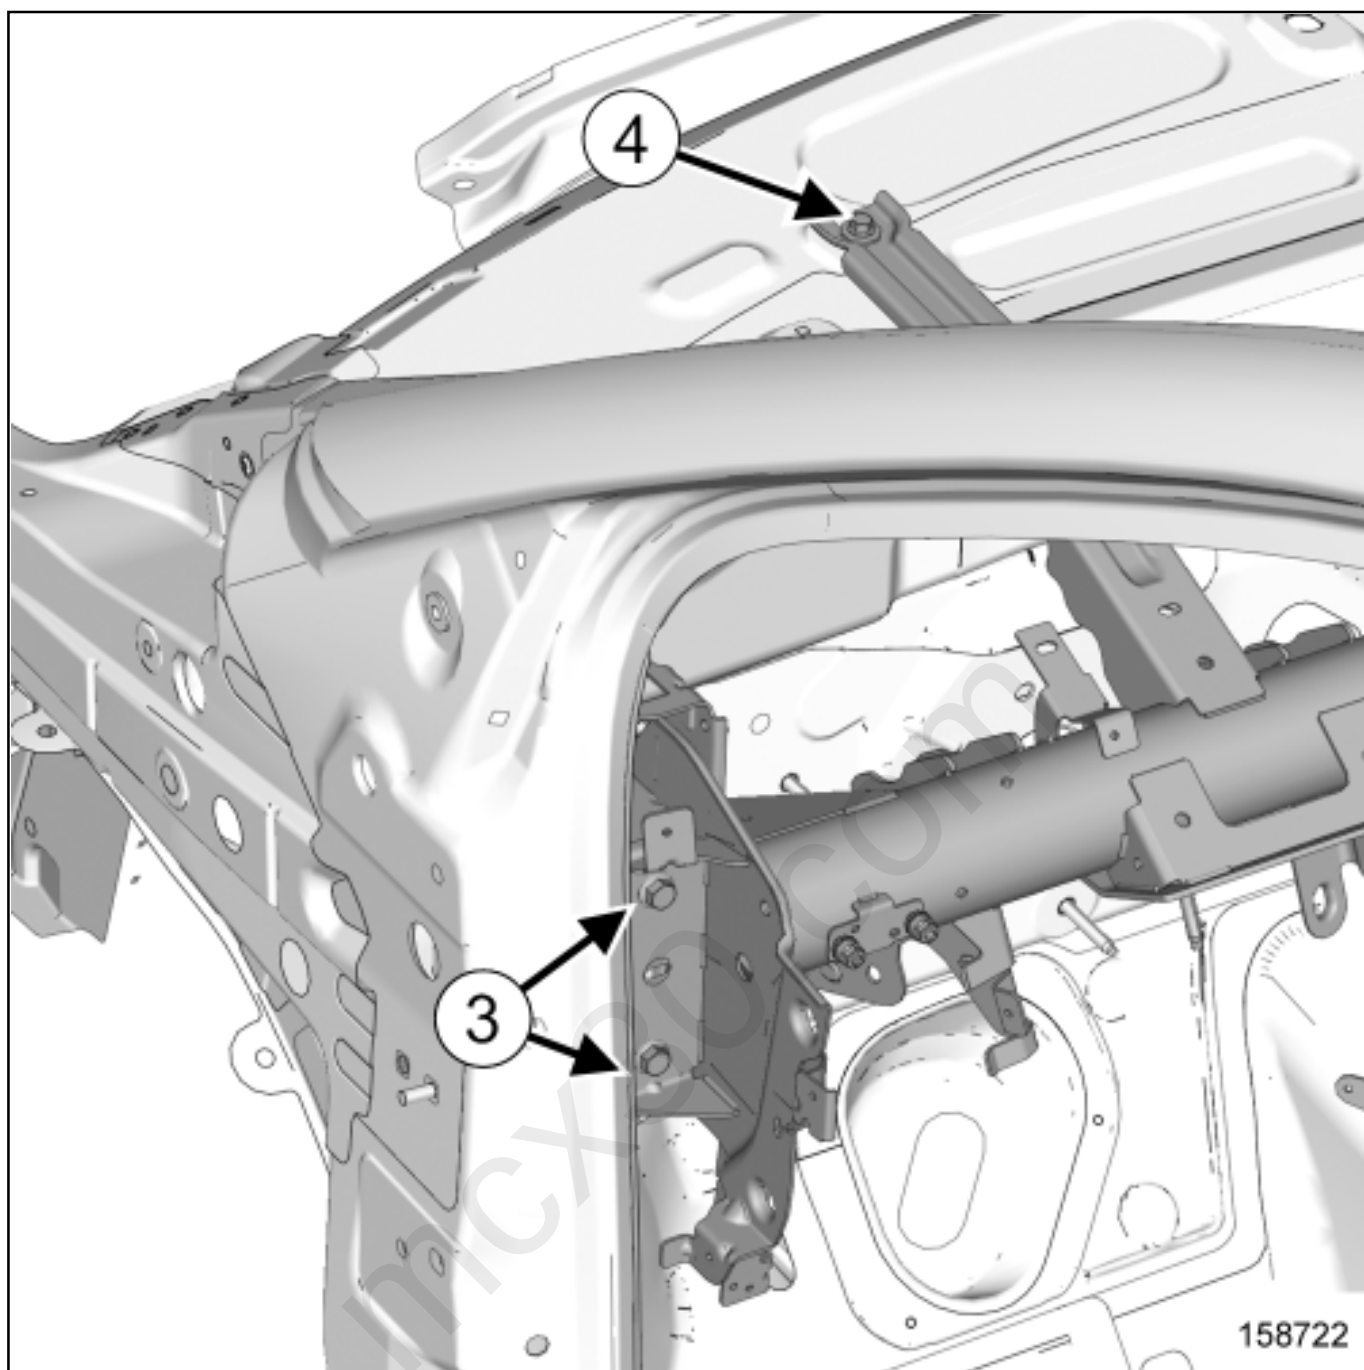


Remove:



the bolt from the windscreen aperture cross member(4) ,



the bolts from the cross member on each side(3) .

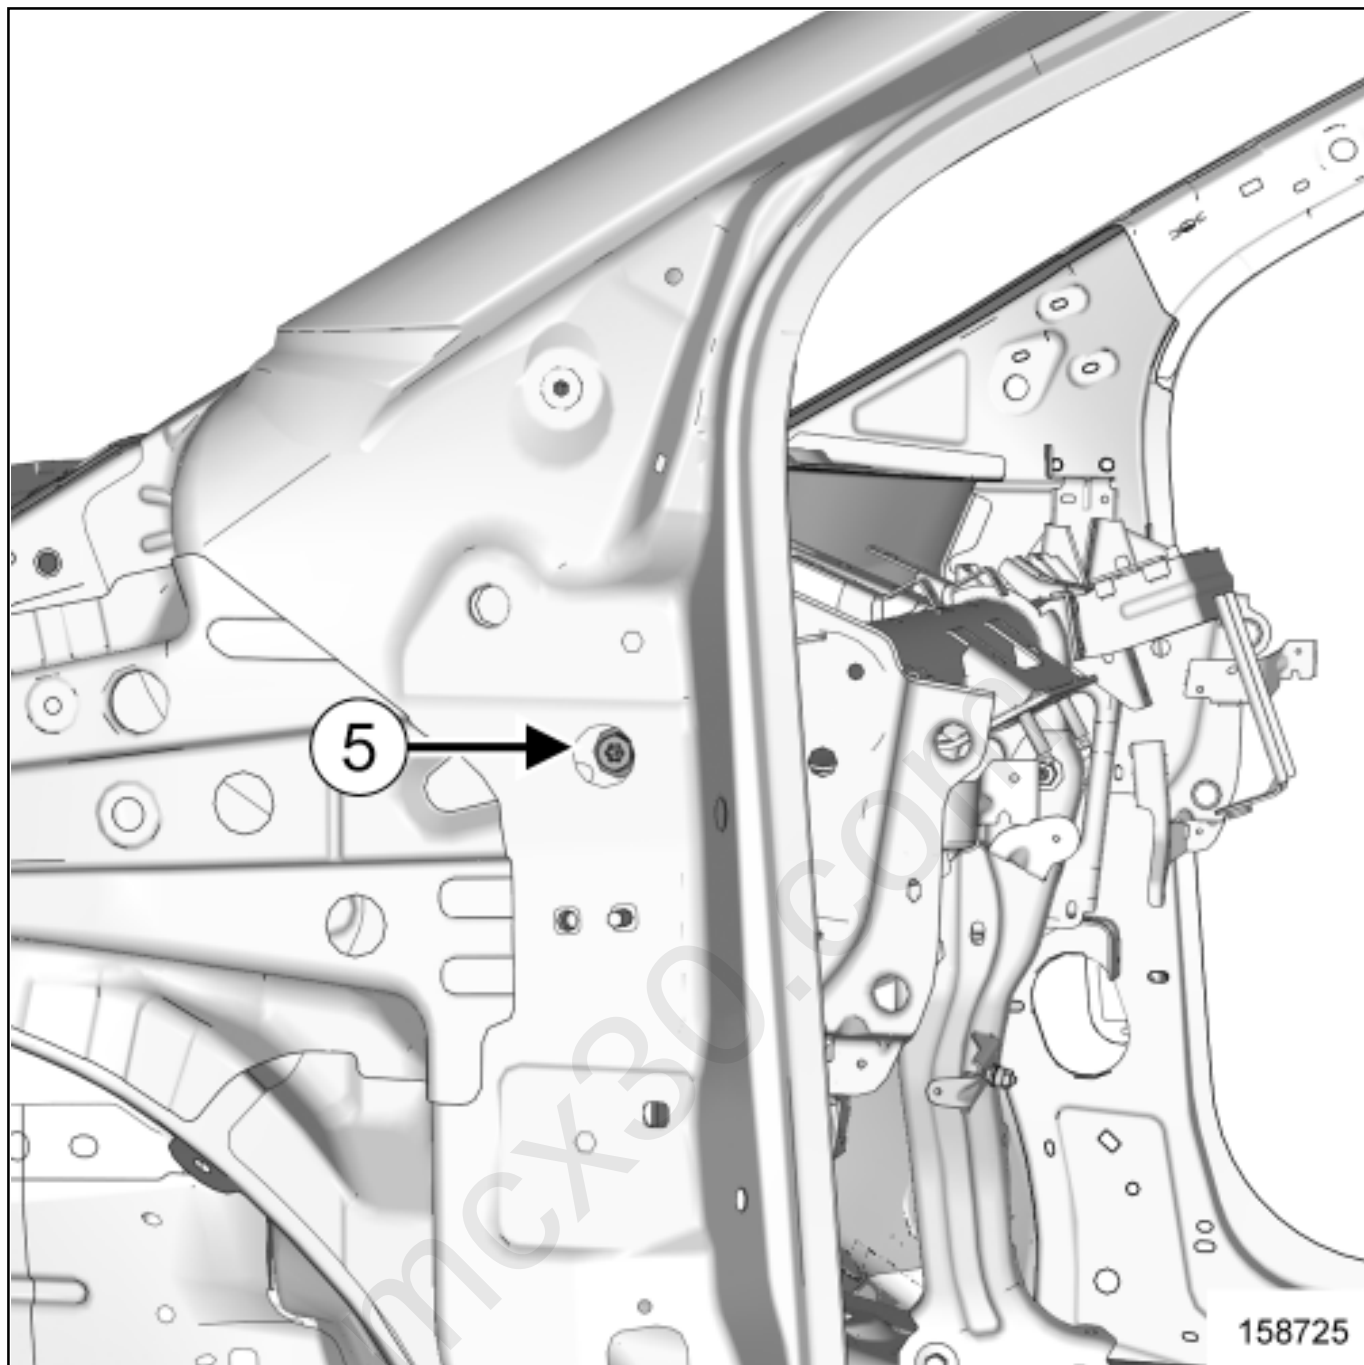

Remove:



the side bolts(5) ,



the dashboard cross member (this operation requires two people).