

Fit the dashboard (this operation requires two people).



CAUTION

To guarantee a good electrical connection, make sure that the wiring does not place any stress on the connectors or the surrounding components.

Refit the dashboard screws([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) .

Torque tighten the passenger front airbag bolts on the dashboard cross member12 N.m.

Connect the passenger front airbag connectors.

Lock the passenger's front airbag connectors.

2. FINAL OPERATION

Proceed in the reverse order to removal.

Carry out a function test on all functions.



[Repair-50x08x02x02-01x37-1-37-1.xml](#)



DASHBOARD:REMOVAL-REFITTING



Note, one or more warnings are present in this procedure



Location and specifications (tightening torques, parts always to be replaced, etc.)[\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) .

REMOVAL

1. REMOVAL PREPARATION OPERATION



Disconnect the battery[Battery: Removal - Refitting](#) .



Remove:



the windscreen pillar trims[Interior body side trim assembly: Exploded view](#) ,



the glovebox[\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,



the right-hand dashboard side panel[\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,



the airbag inhibitor switch[Passenger compartment switches : List and location of components](#) ,



the centre console,



the card reader[Immobiliser system: List and location of components](#) ,

the start button[Immobiliser system: List and location of components](#) .



Remove:



the centre front panel trim[\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the navigation keypad [Navigation: List and location of components](#) ,

the hazard warning lights and central door control [Hazard warning lights and central door control: Removal - Refitting](#) ,

the radionavigation, radio or radio display [Navigation: List and location of components](#) and [Radio: List and location of components](#) ,

the multimedia network interface unit [Navigation: List and location of components](#) ,

the centre front panel support [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the air conditioning control panel [Passenger compartment heating and ventilation assembly: Exploded view](#) ,

the dashboard lower trim [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the passenger compartment central unit [UCH: Removal - Refitting](#) ,

the driver's front airbag [Driver's frontal airbag: Removal - Refitting](#) ,

the steering wheel [Steering assembly: Exploded view](#) ,

the under steering wheel shell [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the steering column switch assembly [Control - Signals: List and location of components](#) ,


the left-hand dashboard side panel [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the dashboard centre visor [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the instrument panel [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) ,

the tweeters from the upper section of the dashboard [\(see 57A, Interior equipment, Dashboard assembly: Exploded view\)](#) .

2. REMOVAL OPERATION

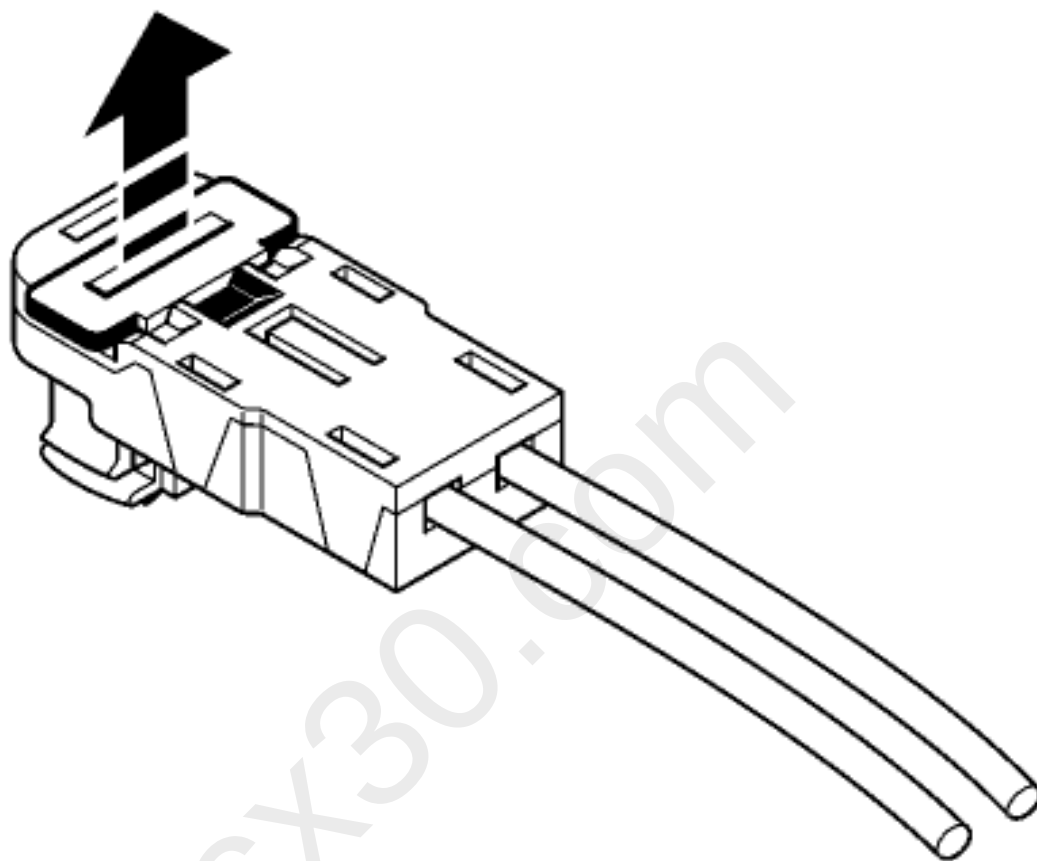

101920

Unlock the passenger front airbag connector.

Disconnect the passenger front airbag connector.

Remove the passenger front airbag bolts on the cross member.

Remove the dashboard screws([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) .

Move the dashboard away slightly.



CAUTION

To prevent any risk of noise, premature wear, short circuits, etc. after the refitting operation, mark the wiring routing and how to connect the connectors.

Remove the dashboard (this operation requires two people).

1- IN THE EVENT OF REPLACEMENT

Remove:

-
- the dashboard centre air vent([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) ,
- the dashboard air vents([see 57A, Interior equipment, Dashboard assembly: Exploded view](#)) ,
- the passenger front airbag[Passenger's frontal airbag: Removal - Refitting](#) .

REFITTING

1. REFITTING OPERATION

Refit the wiring in the position marked during the removal operation.



CAUTION

To prevent damage to the wiring harness when refitting, observe the original routing.