



Repair-12x07x02x20-01x37-1-22-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

DISTRIBUTION MOTOR: REMOVAL-REFITTING

Equipment required
Diagnostic tool

Locations and specifications (tightening torques, parts to always be replaced, etc.) ([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .


REMOVAL

1. REMOVAL PREPARATION OPERATION



Remove the glovebox [Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

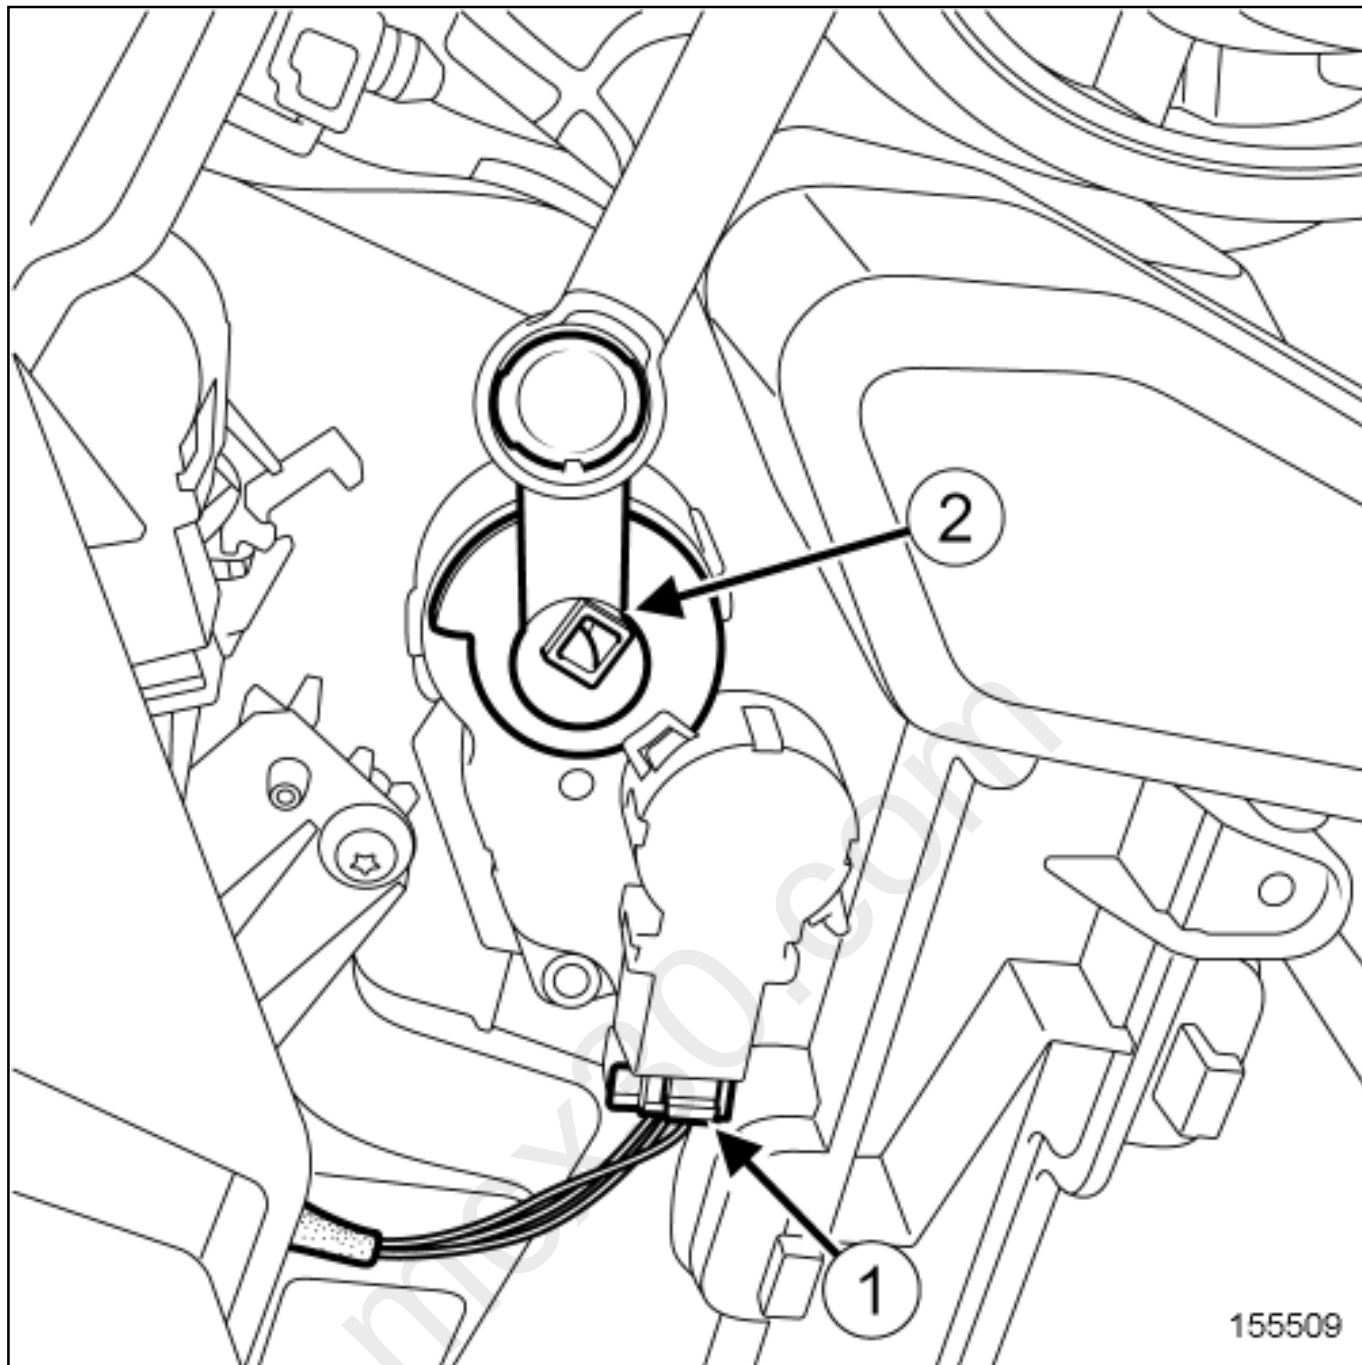

Disconnect the distribution motor connector(1) .

Move the bracket(2) from the distribution motor.

Unclip the distribution motor from the distribution unit([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#))