

Torque tighten:

- the earth nuts on the body 8 N.m,

- the earth wiring bolt on the automatic gearbox 21 N.m.

Refill:

- and bleed the cooling system [Cooling system: Draining - Refilling](#) ,

- the automatic gearbox [Automatic gearbox oil: Draining - Filling](#) ,

- the engine oil if necessary ([see 10A, Engine and cylinder block assembly, Engine oil - Oil filter : Draining - Filling](#)) .



Repair-10x01x01-01x37-2-210-1.xml



XSL version : 3.02 du 22/07/11

ENGINE AND TRANSMISSION ASSEMBLY SENSORS : EXPLODED VIEW


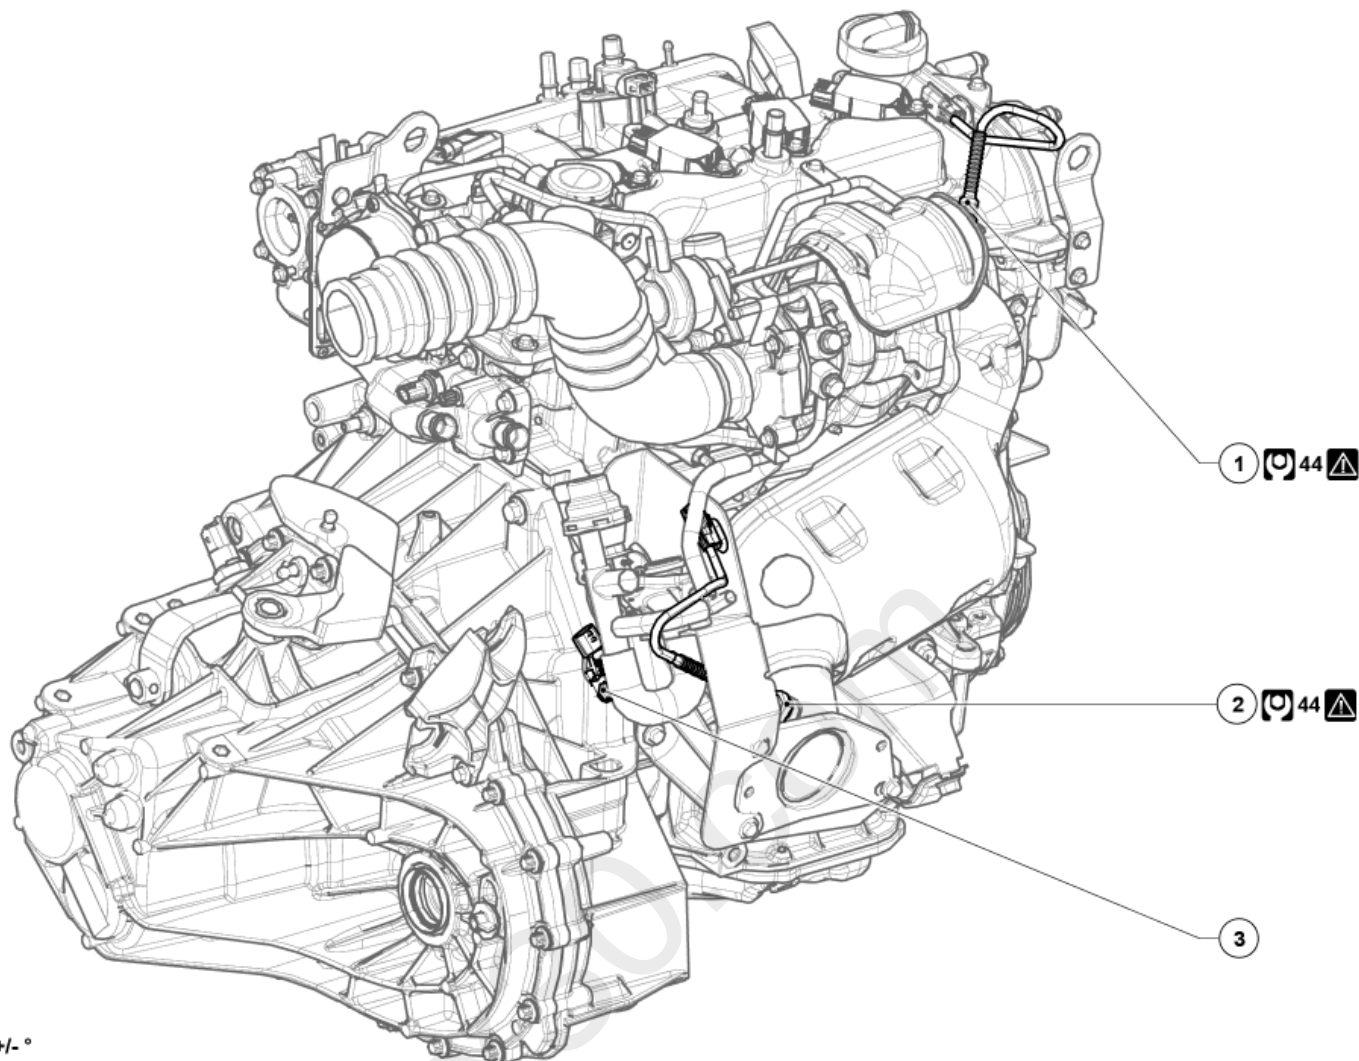


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Upstream oxygen sensor	(see 19B, Exhaust, Exhaust assembly in engine compartment: Exploded view)
2	Downstream oxygen sensor	(see 19B, Exhaust, Exhaust assembly in engine compartment: Exploded view)
3	Crankshaft position sensor	

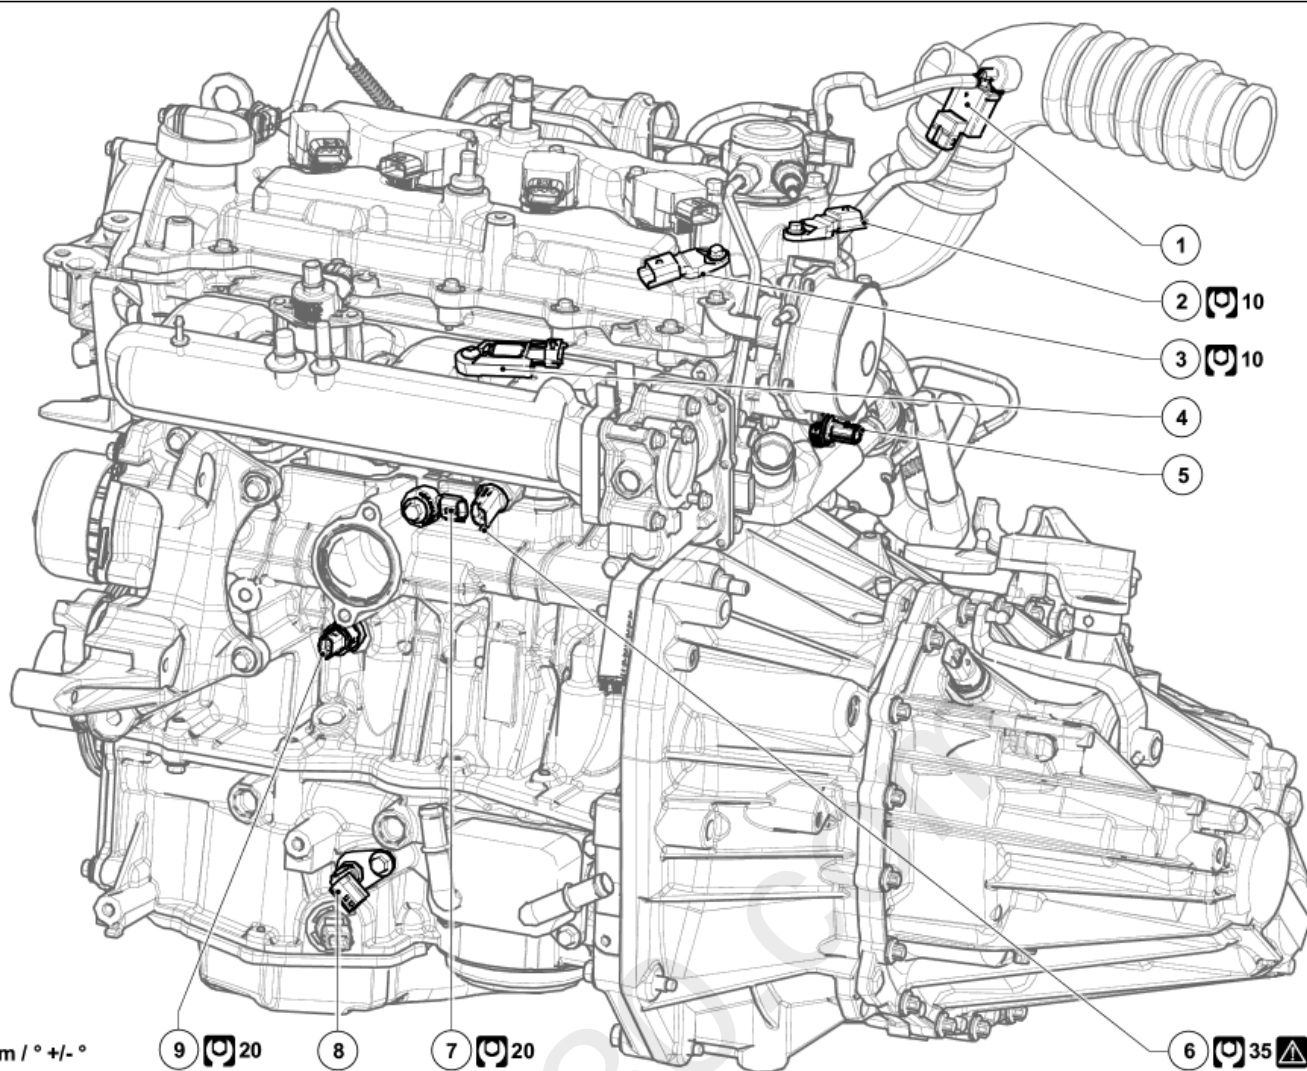


[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Air inlet pressure sensor	
2	Exhaust camshaft position sensor	(see 11A, Top and front of engine, Cylinder head assembly: Exploded view)
3	Inlet camshaft position sensor	(see 11A, Top and front of engine, Cylinder head assembly: Exploded view)
4	Inlet air temperature sensor	
5	Coolant temperature sensor	(see 19A, Cooling, Coolant circuit assembly: Exploded view)
6	Injection rail pressure sensor	
7	Pinking sensor	(see 17B, Petrol injection, Pinking sensor: Removal - Refitting) Connector located at flywheel end

Marks	Designations	Informations
8	Oil level sensor	(see 10A, Engine and cylinder block assembly, Engine oil circuit assembly: Exploded view)

Marks	Designations	Informations
9	Oil pressure sensor	(see 10A, Engine and cylinder block assembly, Engine oil circuit assembly: Exploded view)

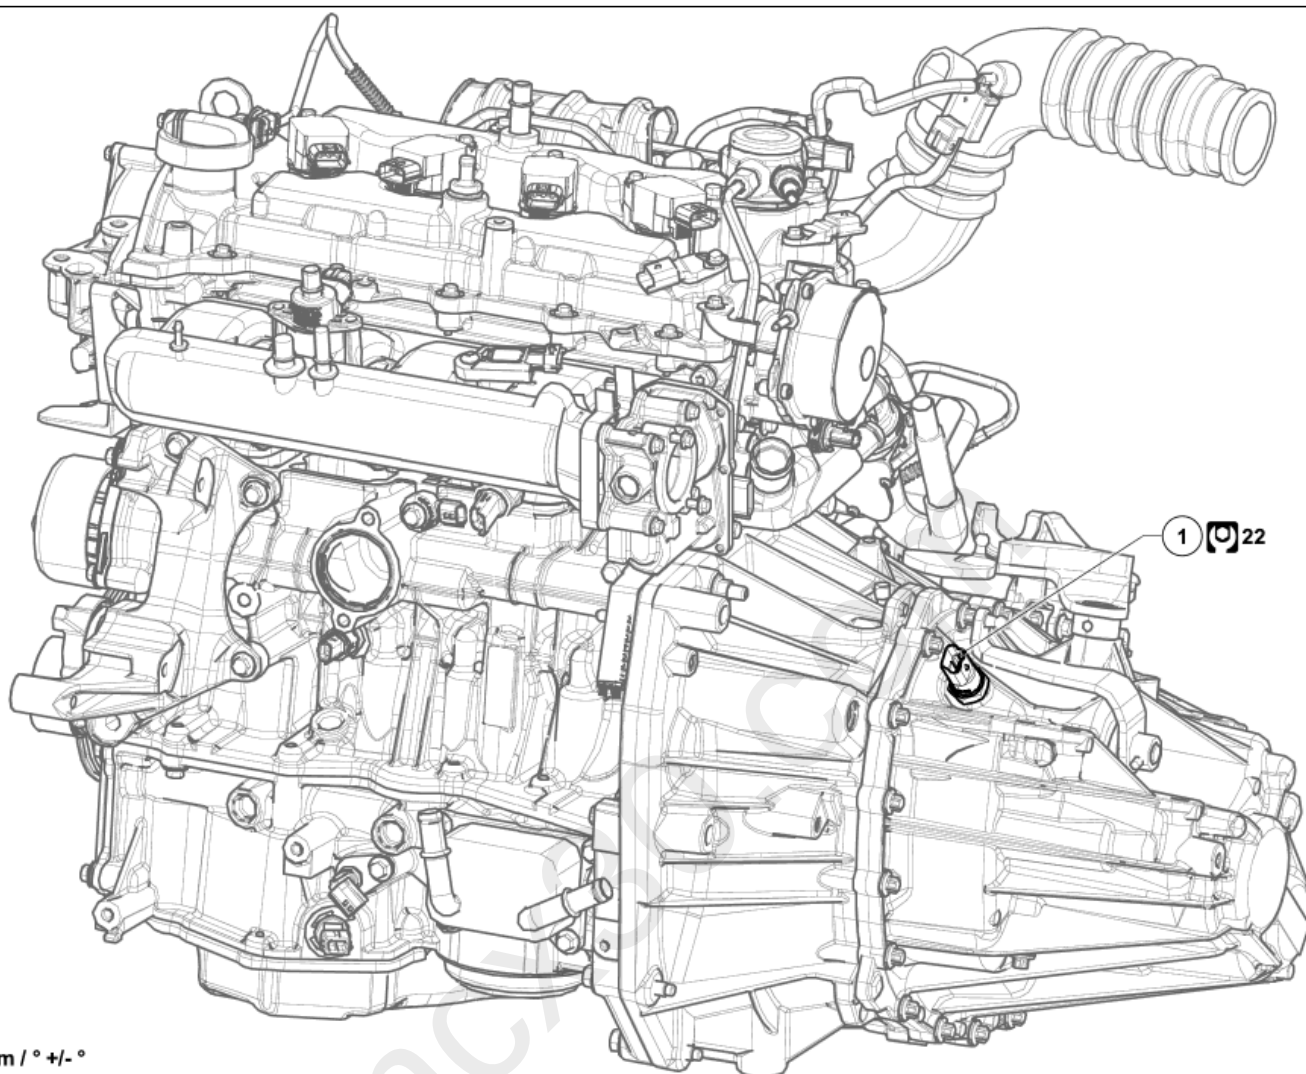

[N.m] N.m / ° +/- °

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Reverse gear switch	