

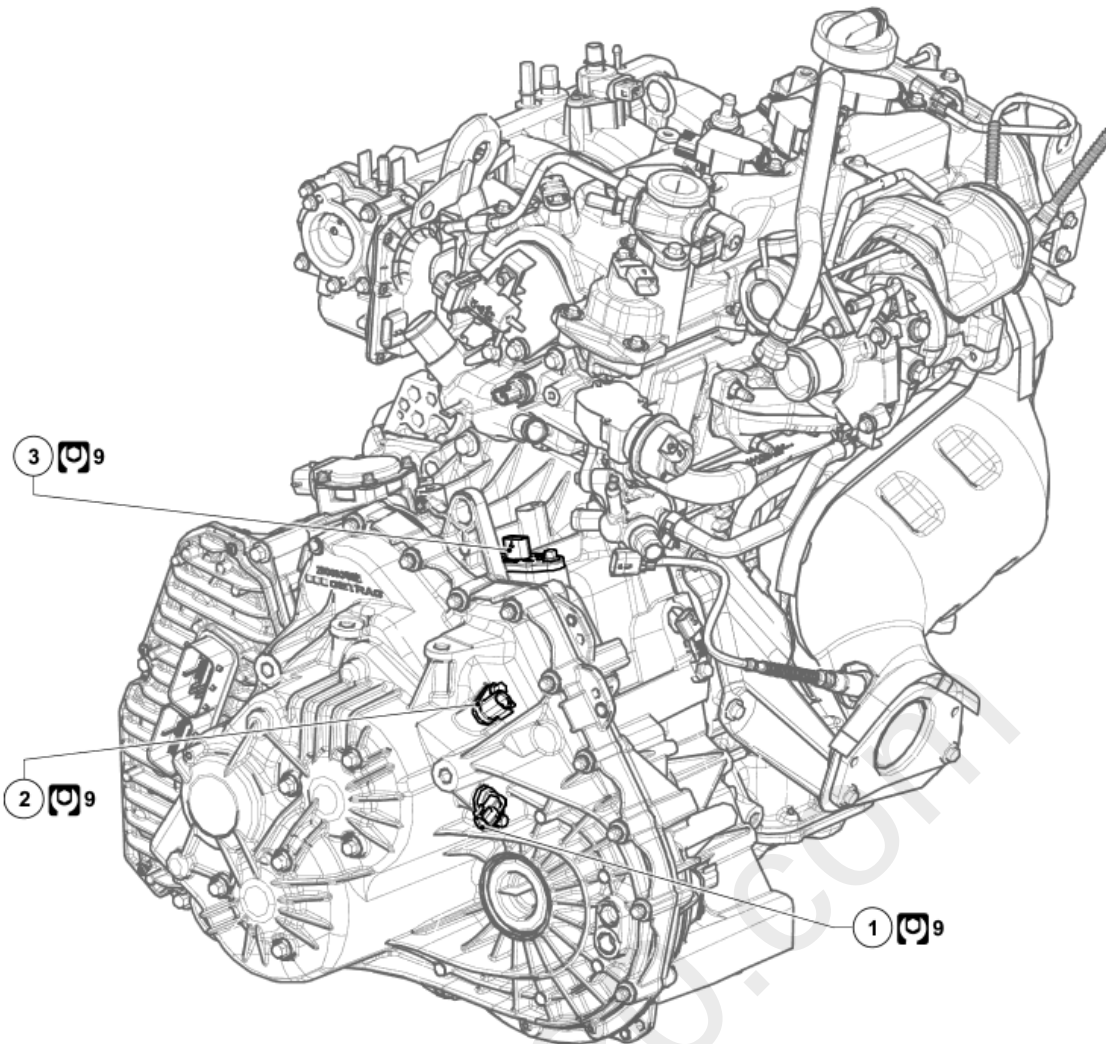


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard TorquesTightening torques: General information .

Marks	Designations	Informations
1	Gear engaged sensor	
2	Speed sensor	
3	Speed sensor	



Repair-10x11-02x50-1-3-1.xml



XSL version : 3.02 du 22/07/11

ENGINE COMPARTMENT CONNECTION UNIT: LIST AND LOCATION OF COMPONENTS



Note, one or more warnings are present in this procedure



Equipment required

Diagnostic tool

1. LIST OF COMPONENTS

1- THE ENGINE COMPARTMENT CONNECTION UNIT IS COMPOSED OF:

- an engine compartment connection unit
- a Protection and Switching Unit


2. LOCATION OF COMPONENTS




CAUTION


To prevent damage to the wiring harness when refitting, observe the original routing.

1- ENGINE COMPARTMENT CONNECTION UNIT

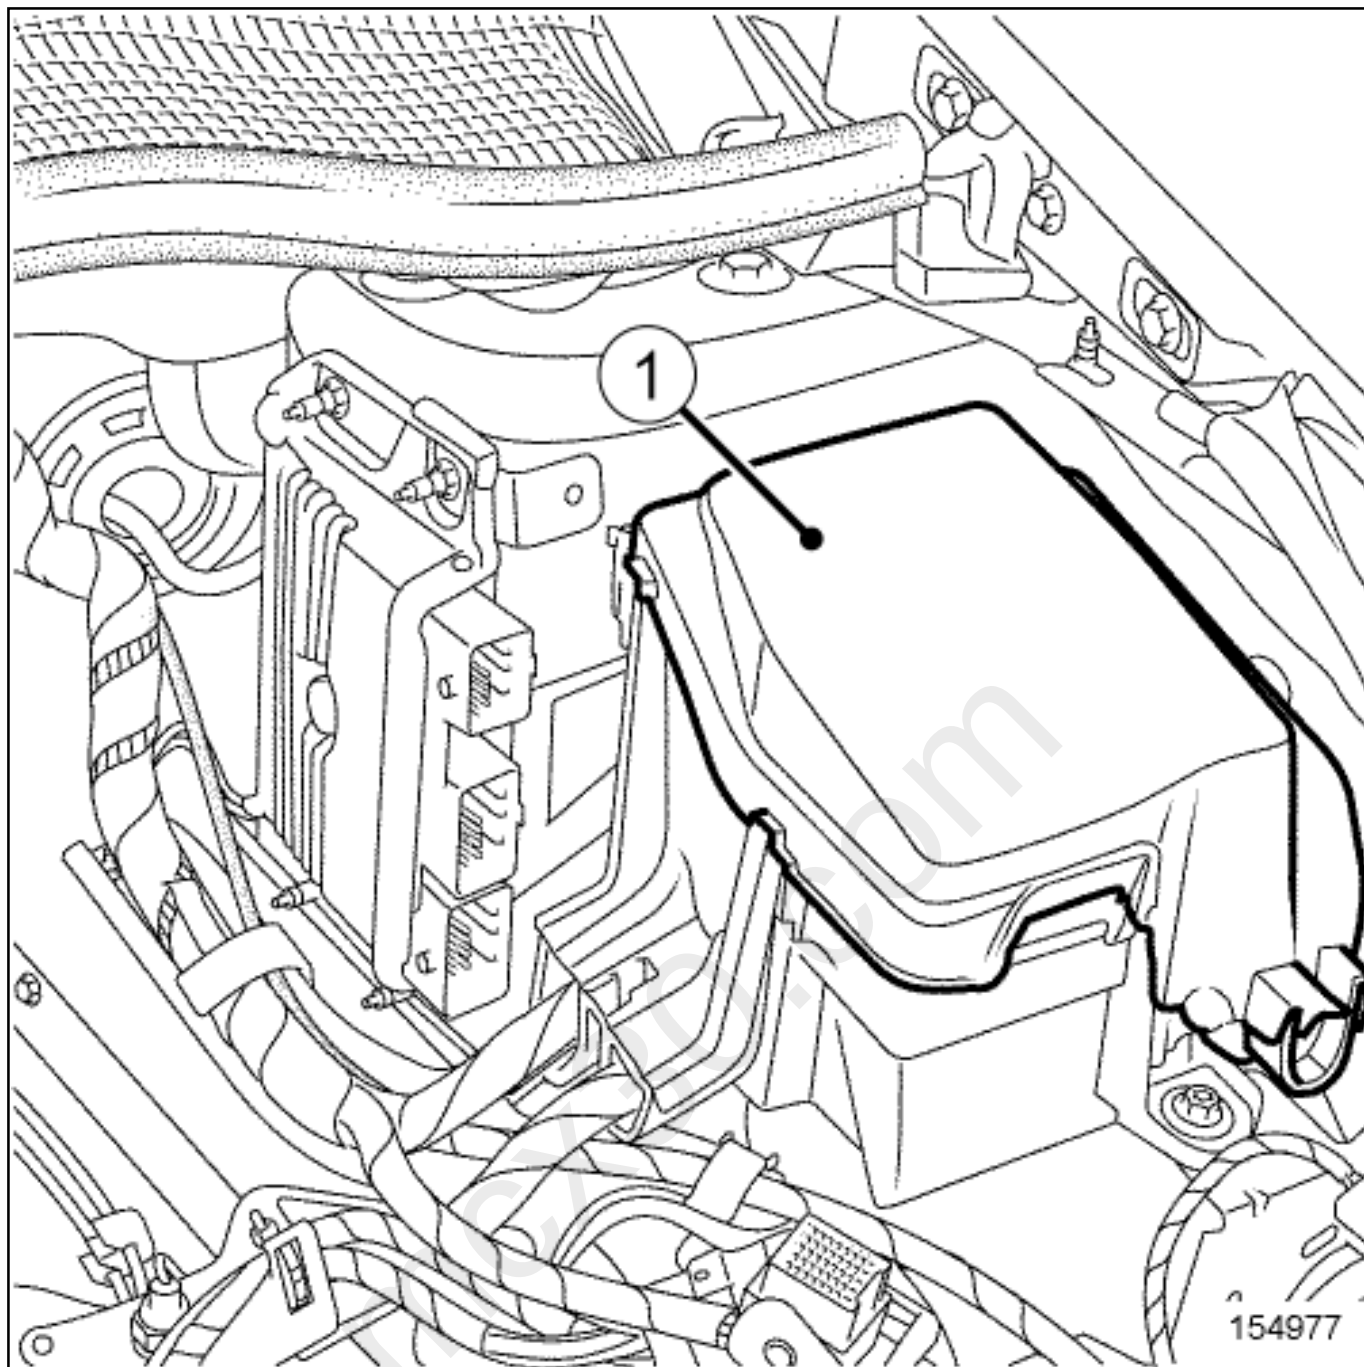


Unclip the cover(1) to access the engine compartment connection unit.

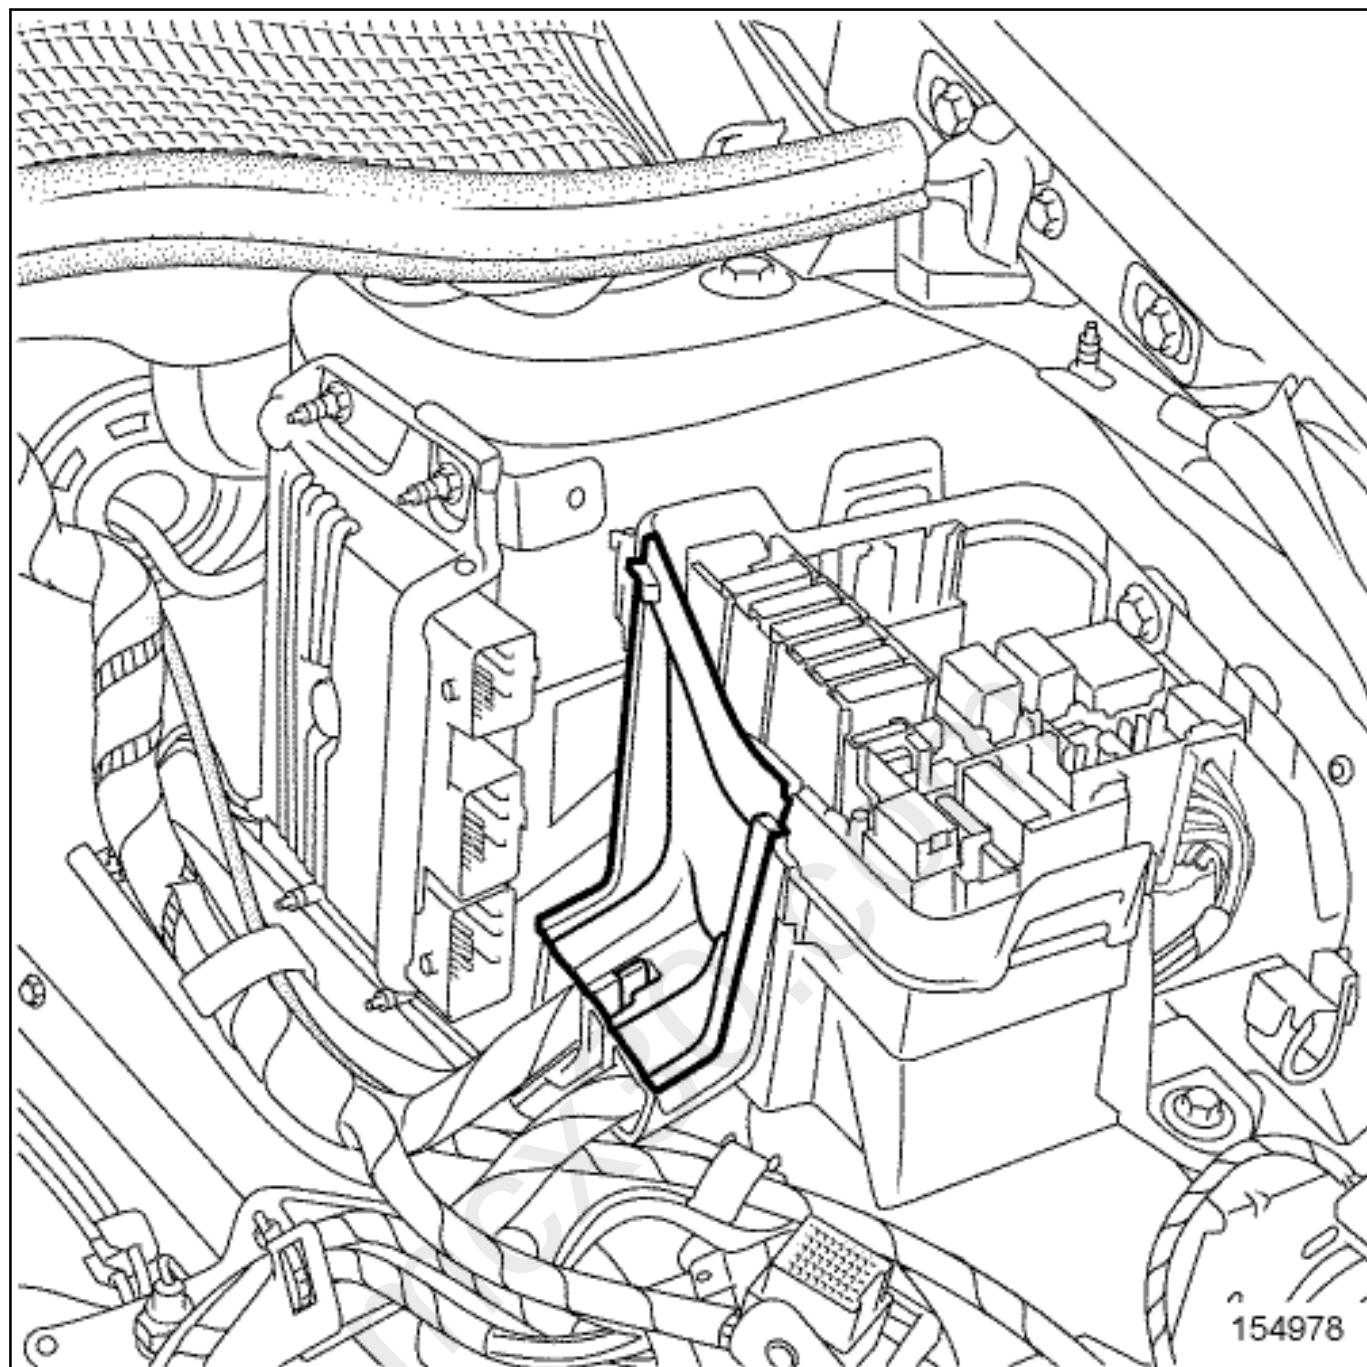


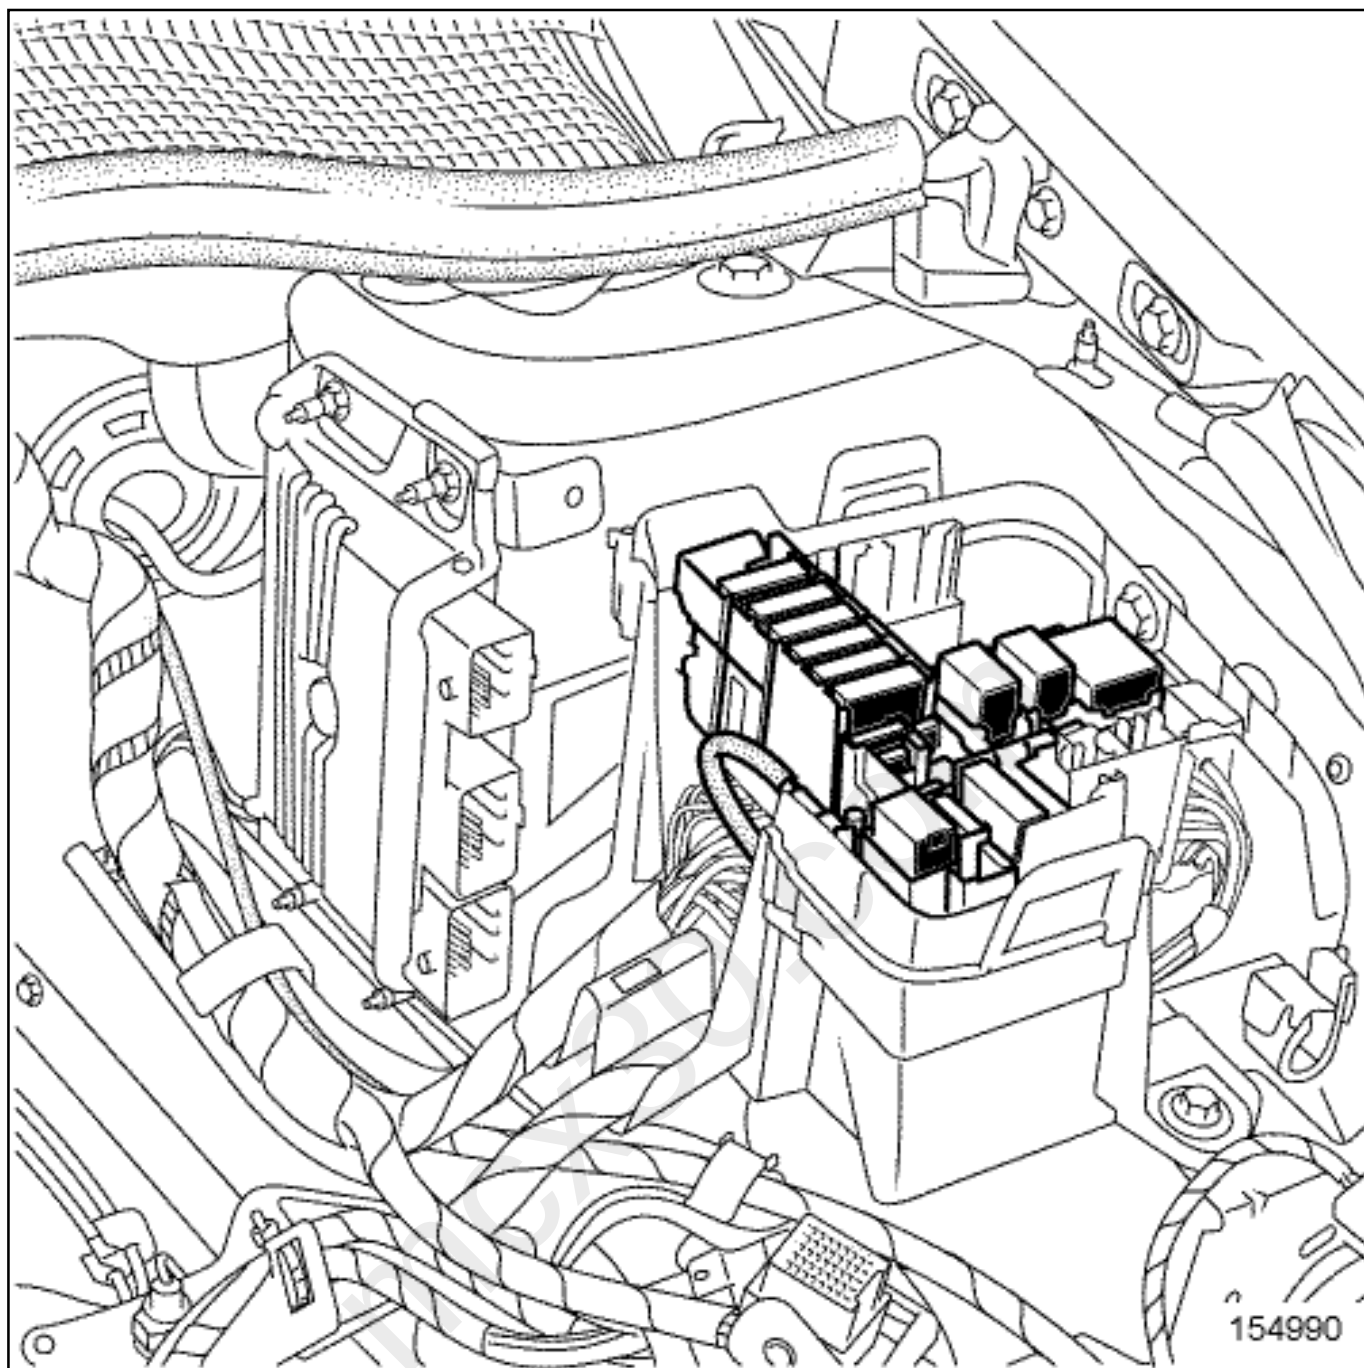

2- PROTECTION AND SWITCHING UNIT

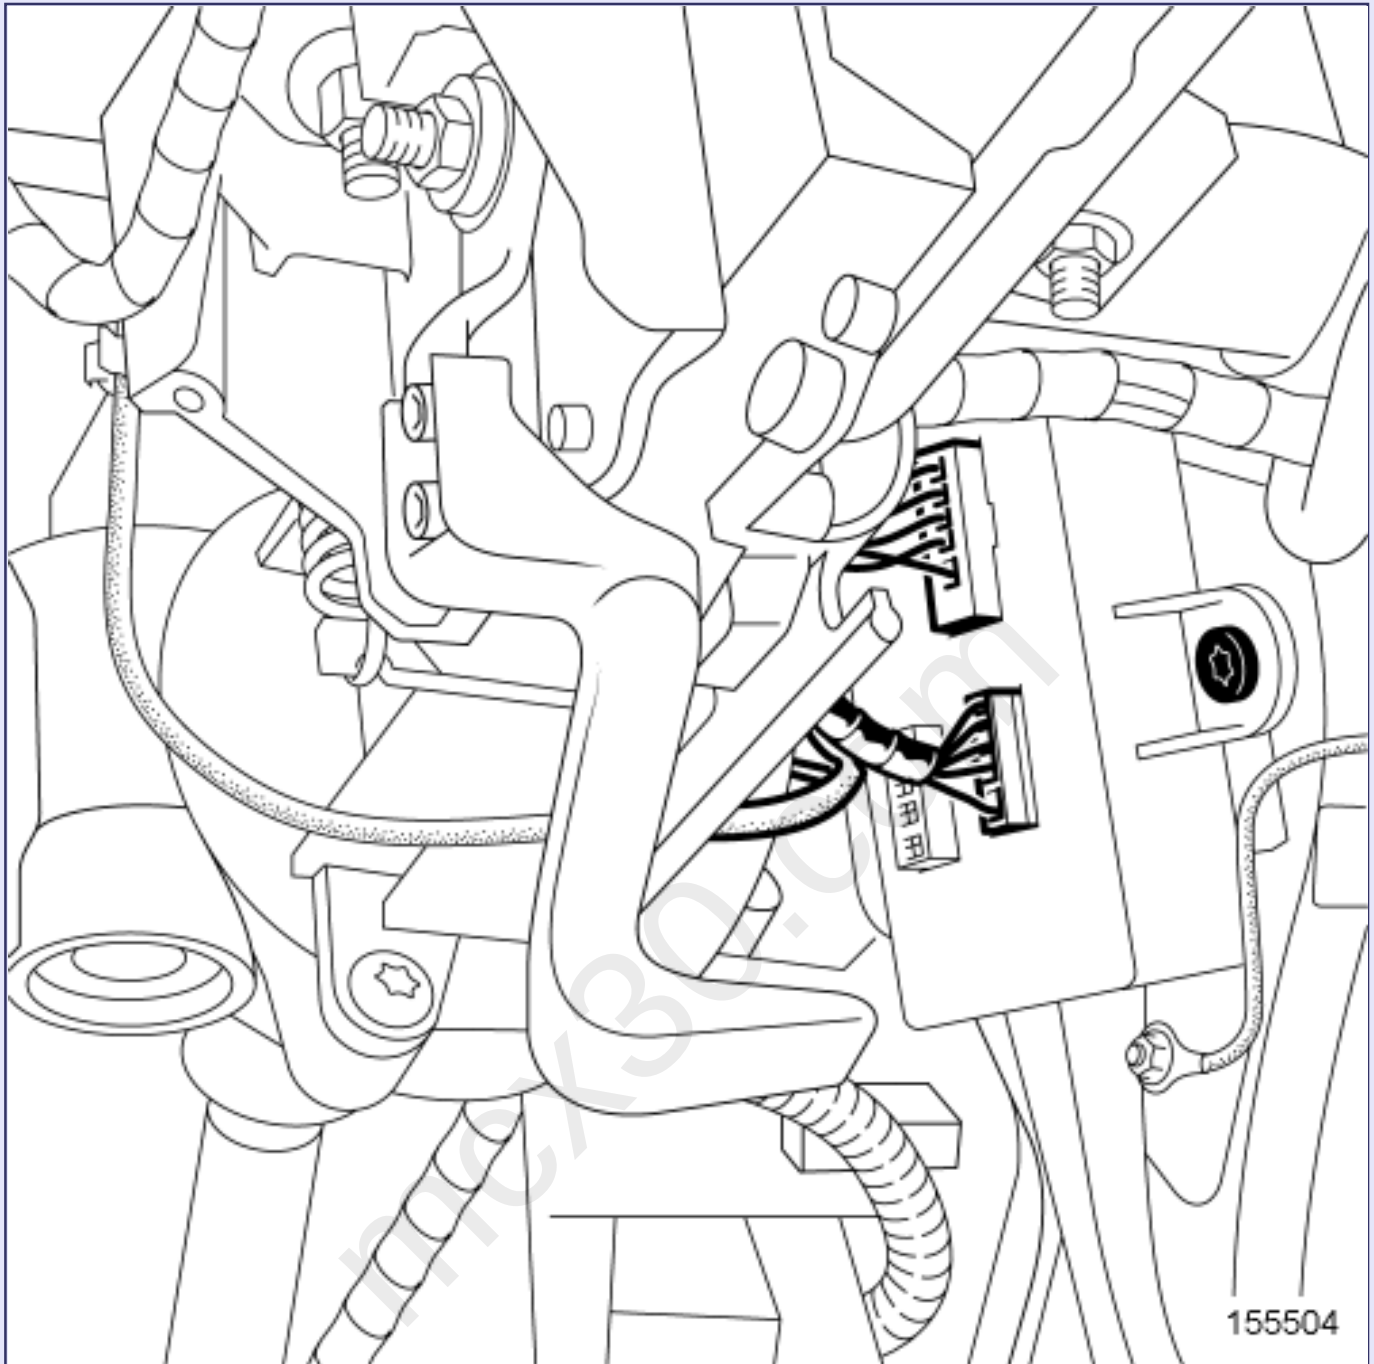

The Protection and Switching Unit is located behind the lower dashboard trim.

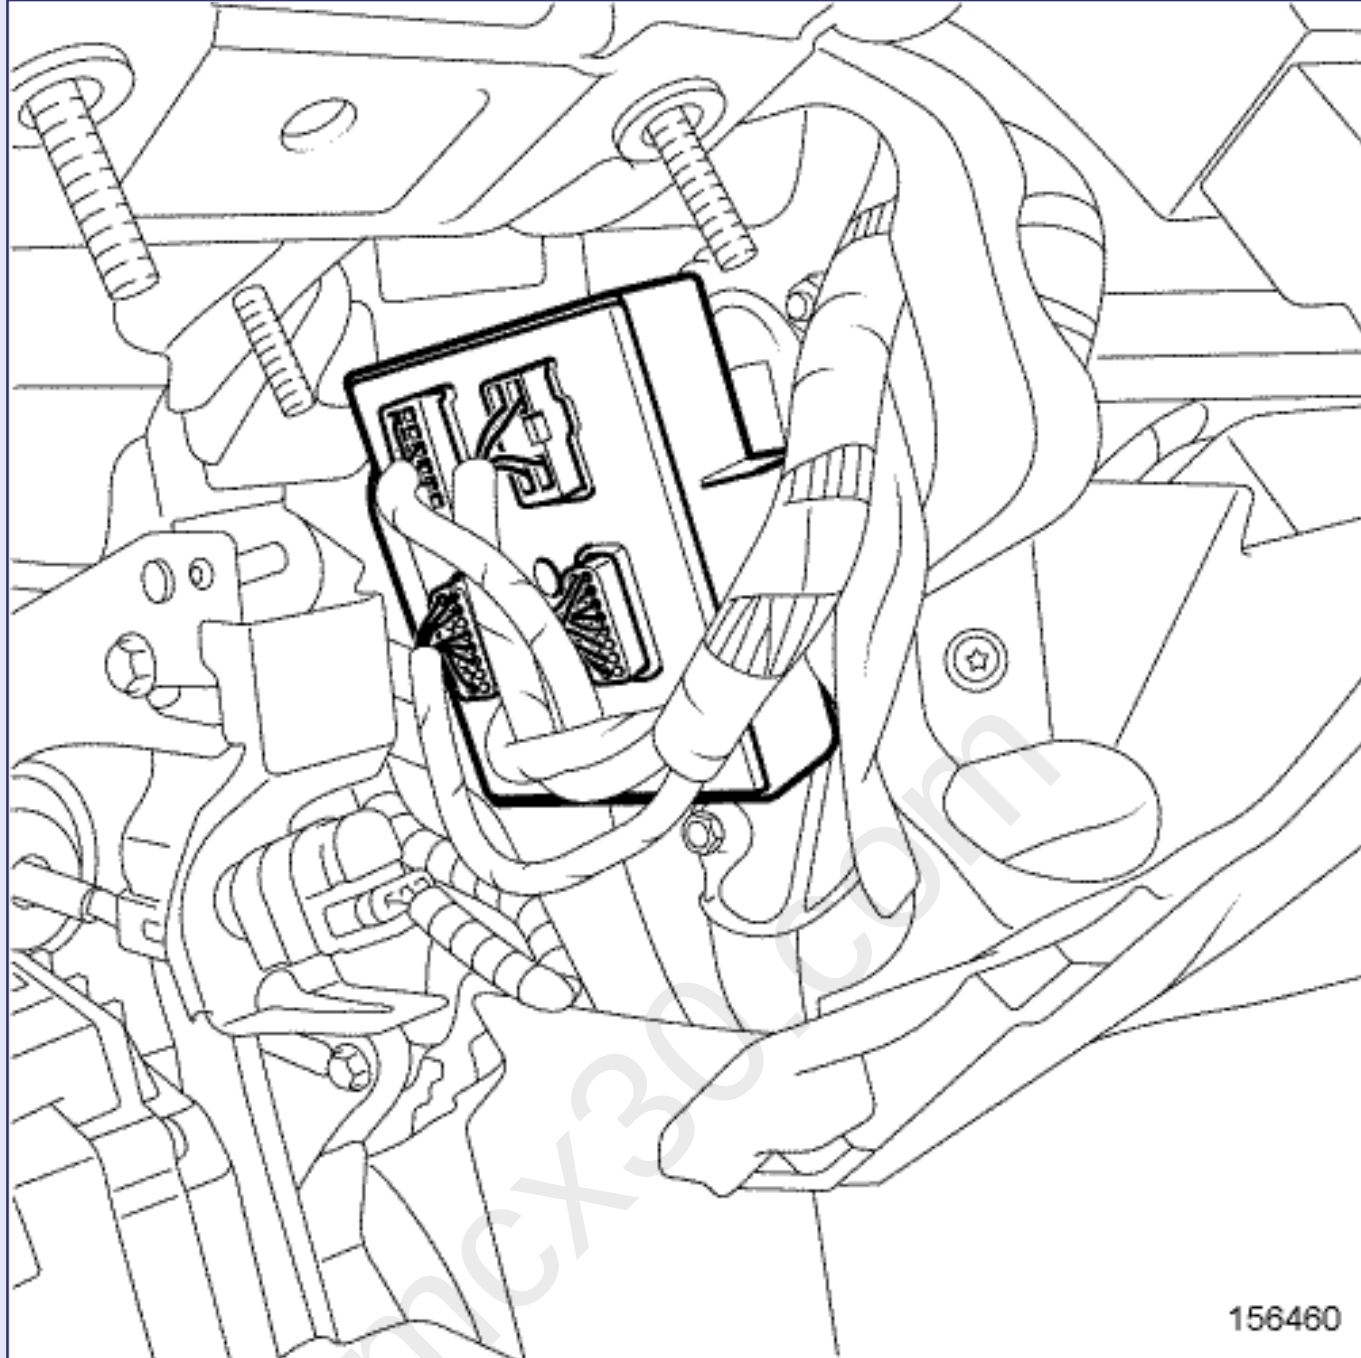

156460

The Protection and Switching Unit is located behind the lower dashboard trim.

1) REMOVAL OPERATION



In the event of replacement, apply the before repair procedure using the Diagnostic tool [Diagnostic tool : Use](#) :
-Computer concerned by the Before repair procedure:

"Protection and Switching Unit" .

Disconnect the battery [Battery: Removal - Refitting](#) .