

Refit the fuses.

If replacing with a complete wiring harness, lock the unused connectors (see Connectors: Sealing and locking) (Technical Note 6015A, 88A, Wiring).

2. REFITTING OPERATION

Proceed in the reverse order to removal.

Note:



Refit the earth terminal, aligning the indelible marks.

When reassembling, improper positioning of the earth terminal casing could result in damage to the earth terminal or earth wiring.

Torque tighten:



the starter excitation cable nut **5 N.m**,



the starter supply cable nut **8 N.m**,



the positive terminal nut on the alternator **21 N.m**,



the earth cable nut **8 N.m**.

Connect the battery [Battery: Removal - Refitting](#) .

Switch on the ignition.

Connect the Diagnostic tool.

Check that there are no faults.



Repair-32x05x02x01-01x37-1-55-1.xml



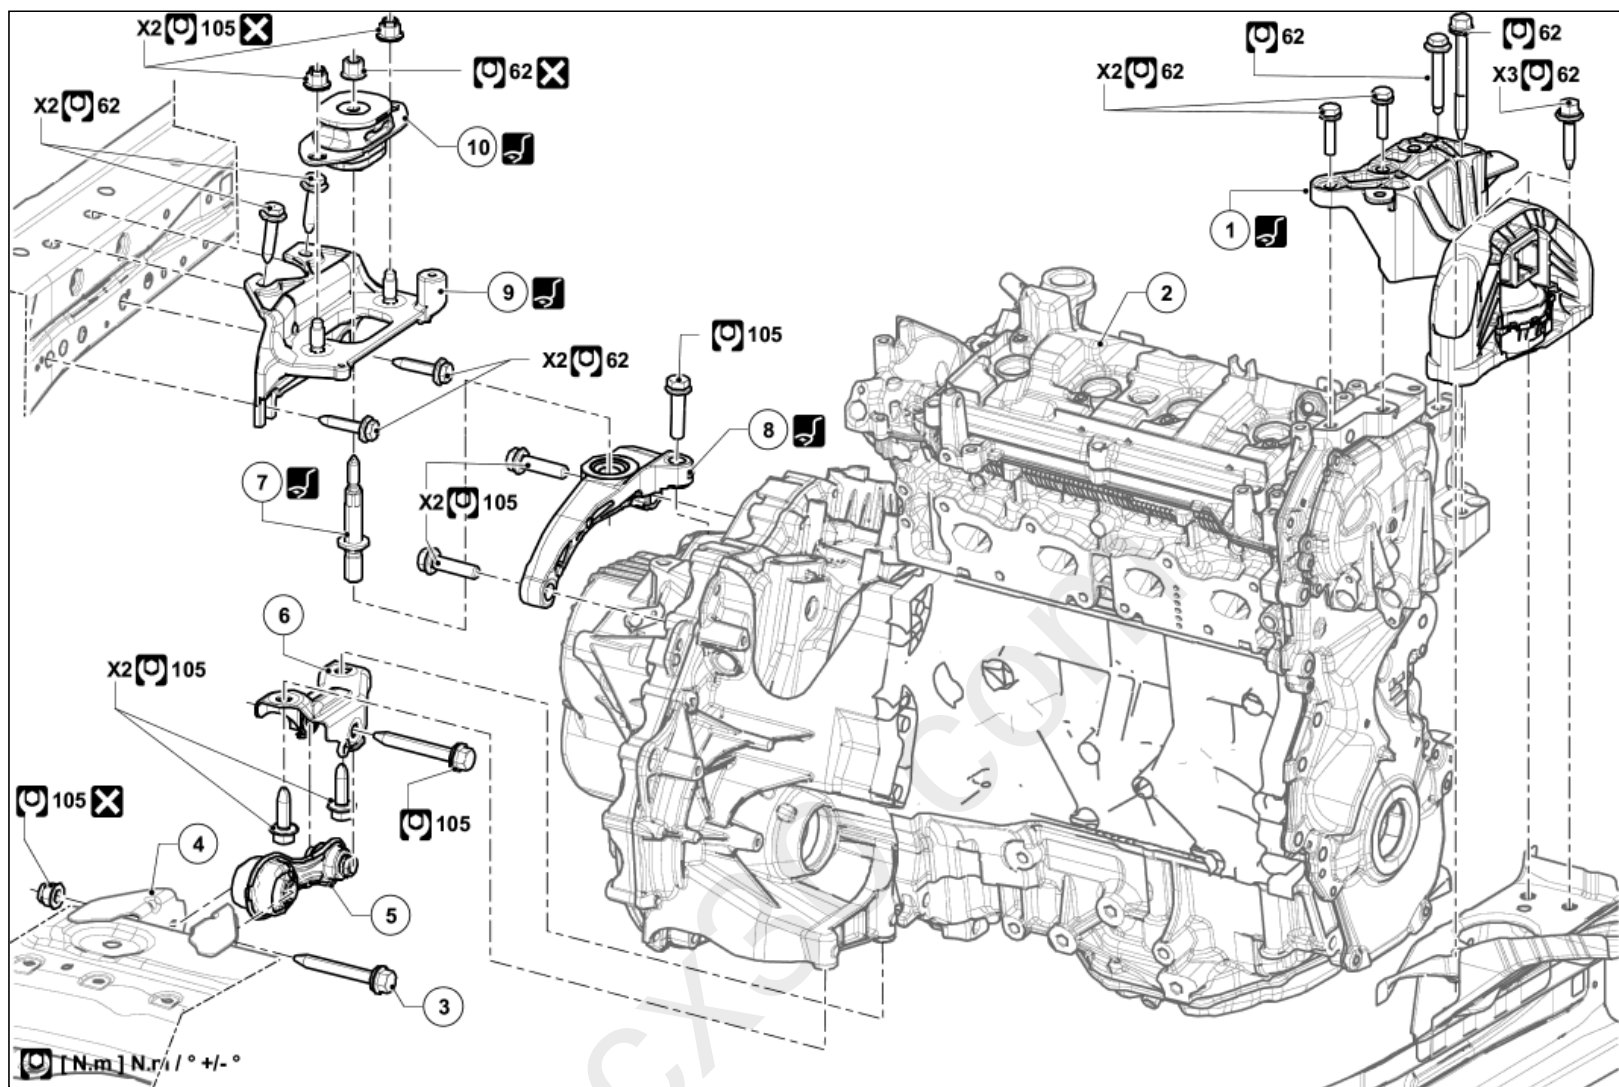


Illustration key: Description .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#).