


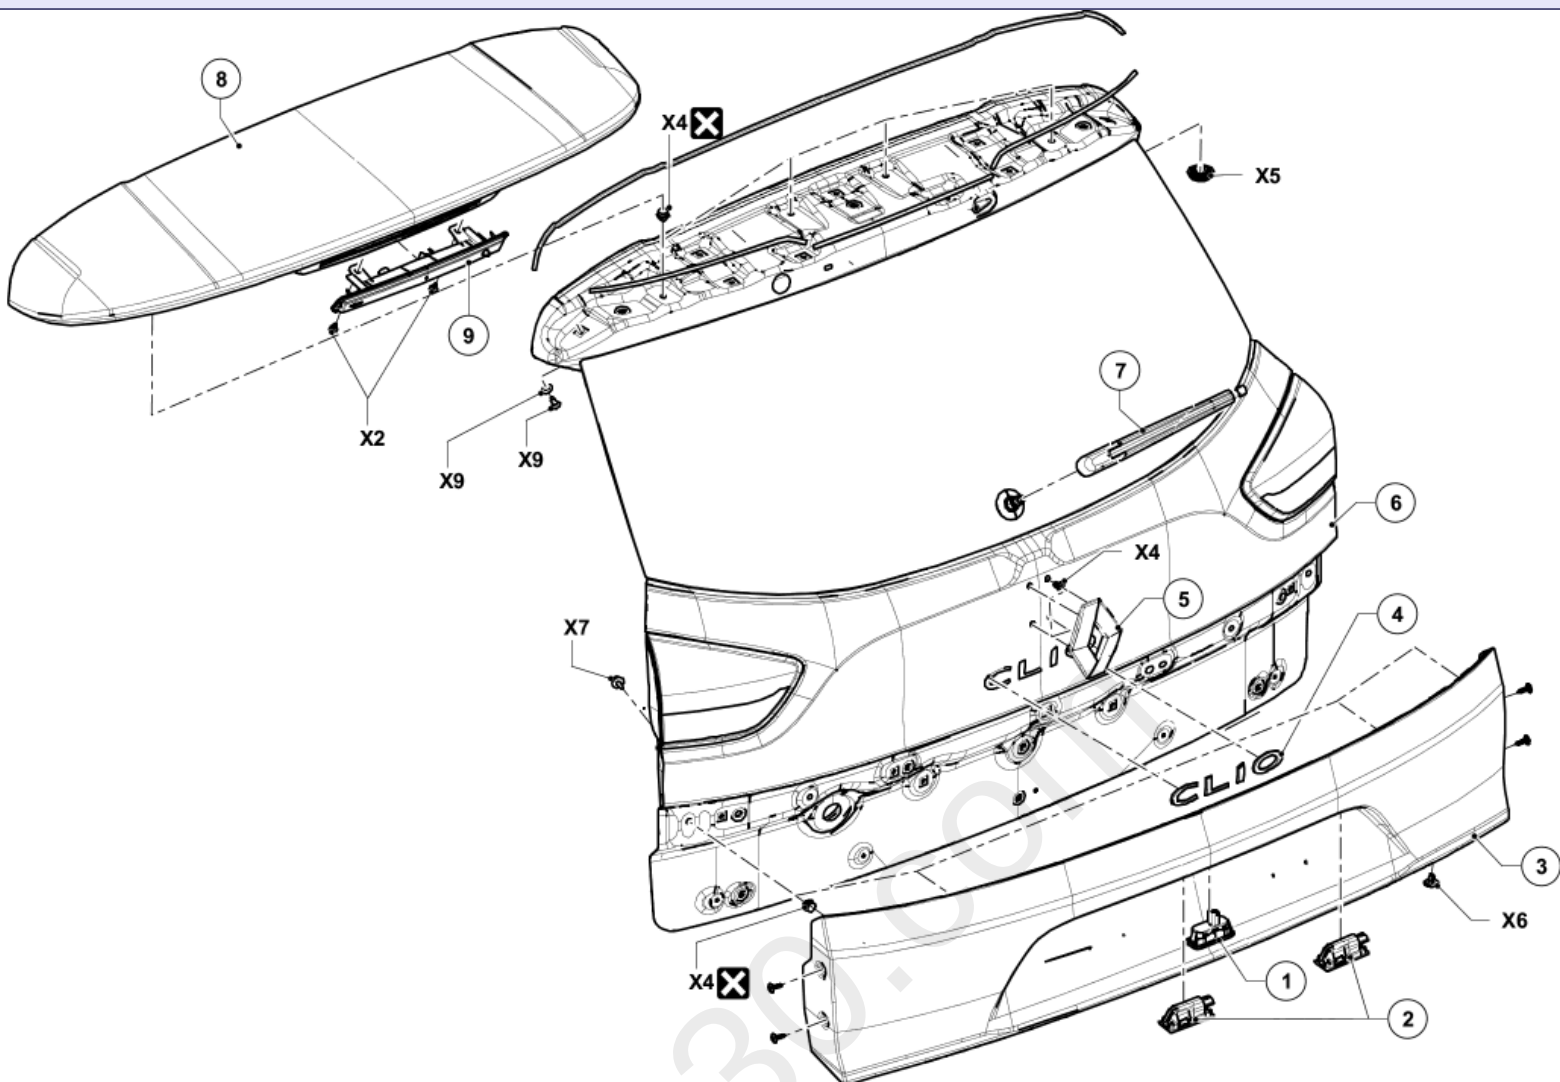

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .

Marks	Designations	Informations
1	Rear opening element opening switch	
2	Number plate lights	
3	Rear opening element strip	
4	Rear badge	
5	Rear badge	(Car. 1363)
6	Rear opening element	Rear opening element: Removal - Refitting
7	Rear screen wiper arm	Wiping and washing: List and location of components
8	Rear opening element spoiler	Material : ABS
9	3rd brake light	Rear signals - lighting assembly: Exploded view



EXTERIOR TEMPERATURE SENSOR: REMOVAL-REFITTING



Note:

The exterior temperature sensor is located in the door mirror on the right-hand side.

REMOVAL

1. REMOVAL PREPARATION OPERATION



Remove [Door mirror: Removal - Refitting](#) :



the right-hand door mirror glass,




the right-hand door mirror casing.

2. REMOVAL OPERATION



Remove the exterior temperature sensor from its mounting.

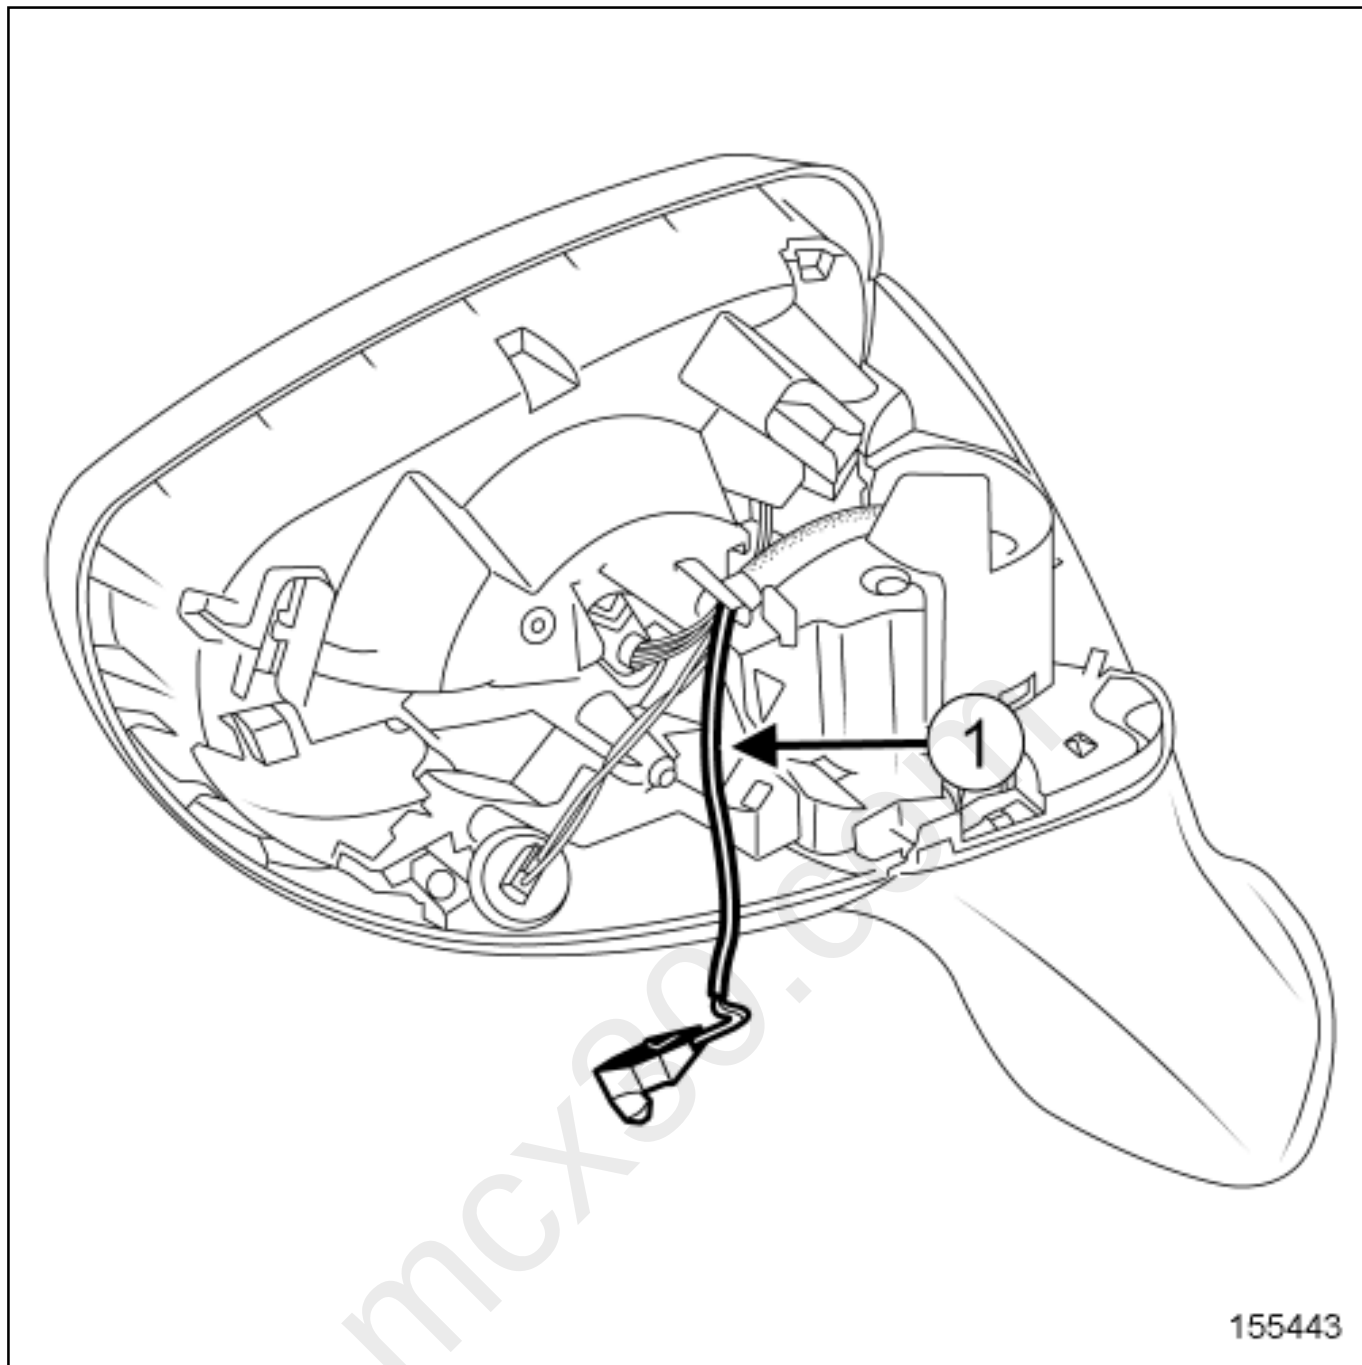

Cut the wires(1) of the exterior temperature sensor (see Wiring: Repair) (Technical Note 6015A, 88A, Wiring).

REFITTING

1. REFITTING OPERATION

