

Solder the wires of the exterior temperature sensor (see Wiring: Repair) (Technical Note 6015A, 88A, Wiring).



Refit the exterior temperature sensor onto its mounting.

2. FINAL OPERATION



Proceed in the reverse order to removal.



[Repair-30x02x04x13-01x37-1-19-1.xml](#)



XSL version : 3.02 du 22/07/11

mcx30.com

EXTERIOR TEMPERATURE SENSOR: REMOVAL-REFITTING



Note:

The exterior temperature sensor is located in the door mirror on the right-hand side.

REMOVAL

1. REMOVAL PREPARATION OPERATION



Remove [Door mirror: Removal - Refitting](#) :



the right-hand door mirror glass,




the right-hand door mirror casing.

2. REMOVAL OPERATION



Remove the exterior temperature sensor from its mounting.

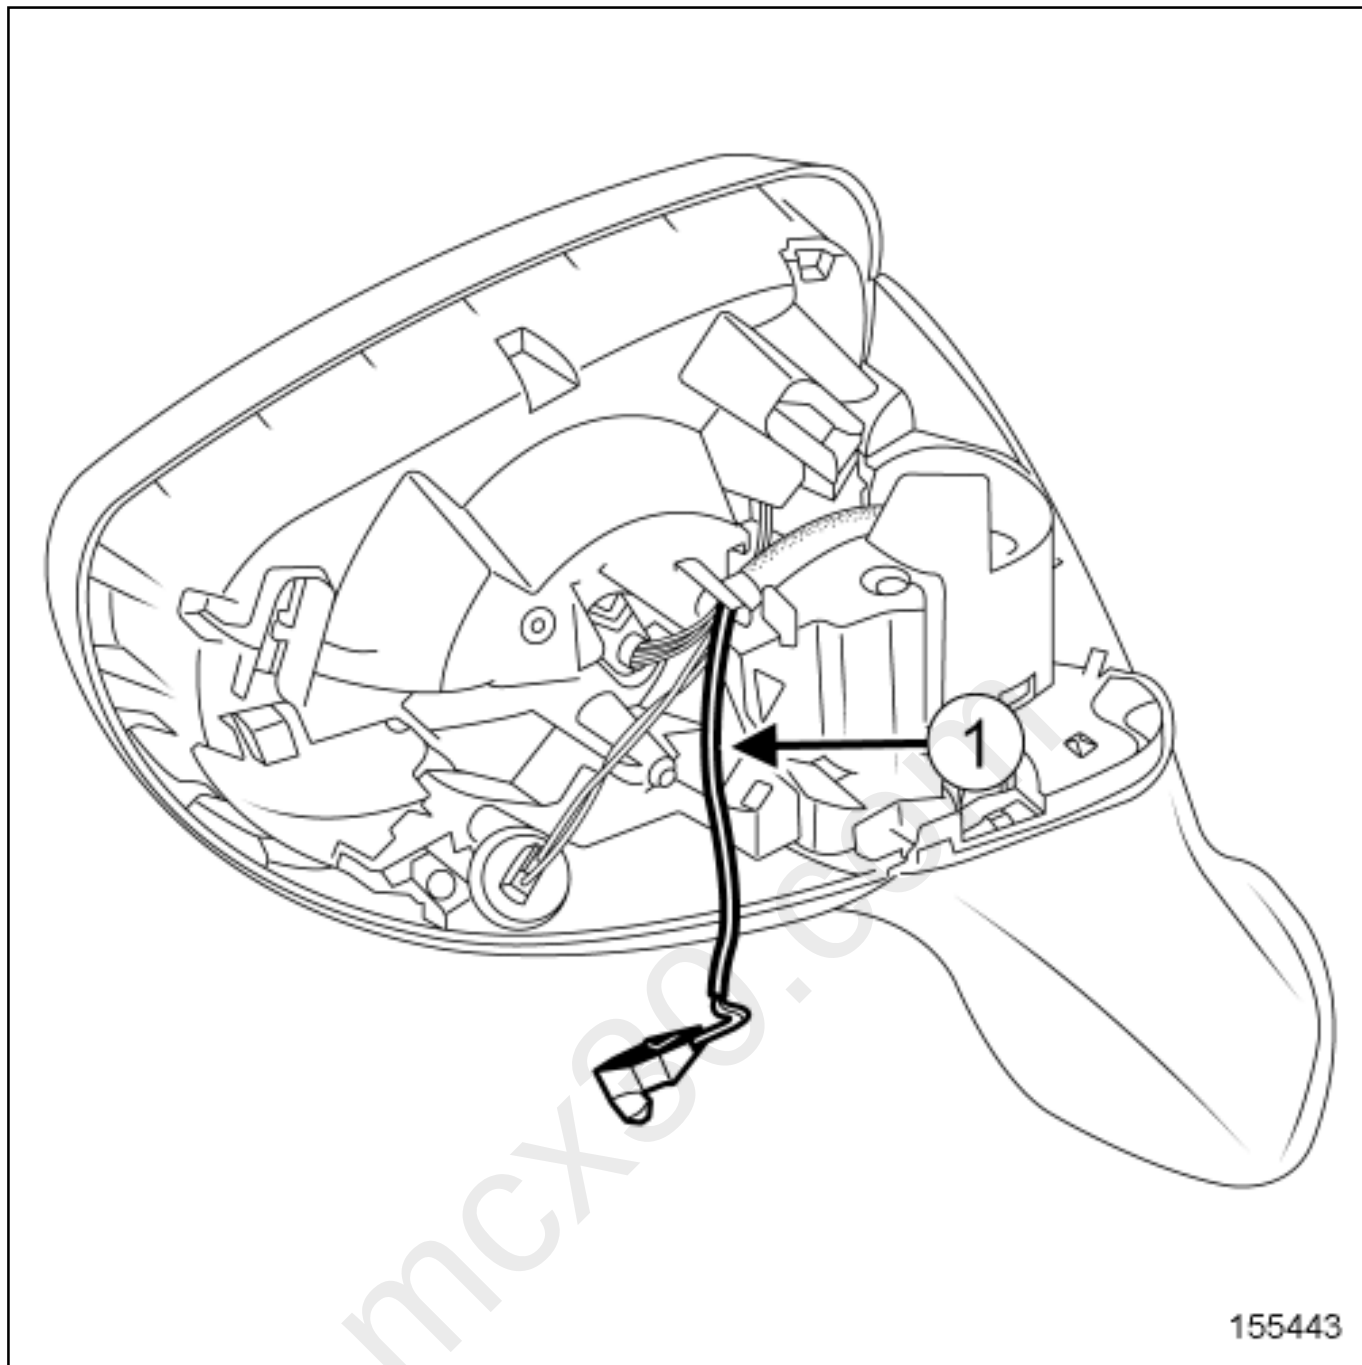

Cut the wires(1) of the exterior temperature sensor (see Wiring: Repair) (Technical Note 6015A, 88A, Wiring).

REFITTING

1. REFITTING OPERATION

