

Solder the wires of the exterior temperature sensor (see Wiring: Repair) (Technical Note 6015A, 88A, Wiring).



Refit the exterior temperature sensor onto its mounting.

2. FINAL OPERATION



Proceed in the reverse order to removal.



[Repair-30x02x04x13-01x37-1-19-1.xml](#)



XSL version : 3.02 du 22/07/11

mcx30.com

FAN ASSEMBLY: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts always to be replaced, etc.) ([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .



Note:

There are two types of fitting for the distribution unit: Valéo and Denso.


REMOVAL

1. REMOVAL PREPARATION OPERATION


❑ Remove the glovebox [Dashboard assembly: Exploded view](#) .

2. REMOVAL OPERATION

1- THIS PROCEDURE APPLIES TO VEHICLES EQUIPPED WITH A VALÉO DISTRIBUTION UNIT

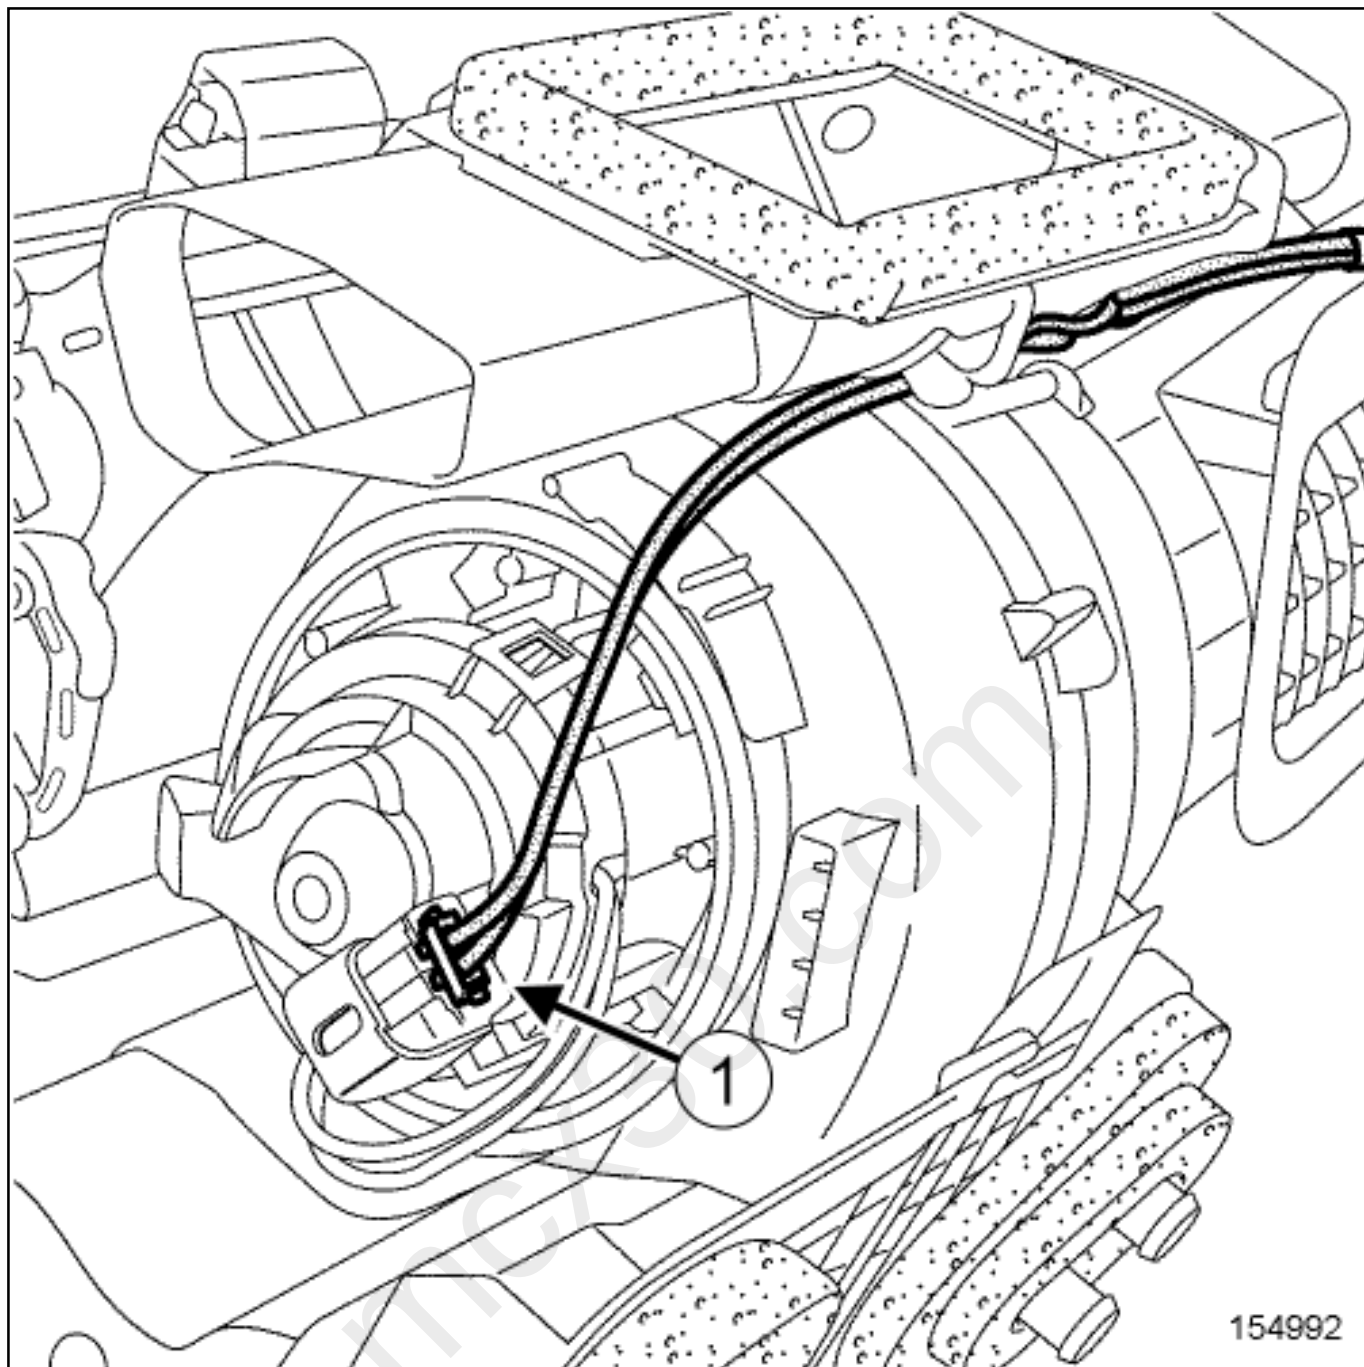


■ Disconnect the fan assembly connector(1) .

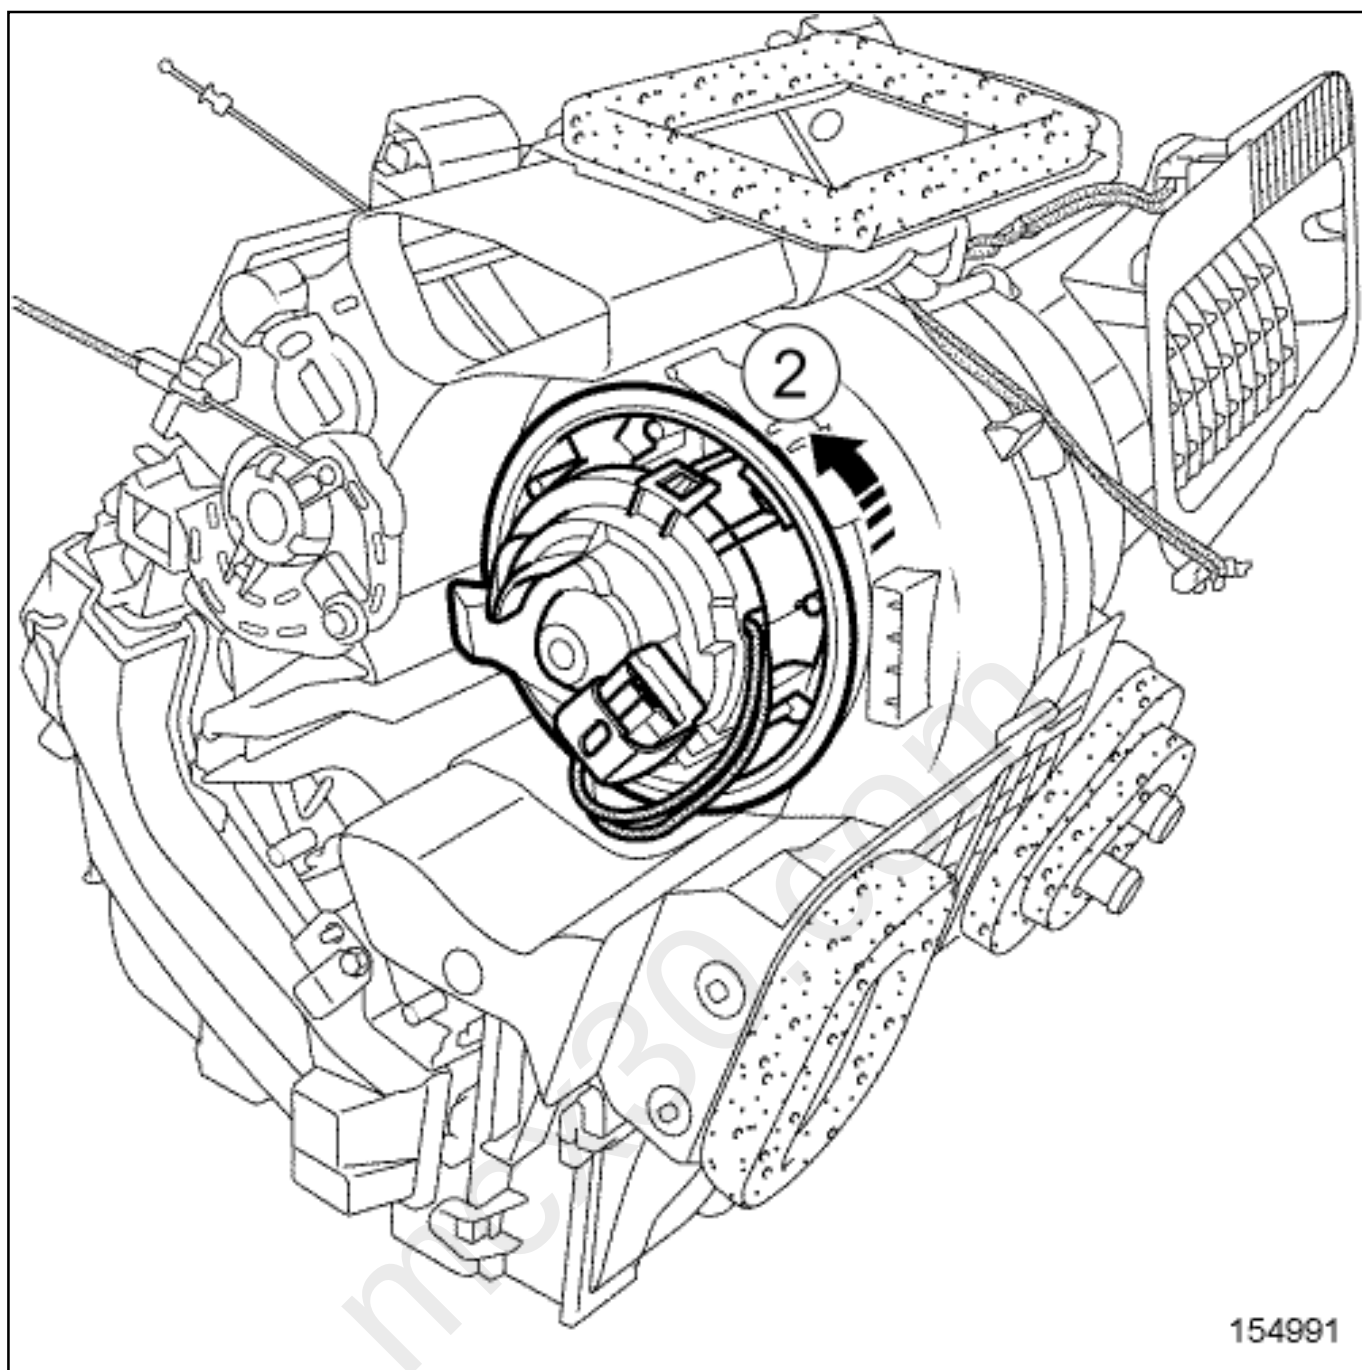

Turn the fan assembly anti-clockwise(2) .

Remove the fan assembly([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) .

2- THIS PROCEDURE APPLIES TO VEHICLES EQUIPPED WITH A DENSO DISTRIBUTION UNIT

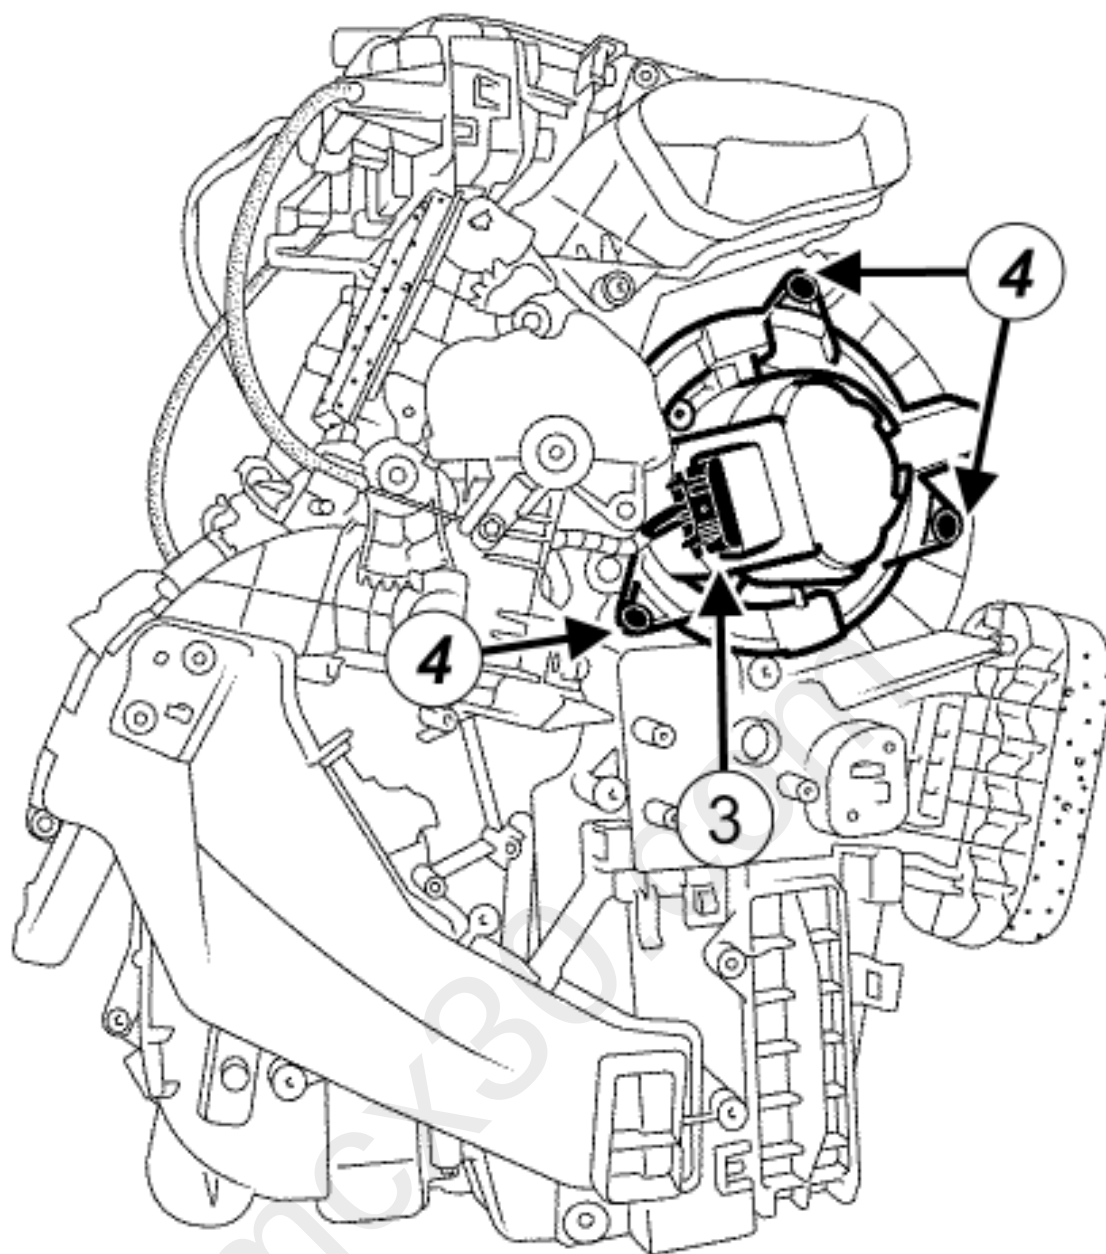

156321

Disconnect the fan assembly connector(3) .

Remove:

- the fan assembly bolts(4) ,

- the fan assembly.