



mcx30.com

FRONT AIR INLET DUCT: REMOVAL - REFITTING

Locations and specifications (tightening torques, parts to always be replaced, etc.) ([see 61A, Heating, Air distribution circuit assembly: Exploded view](#)) .

REMOVAL

1. REMOVAL PREPARATION OPERATION



Remove:

- the dashboard [Dashboard assembly: Exploded view](#) ,
- the front left-hand side air duct ([see 61A, Heating, Air distribution circuit assembly: Exploded view](#)) .

2. REMOVAL OPERATION



Disconnect ([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) :

- the connector of the modulate variation of speed of fan assembly for passenger compartment (only for Valéo fitting),
- the recirculation motor connector,
- the toxicity sensor connector if equipped,
- the distribution unit supply connector.



Remove the front air inlet duct ([see 61A, Heating, Air distribution circuit assembly: Exploded view](#)) .



In the event of replacement, remove ([see 61A, Heating, Passenger compartment heating and ventilation assembly: Exploded view](#)) :

- the modulate variation of speed of fan assembly for passenger compartment (only for Valéo fitting),