

Not adjustable.

3- CAMBER



Not adjustable.

4-PIVOT



Not adjustable.



Calibrate the steering wheel angle sensor.



Apply the after repair procedure:



connect the Diagnostic tool,

select "Braking computer",

go to repair mode,

display the "Before/after repair procedure" for the computer selected,

select "Steering wheel angle sensor" in the "List of components controlled by this computer" section,

carry out the operations described in the "After repair procedure" section.



Repair-13x02x01-01x67-2-13-1.xml



FRONT AXLE




Note, one or more warnings are present in this procedure



1. WHEEL ALIGNMENT: MEANING OF SYMBOLS

TOE-OUT: MINUS SIGN

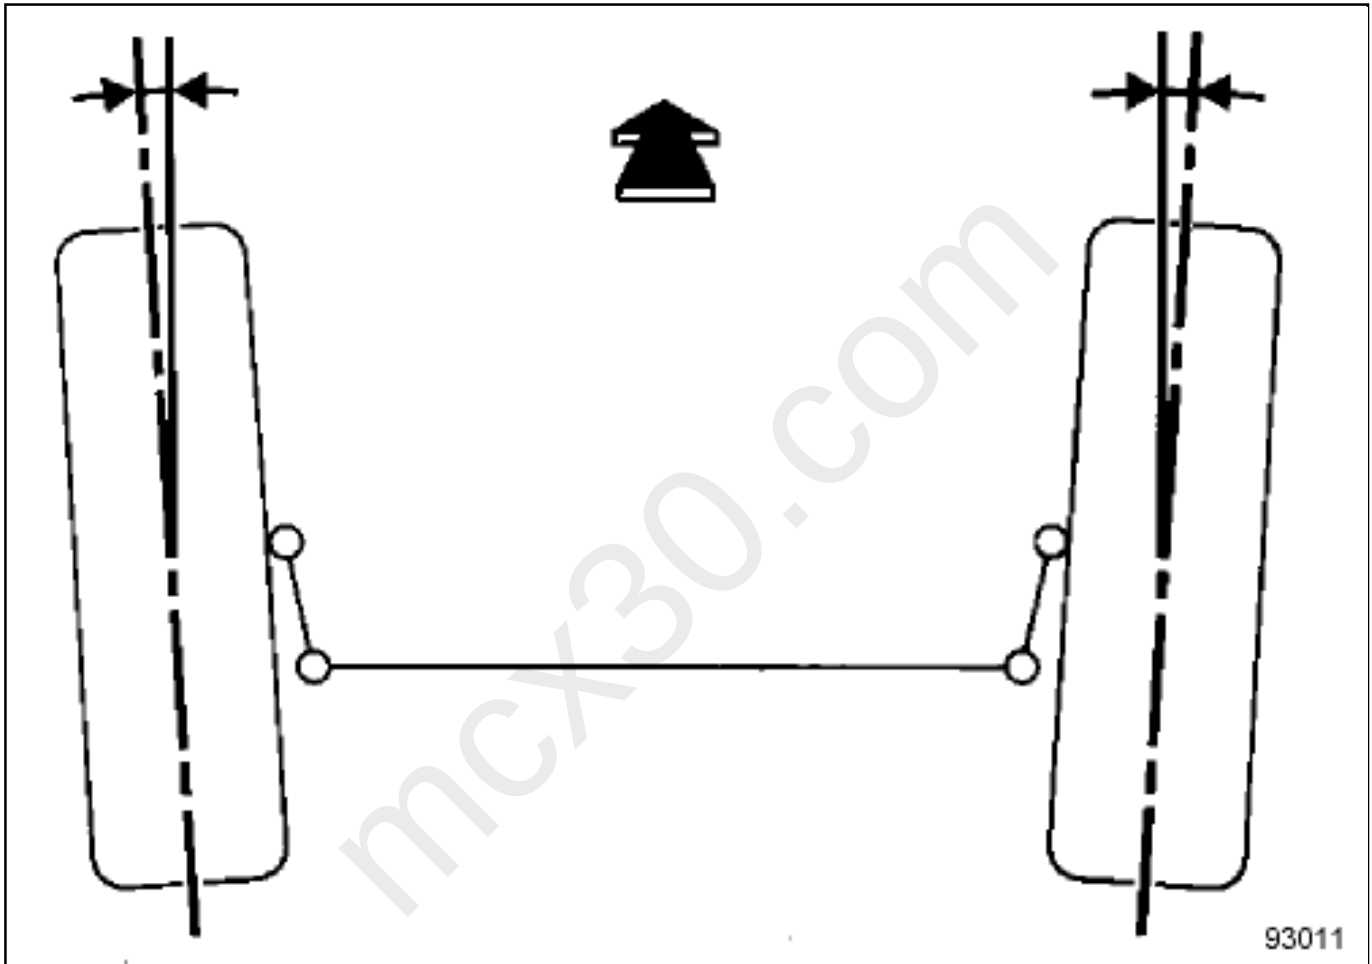

CAUTION



Symbols used by RENAULT:




toe-out: -,



toe-in: +.

TOE-IN: PLUS SIGN

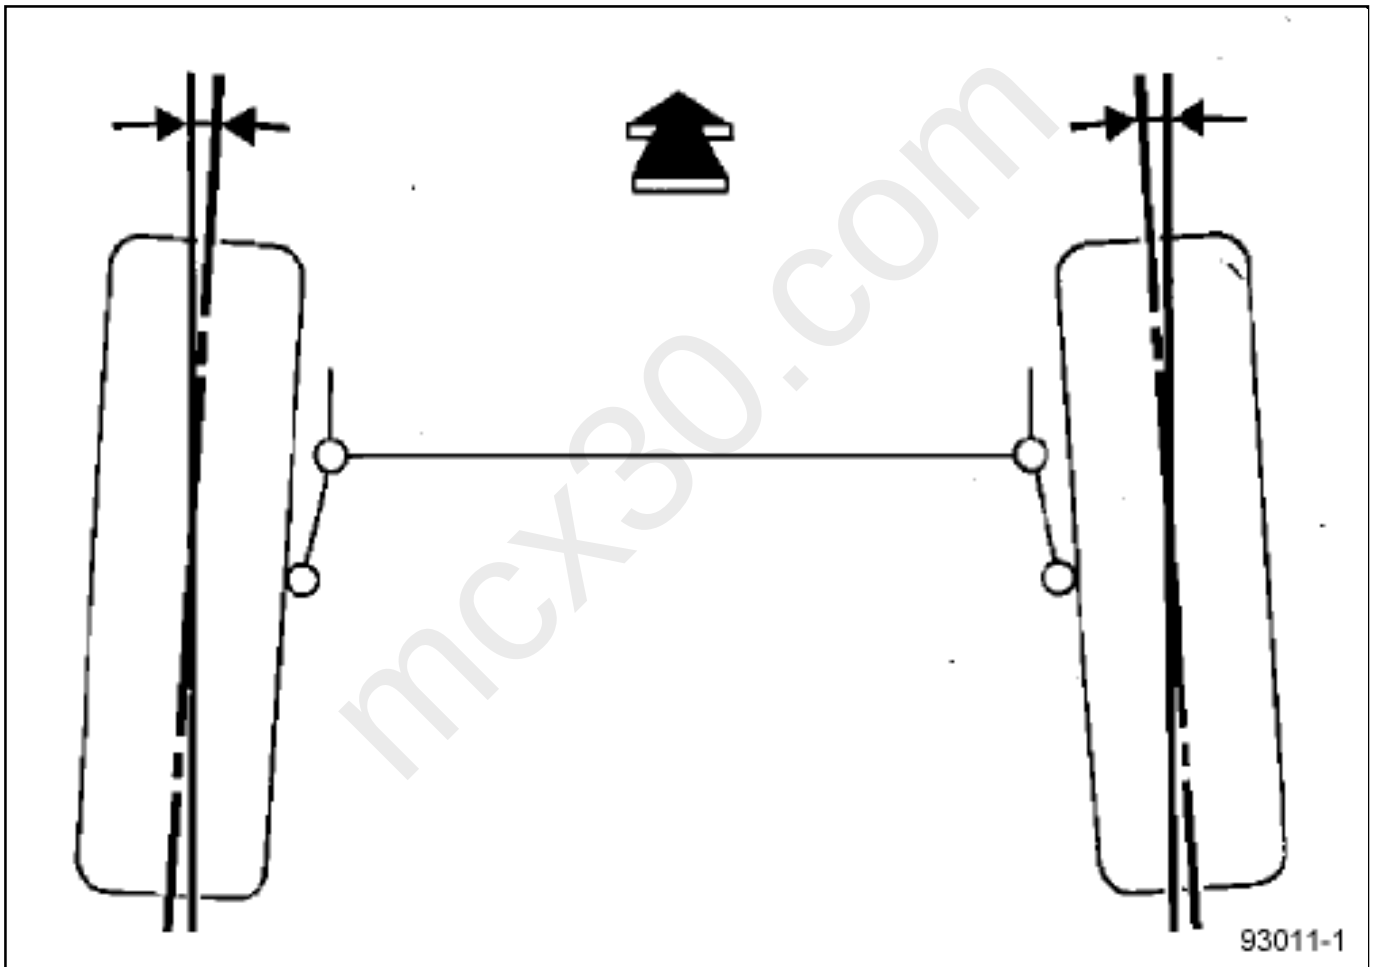

CAUTION



Symbols used by RENAULT:




toe-out: -,




toe-in: +.

2. WHEEL ALIGNMENT

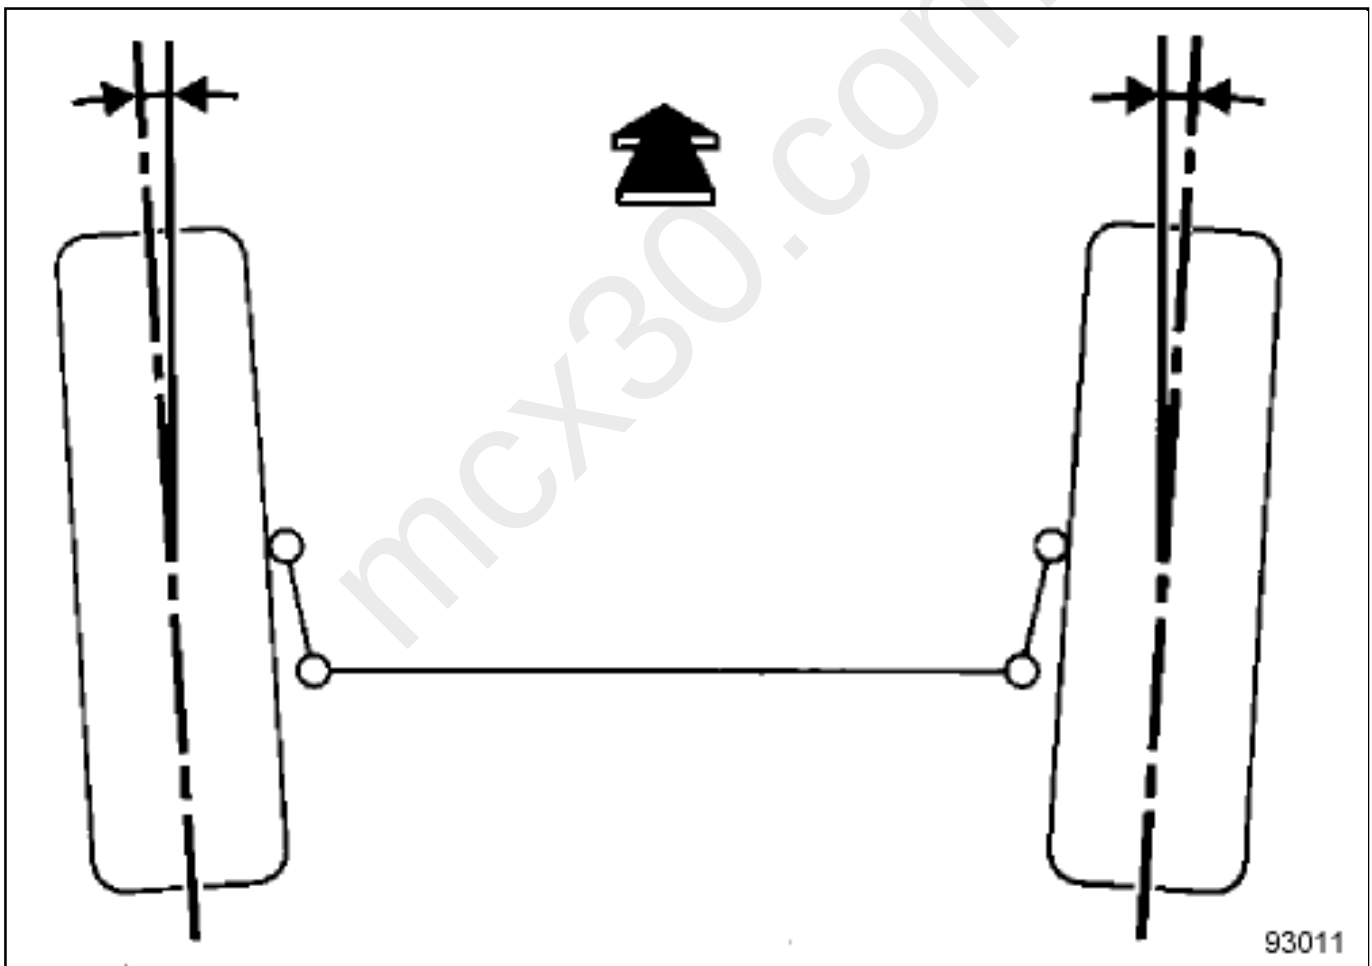


3. CASTOR ANGLE

Not adjustable.

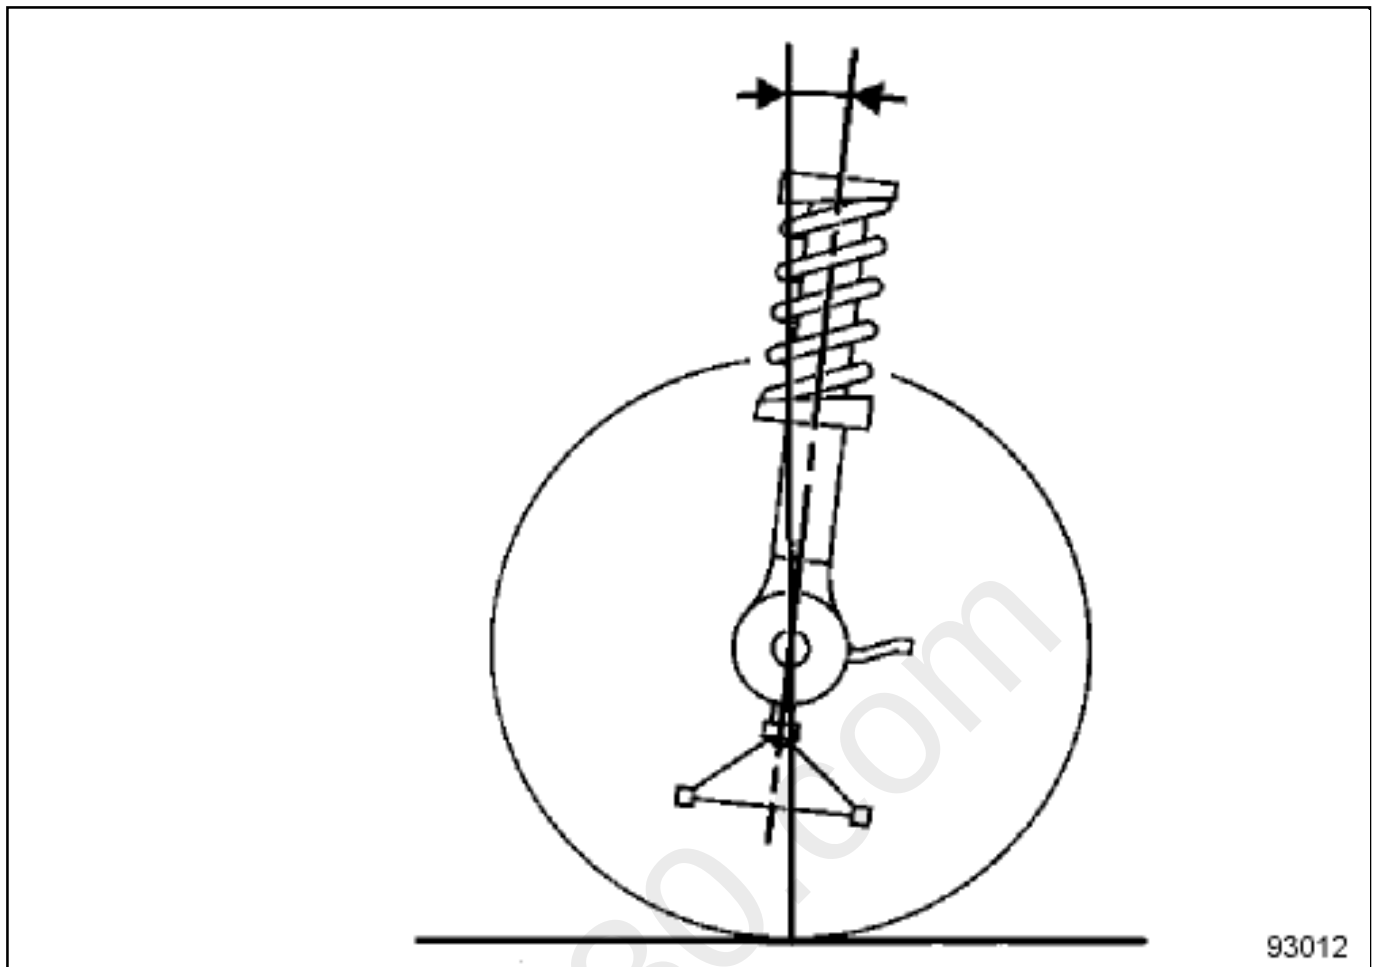

4. CAMBER

Not adjustable.

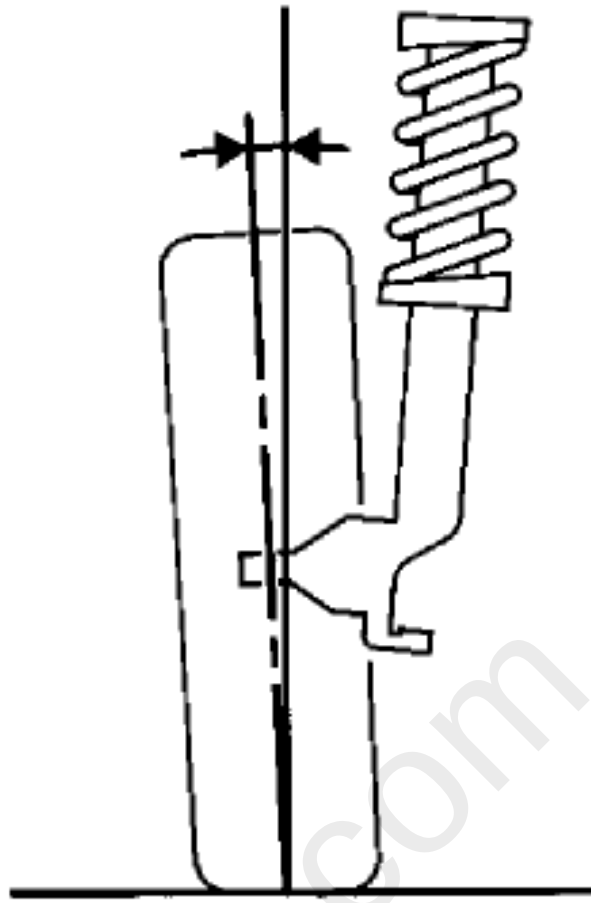

93013

5. PIVOT

Not adjustable.