


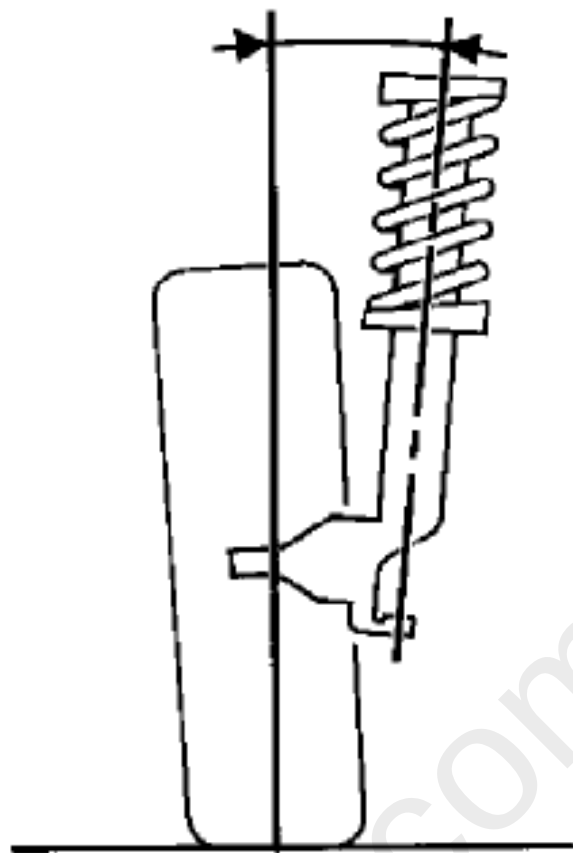

93014



Repair-13x02x01-02x13-6-37-1.xml



FRONT AXLE




Note, one or more warnings are present in this procedure



1. WHEEL ALIGNMENT: MEANING OF SYMBOLS

TOE-OUT: MINUS SIGN

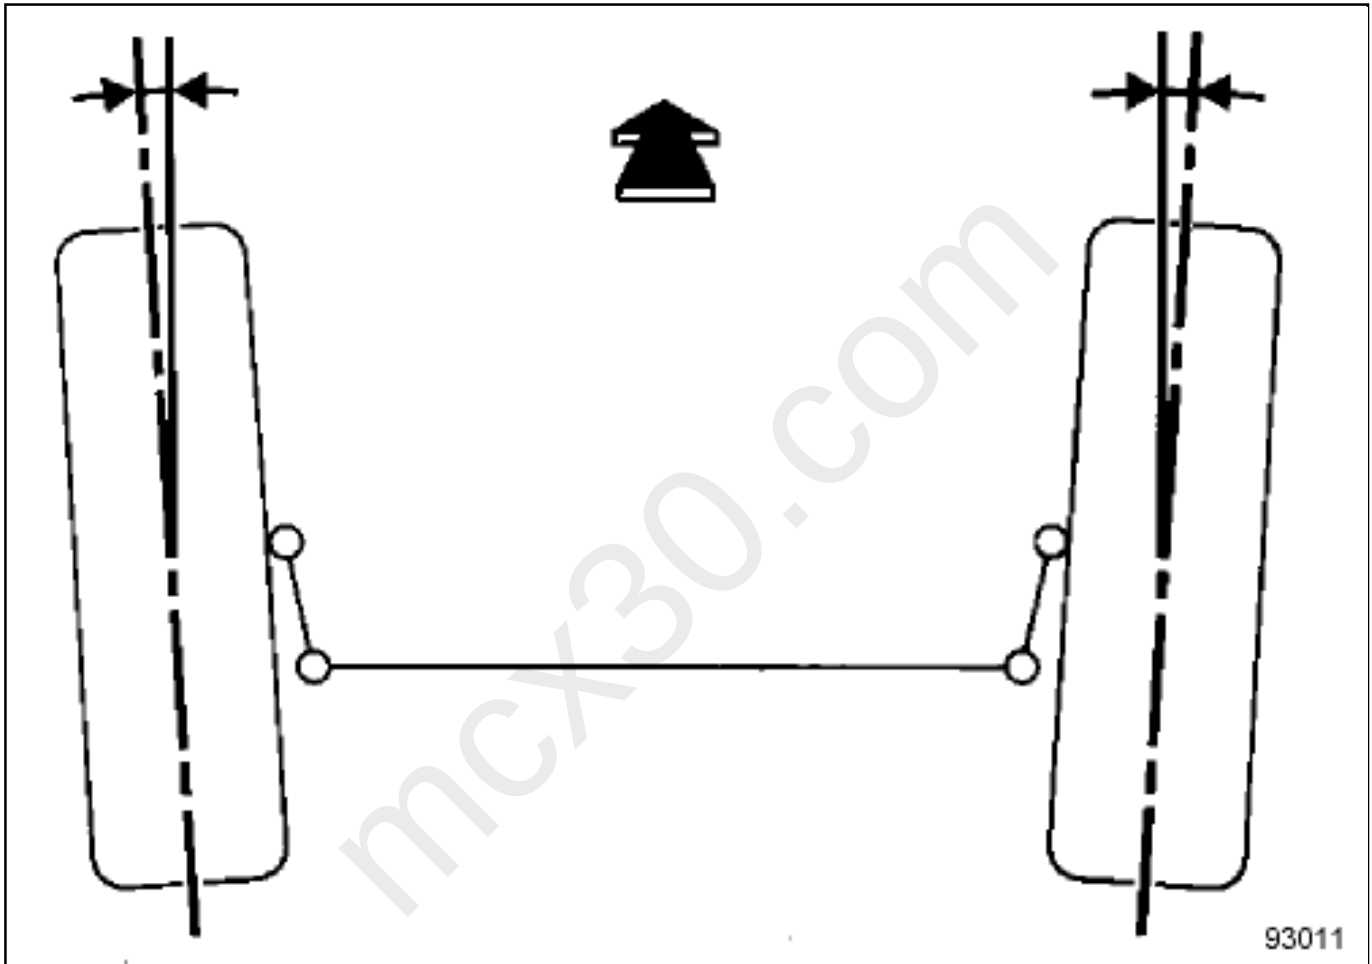

CAUTION



Symbols used by RENAULT:




toe-out: -,



toe-in: +.

TOE-IN: PLUS SIGN

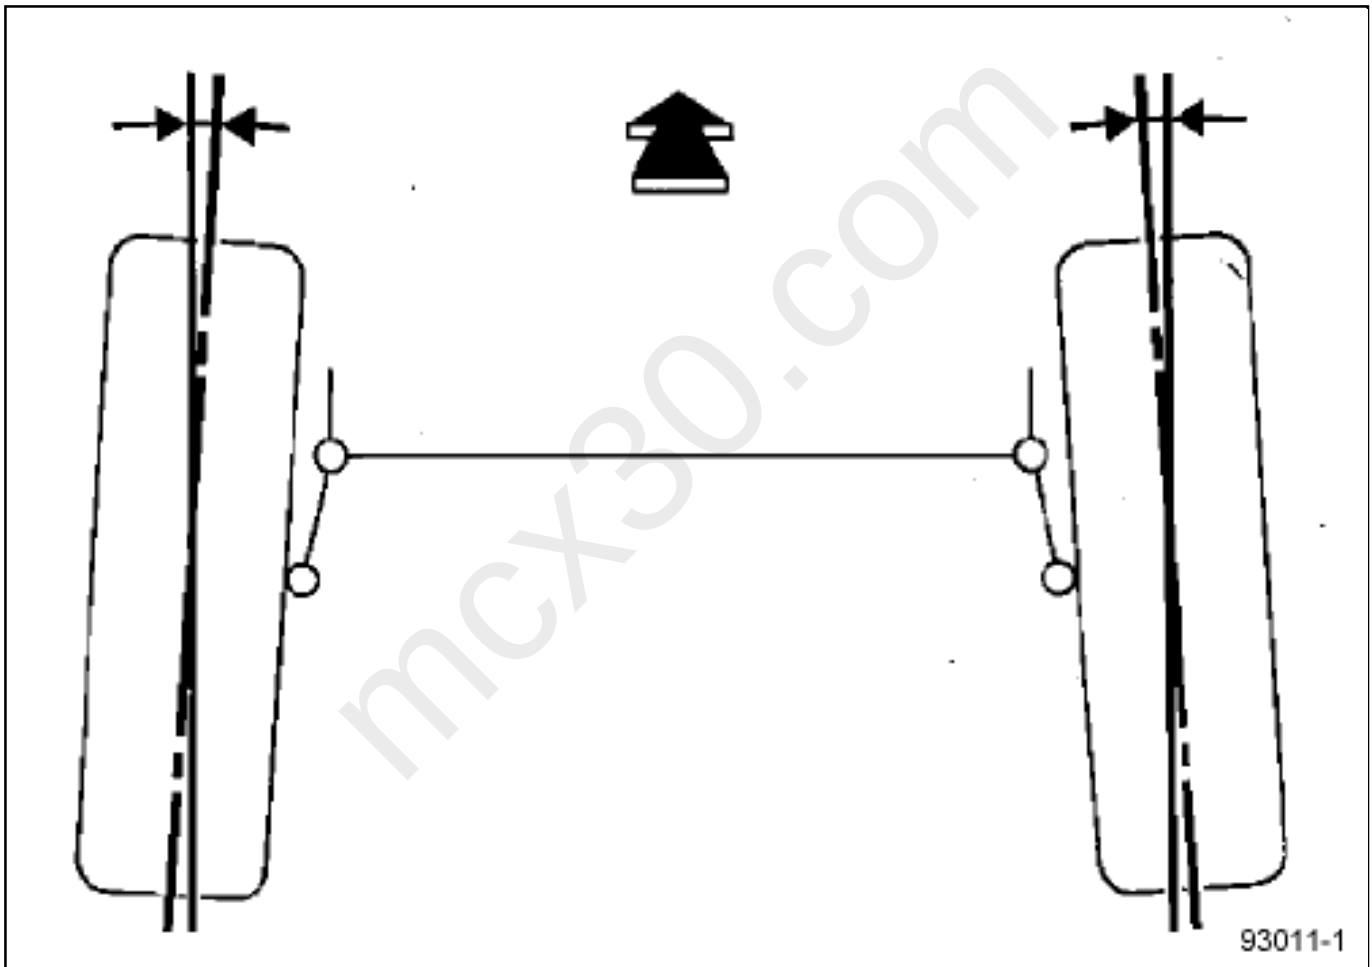

CAUTION



Symbols used by RENAULT:




toe-out: -,



toe-in: +.


2. WHEEL ALIGNMENT

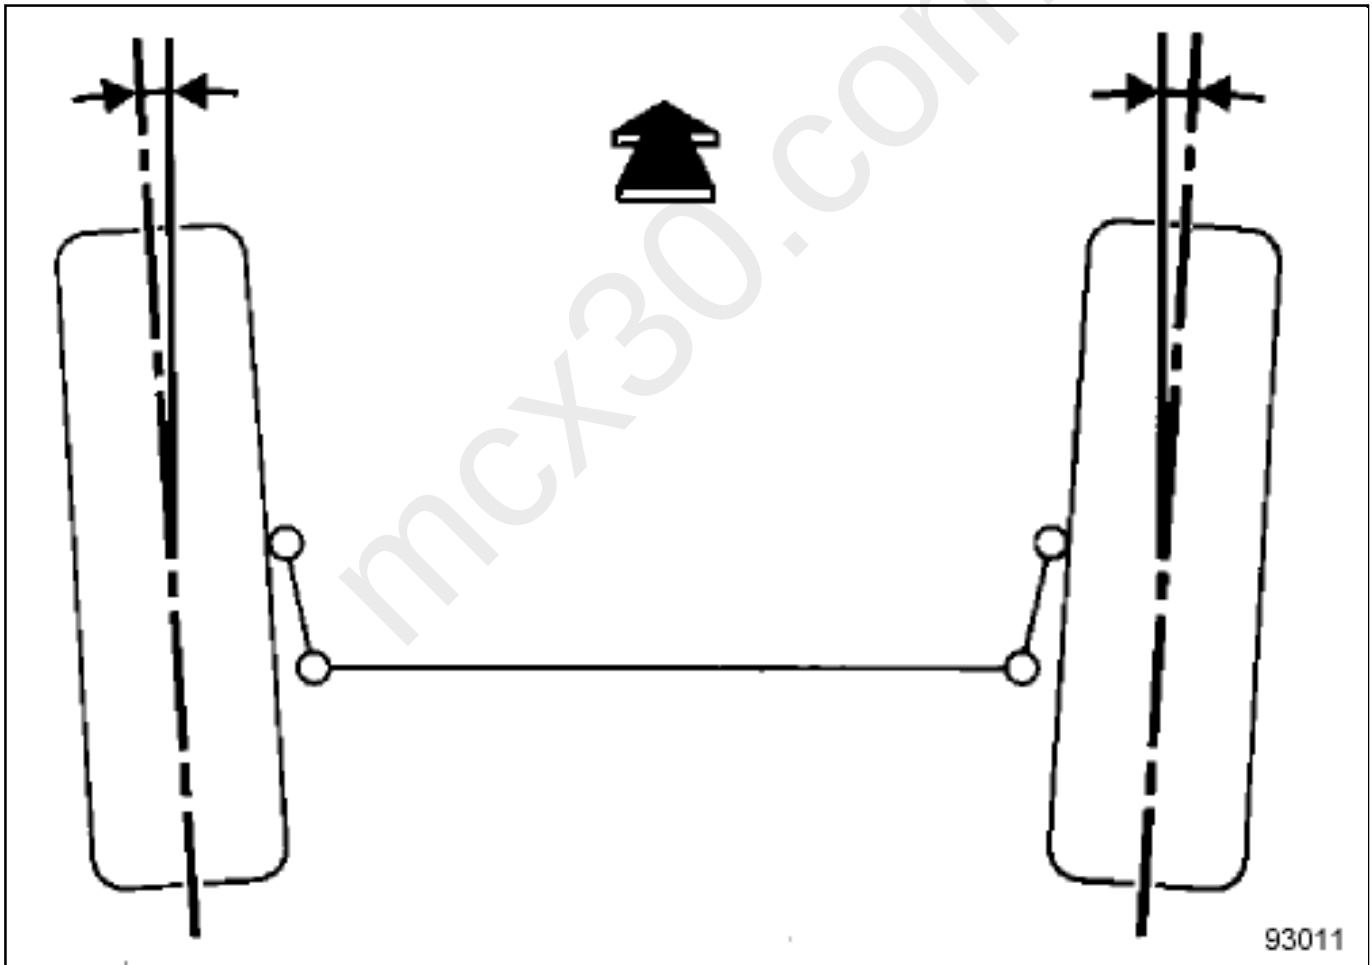

Value (for two wheels)	Tolerance	Position of vehicle
-10'	+10'	Vehicle in running order
	-10'	

3. CASTOR ANGLE


Not adjustable.

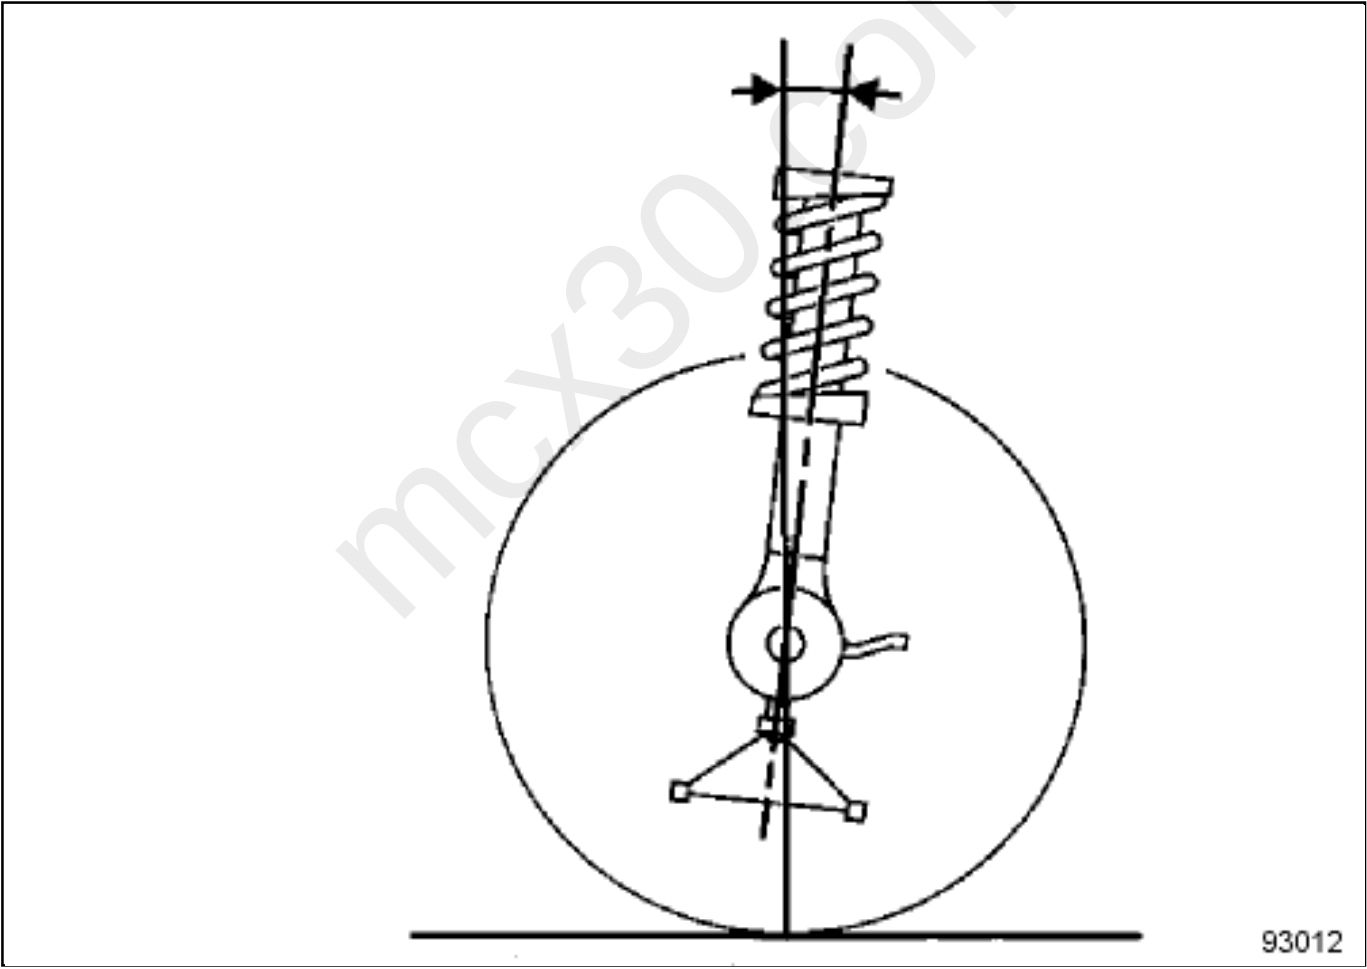

Value	Tolerance	Position of vehicle
+5°56'	+60'	Vehicle in running order
	-60'	

4. CAMBER

Not adjustable.

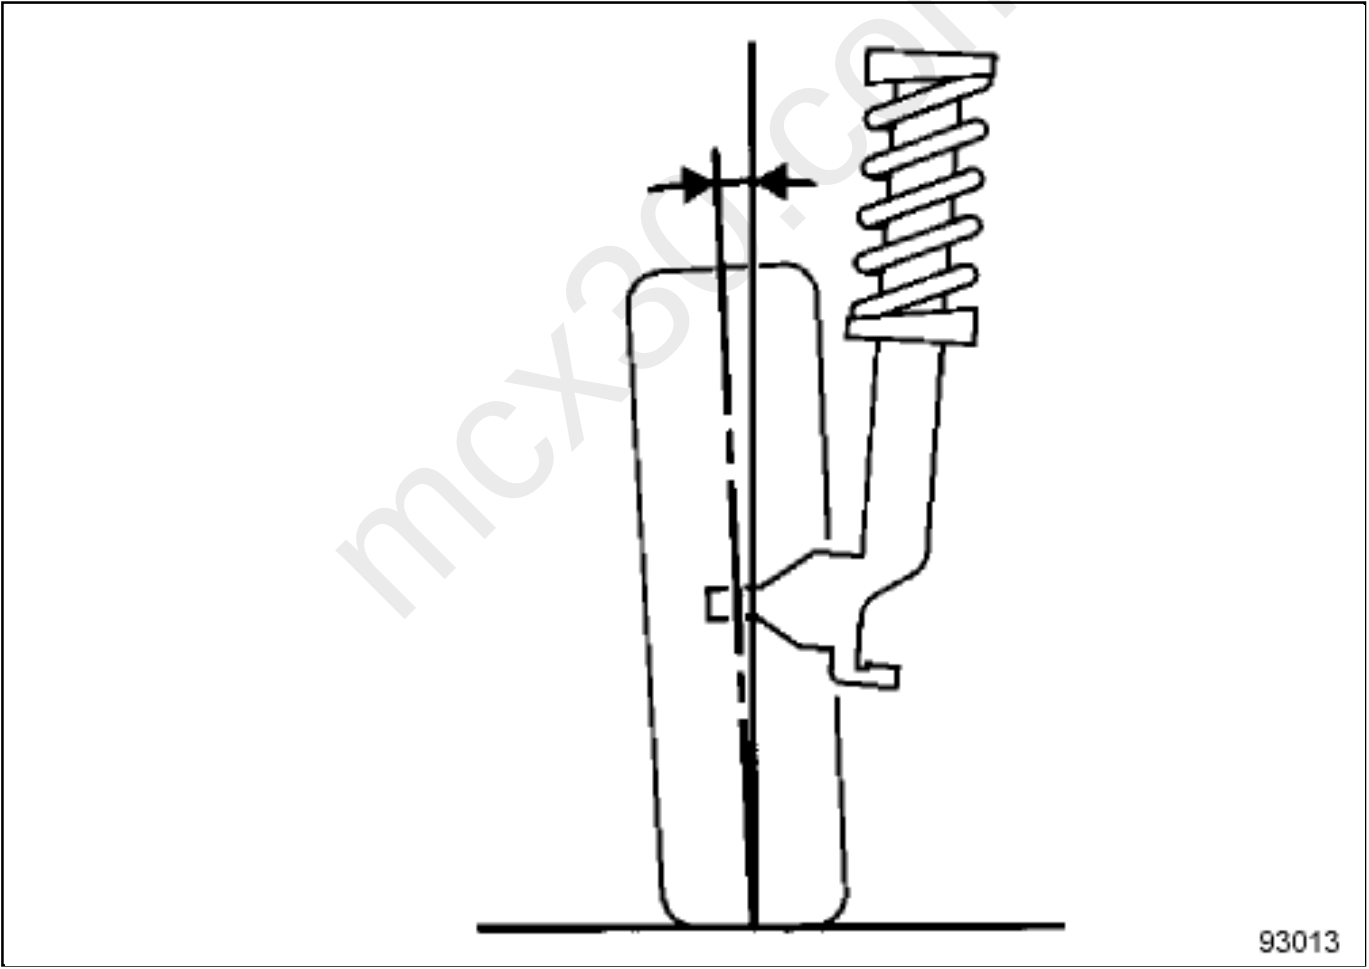

Value	Tolerance	Position of vehicle
-30'	+60'	Vehicle in running order
	-60'	

5. PIVOT

Not adjustable.

