

1. REFITTING OPERATION



Refit:



the front bumper support,



the bolts.

2. FINAL OPERATION



Proceed in the reverse order to removal.



Repair-40x06x06x12-01x37-1-3-1.xml



XSL version : 3.02 du 22/07/11

FRONT BUMPER: REMOVAL - REFITTING

Special tooling required

Set of trim removal levers.


Car. 1363

Location and specification (tightening torques, parts always to be replaced, etc.)[\(see 55A, Exterior protection, Front bumper assembly: Exploded view\)](#) .

REMOVAL


1. REMOVAL PREPARATION OPERATION

- Position the vehicle on a two-post lift[Vehicle: Towing and lifting](#) .
- Remove the front wheels[Front hub carrier assembly: Exploded view](#) .
- Remove the front section of the front wheel arch liners[\(see 55A, Exterior protection, Exterior body front trim assembly: Exploded view\)](#) .

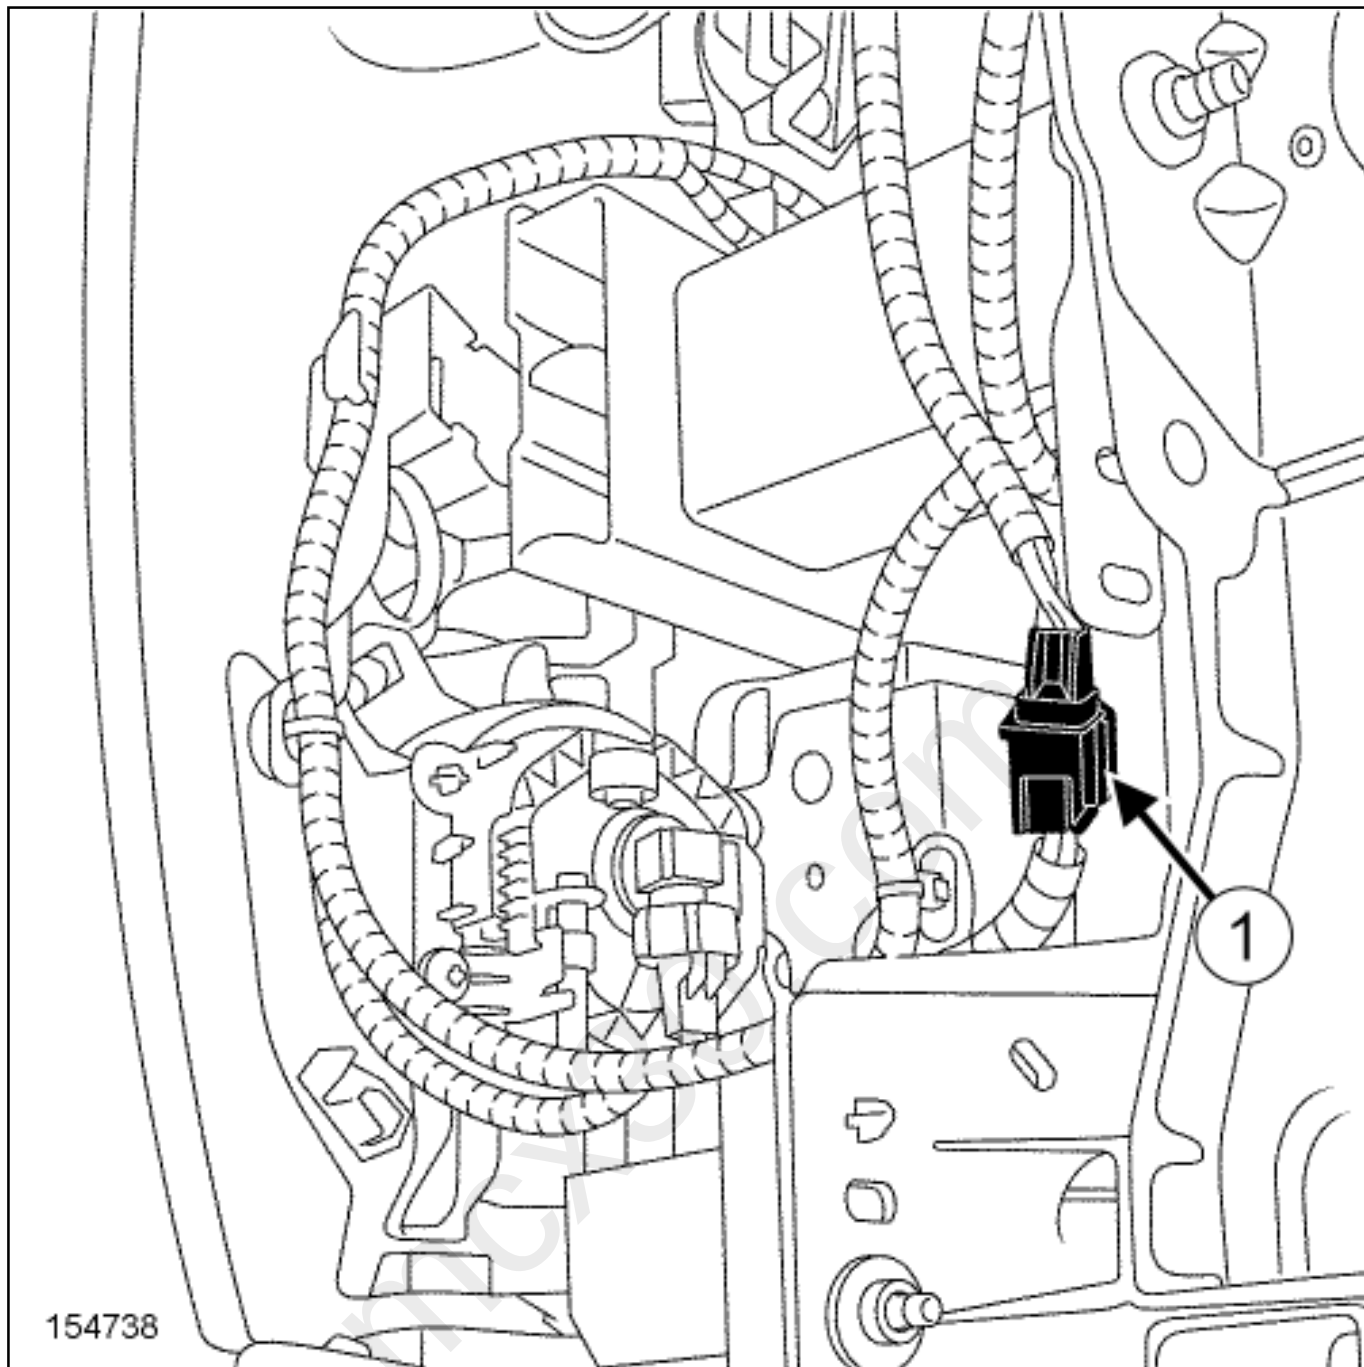


- Unclip the front bumper wiring connector(1) .
- Disconnect the front bumper wiring connector.


2. REMOVAL OPERATION

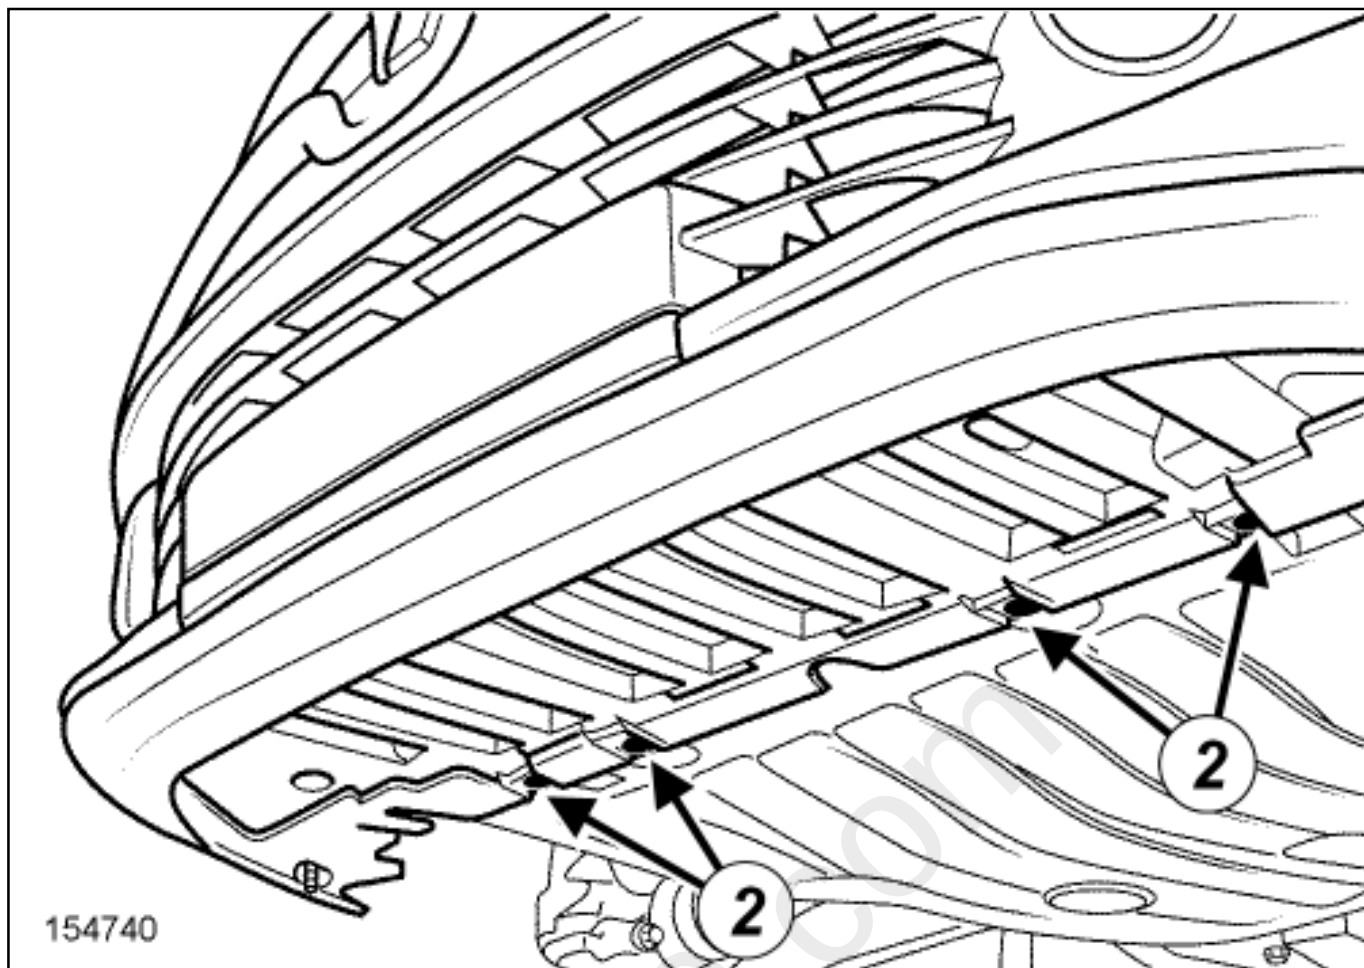


- Remove the front bumper lower diffuser bolts(2).

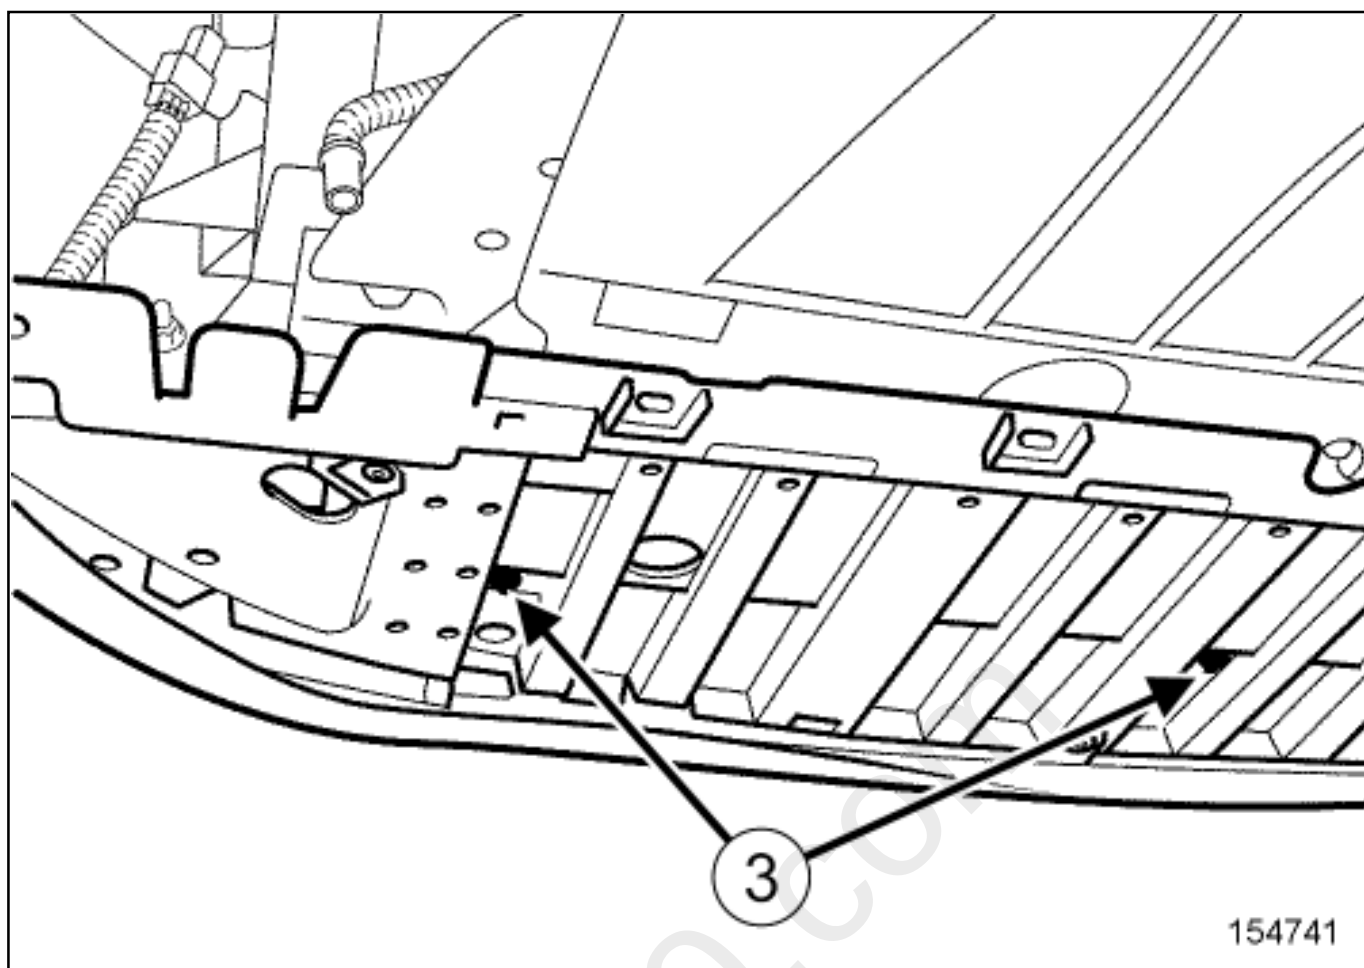

- Remove the front bumper lower diffuser bolts(3) .

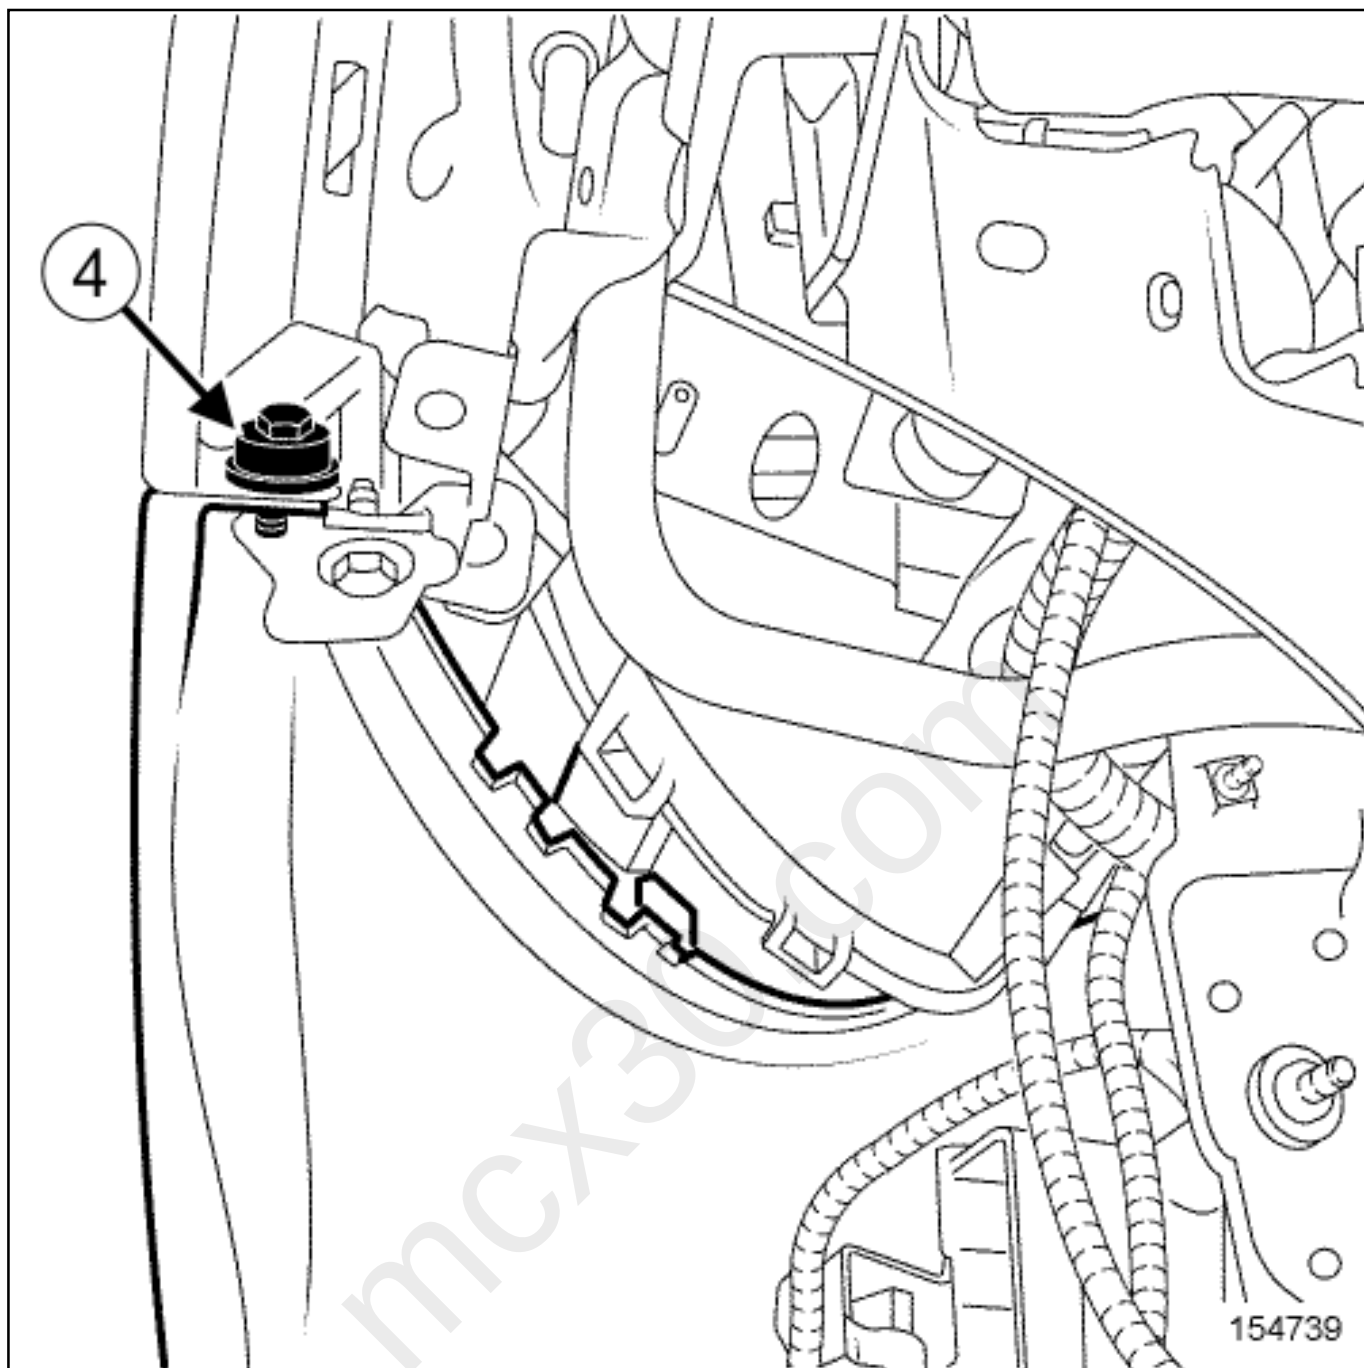


- Remove the side bolt from the front bumper(4) .

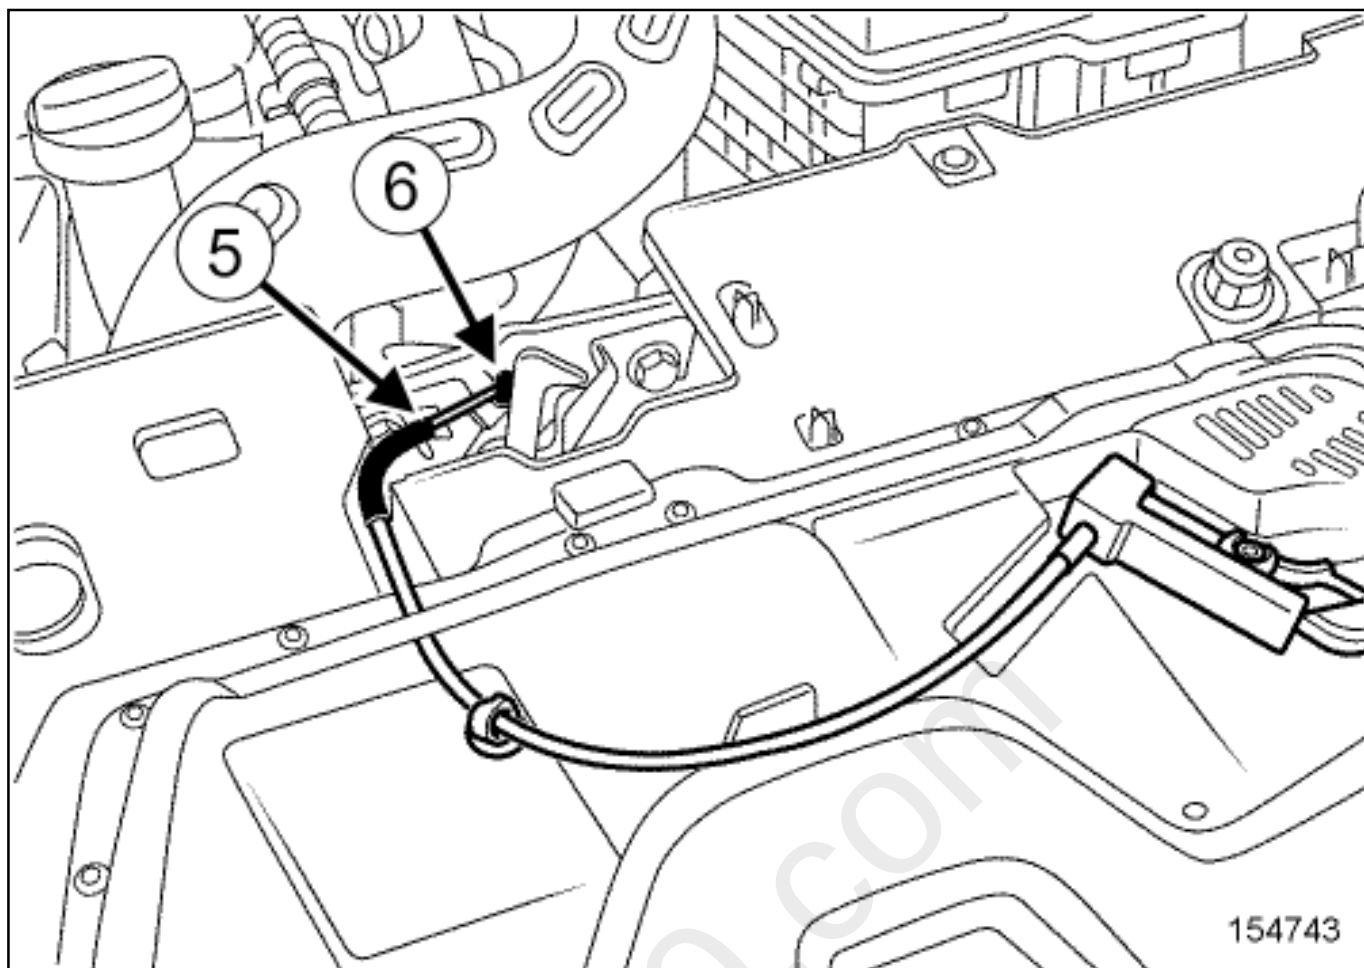


■ Unclip the bonnet opening cable sheath stop from the opening element lock(5) .




Unclip the bonnet opening cable stop(6) .

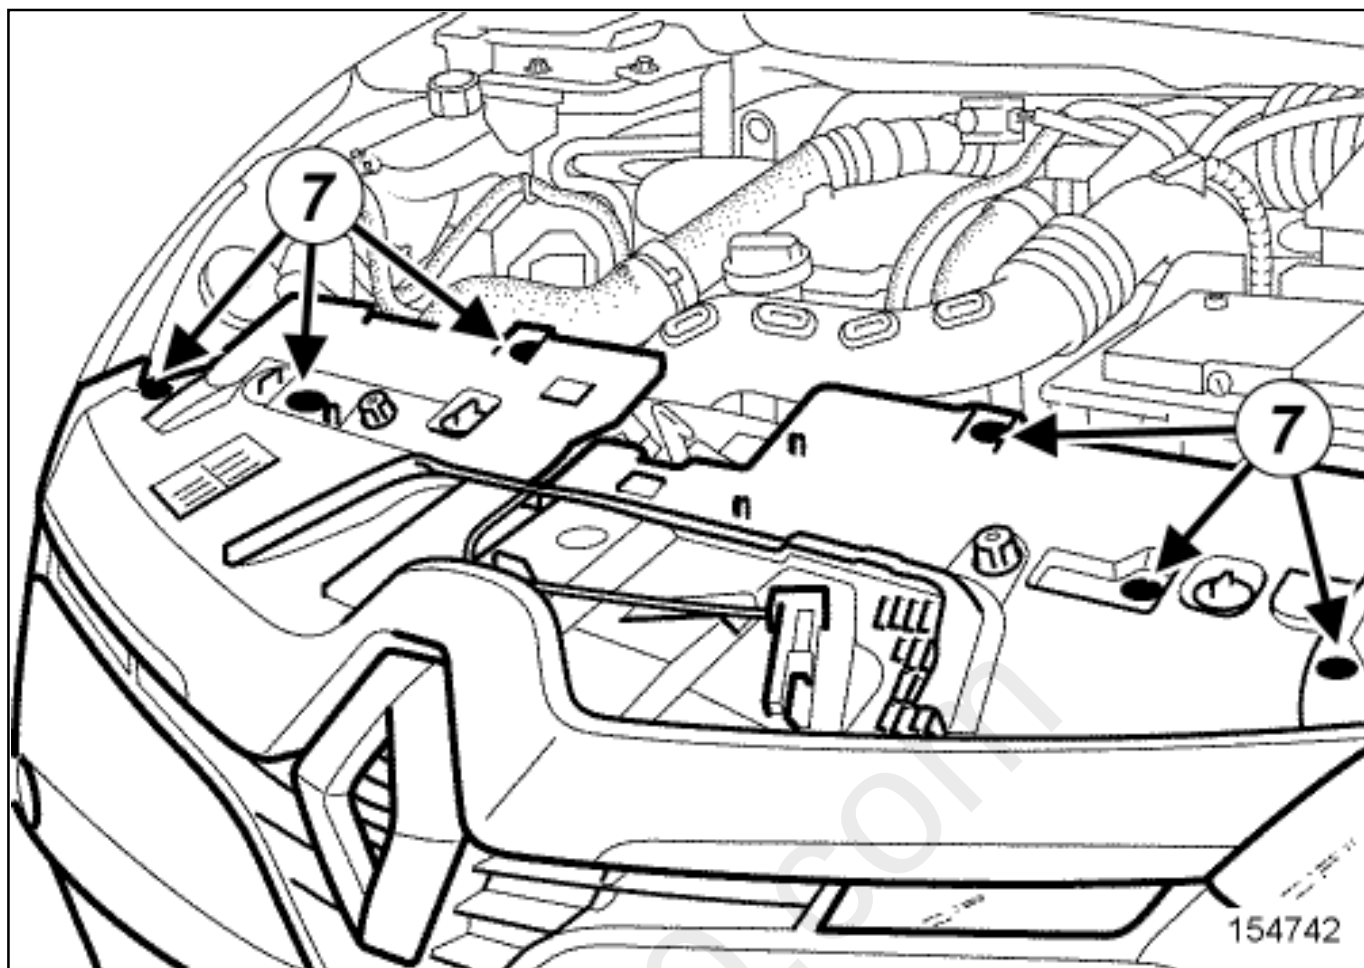

Remove the front bumper upper bolts(7) .

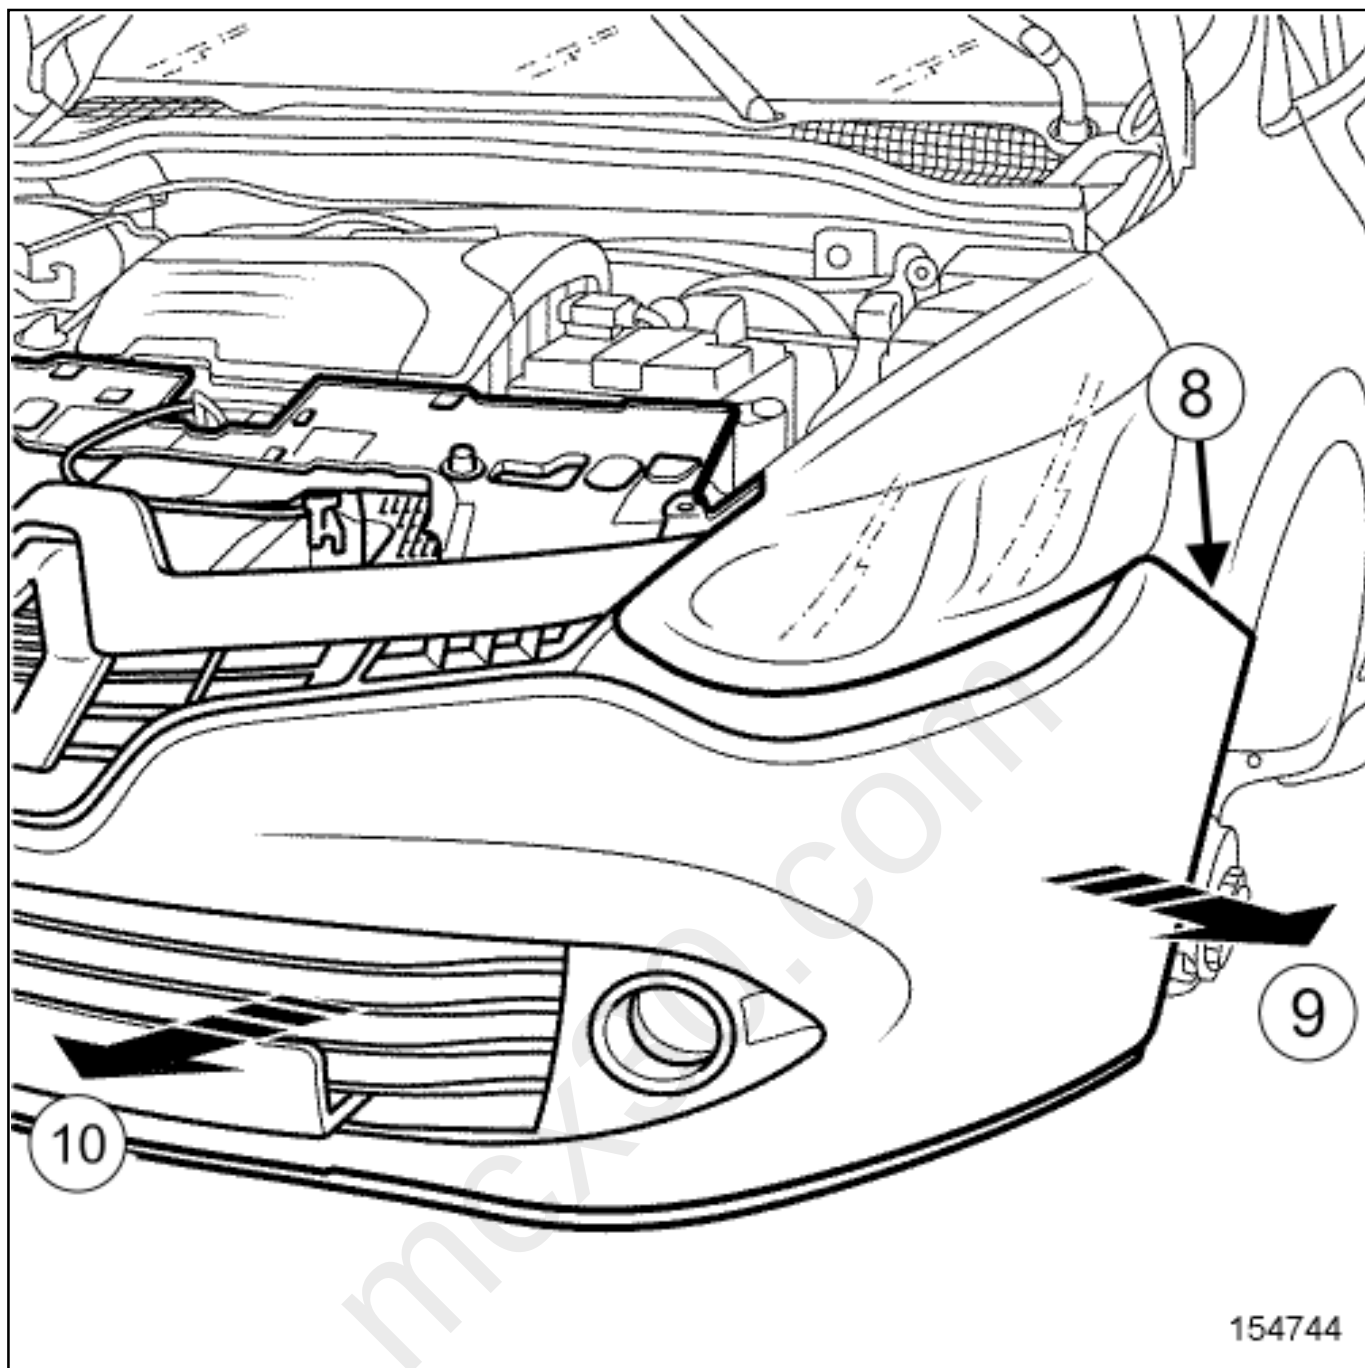

154744

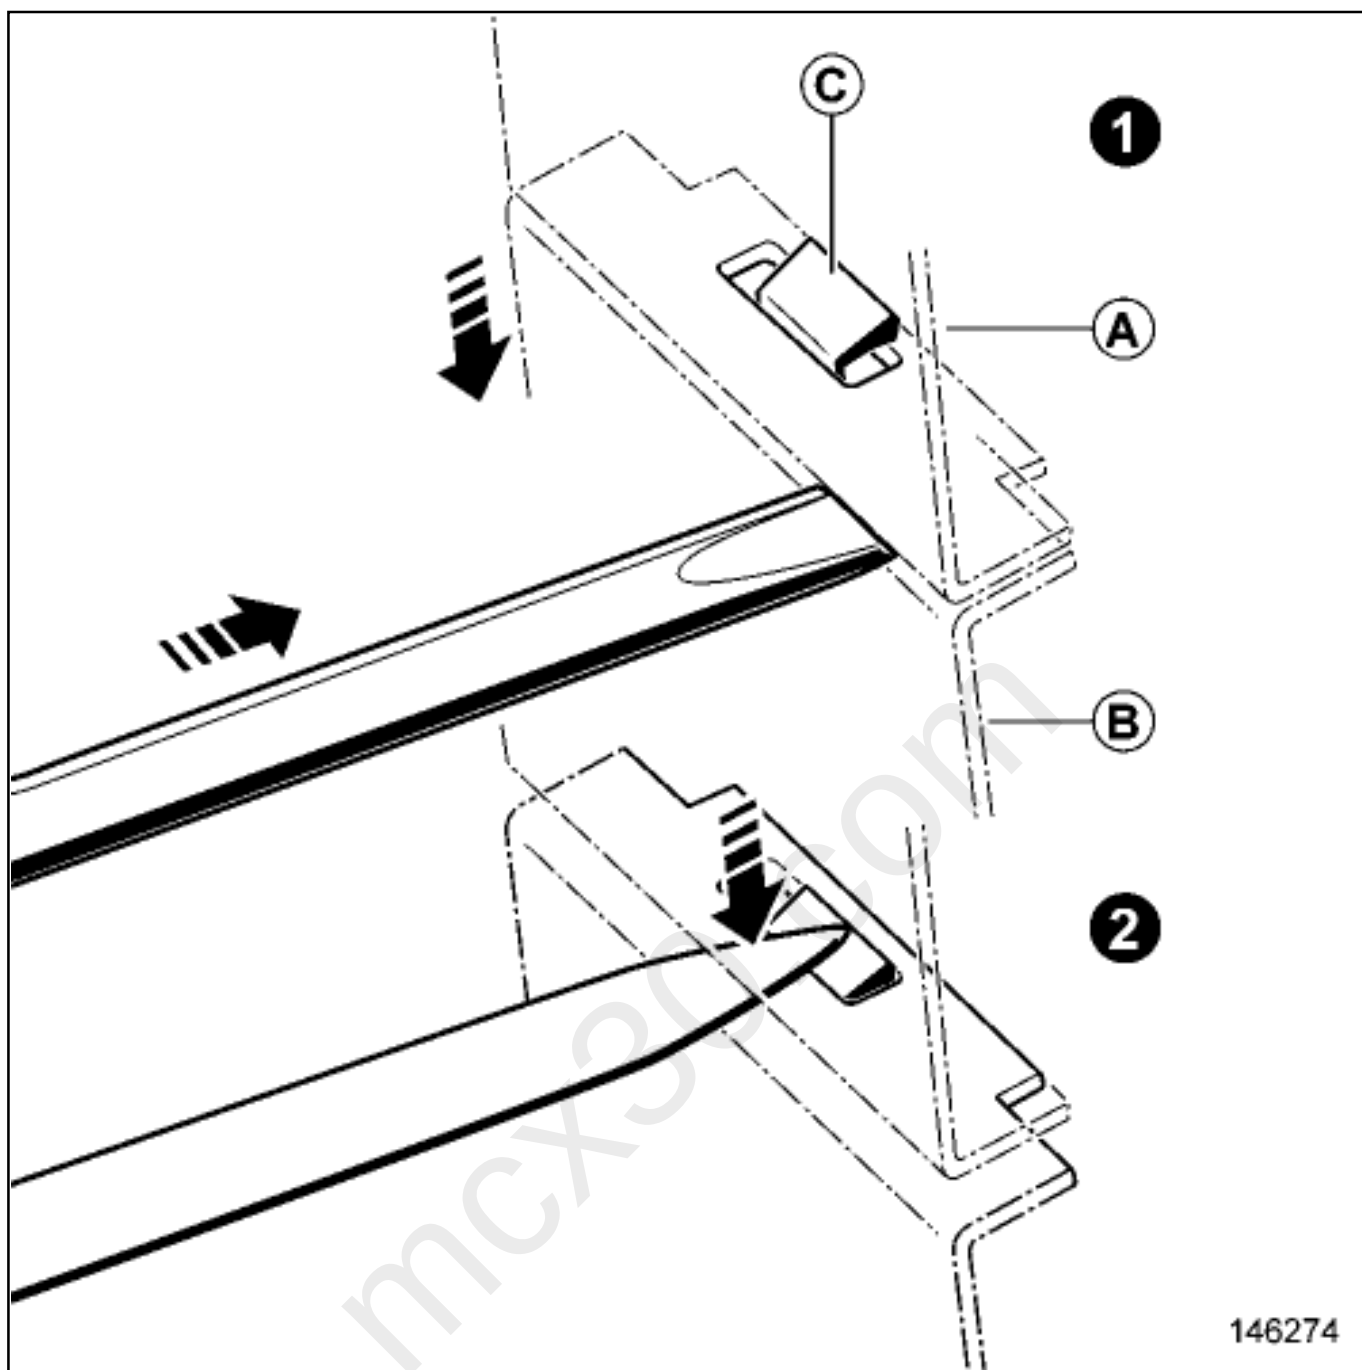

146274



Unclip (9) the front bumper while pressing on the lugs at (8) using the tool Set of trim removal levers. (Car. 1363) .



Slightly lift the upper section of the front bumper.



Remove the front bumper following the direction of the arrow (10) .