

Remove the protective cover(**10**) of the lower arm ball joint.

### 3. FINAL OPERATION



Proceed in the reverse order to removal.




Repair-13x02x03x10-01x37-1-17-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

FRONT END PANEL AIR INLET CONTROL VALVE ASSEMBLY : EXPLODED VIEW

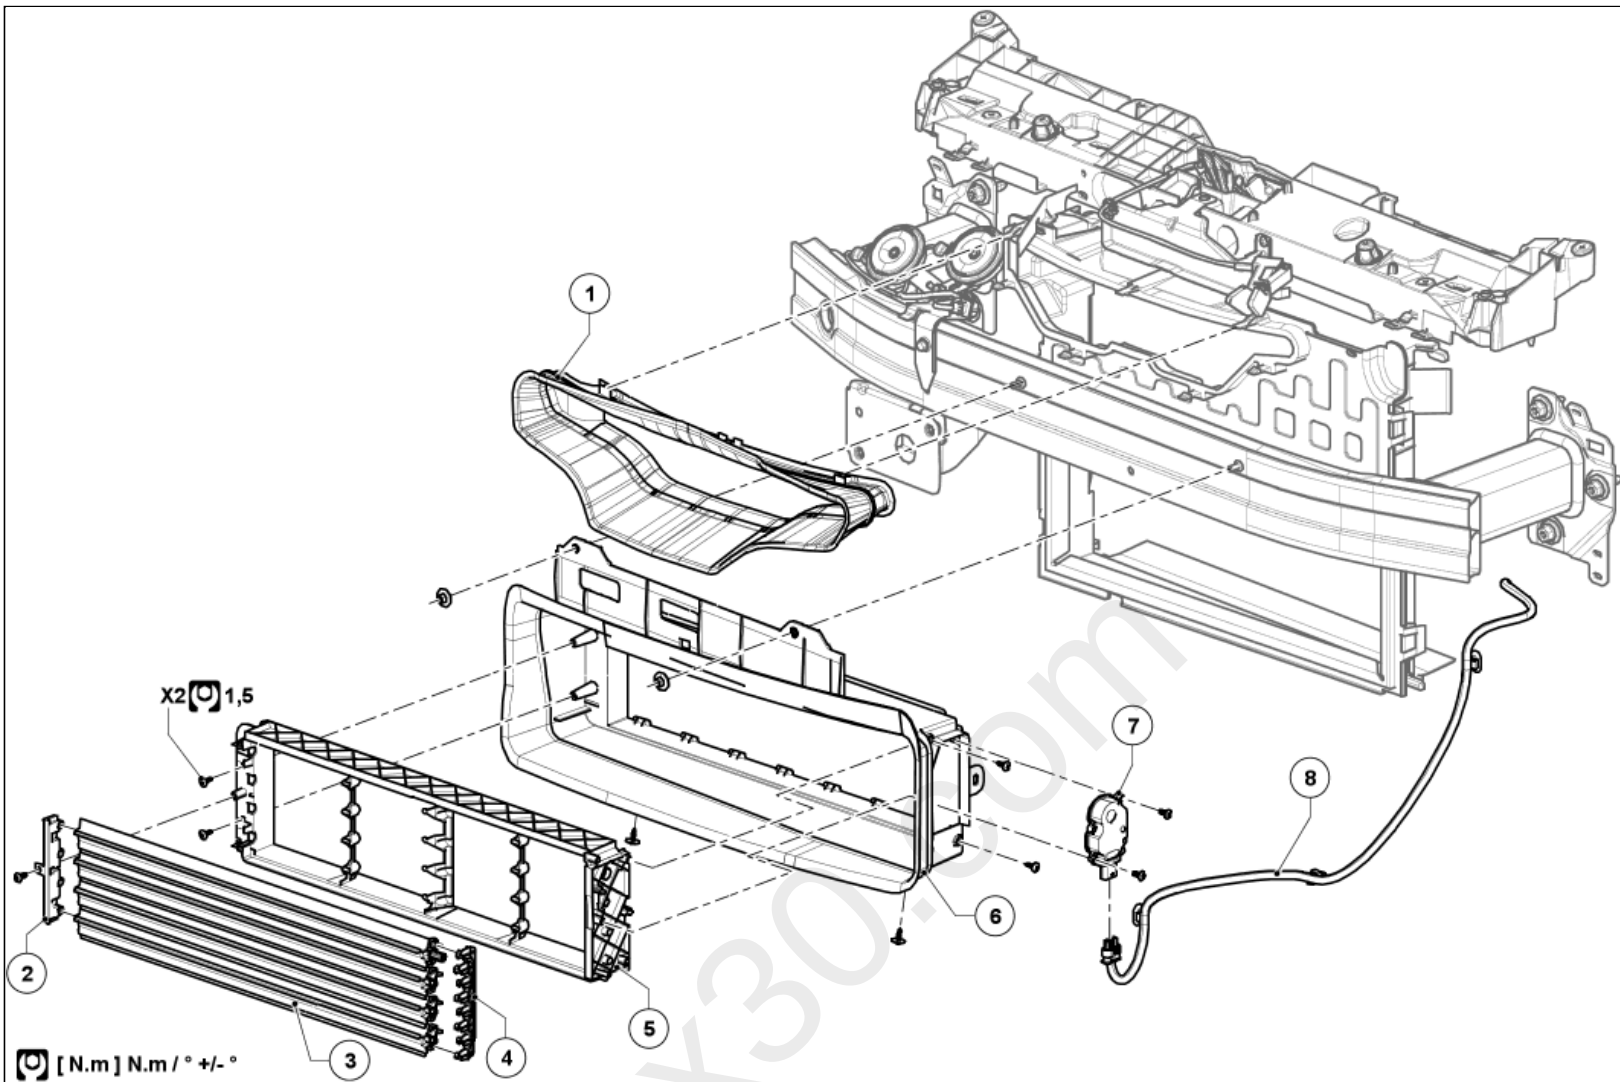

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques:[Tightening torques: General information](#) .

| Marks | Designations                     | Informations |
|-------|----------------------------------|--------------|
| 1     | Upper air radiator guide         |              |
| 2     | Flaps bracket                    |              |
| 3     | Flaps kit                        |              |
| 4     | Coupling part of flaps           |              |
| 5     | Flaps frame                      |              |
| 6     | Lower air radiator guide         |              |
| 7     | Controlled flaps actuator        |              |
| 8     | Controlled flaps actuator wiring |              |