

the brake hose.

3. FINAL OPERATION



Proceed in the reverse order to removal.



Repair-13x01x01x03-01x37-1-71-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com

FRONT LIGHTING: LIST AND LOCATION OF COMPONENTS

Location and specifications (tightening torques, parts always to be replaced, etc.) [\(see 80B, Headlights, Front signals - lighting assembly: Exploded view\)](#) and [\(see 80B, Headlights, Headlight assembly: Exploded view\)](#).

1. LIST OF COMPONENTS

1- THE FRONT LIGHTING CONSISTS OF:

- headlights,
- halogen bulbs,
- side indicators,
- front fog lights,
- daytime running lights.

2. LOCATION OF COMPONENTS

1- HEADLIGHT

Position the vehicle on a two post lift [Vehicle: Towing and lifting](#).

 Remove:

- the front section of the front wheel arch liners [Exterior body front trim assembly: Exploded view](#),
- the front bumper [Front bumper assembly: Exploded view](#).

Disconnect the headlight connectors.

Remove the headlight [\(see 80B, Headlights, Headlight assembly: Exploded view\)](#).

2- HALOGEN BULBS AND SIDE INDICATOR BULBS

The headlight bulbs can be replaced without removing the headlight.

To replace any bulbs [\(see 80B, Headlights, Headlight assembly: Exploded view\)](#).

3- FRONT FOG LIGHT

Position the vehicle on a two post lift [Vehicle: Towing and lifting](#).

Remove the access flap to the front fog light [Front bumper assembly: Exploded view](#).

 Remove [\(see 80B, Headlights, Front signals - lighting assembly: Exploded view\)](#):

- the front fog light bulb holder,