

- the fog light bulb,
-

the fog light.

4- DAYTIME RUNNING LIGHT

Position the vehicle on a two post lift [Vehicle: Towing and lifting](#) .



Remove:



the front section of the front wheel arch liners [Exterior body front trim assembly: Exploded view](#) ,



the front bumper [Front bumper assembly: Exploded view](#) .

Disconnect the daytime running connector.

Remove the daytime running light ([see 80B, Headlights, Front signals - lighting assembly: Exploded view](#)) .



Repair-80x02x02-02x51-1-24-1.xml




XSL version : 3.02 du 22/07/11

FRONT OPENING ELEMENT: ADJUSTMENT

Location and specifications (tightening torques, parts always to be replaced, etc.) [Front opening element mechanism assembly : Exploded view](#) .

ADJUSTMENT

■ For all information about bonnet adjustment values [Vehicle panel gaps: Adjustment value](#) .

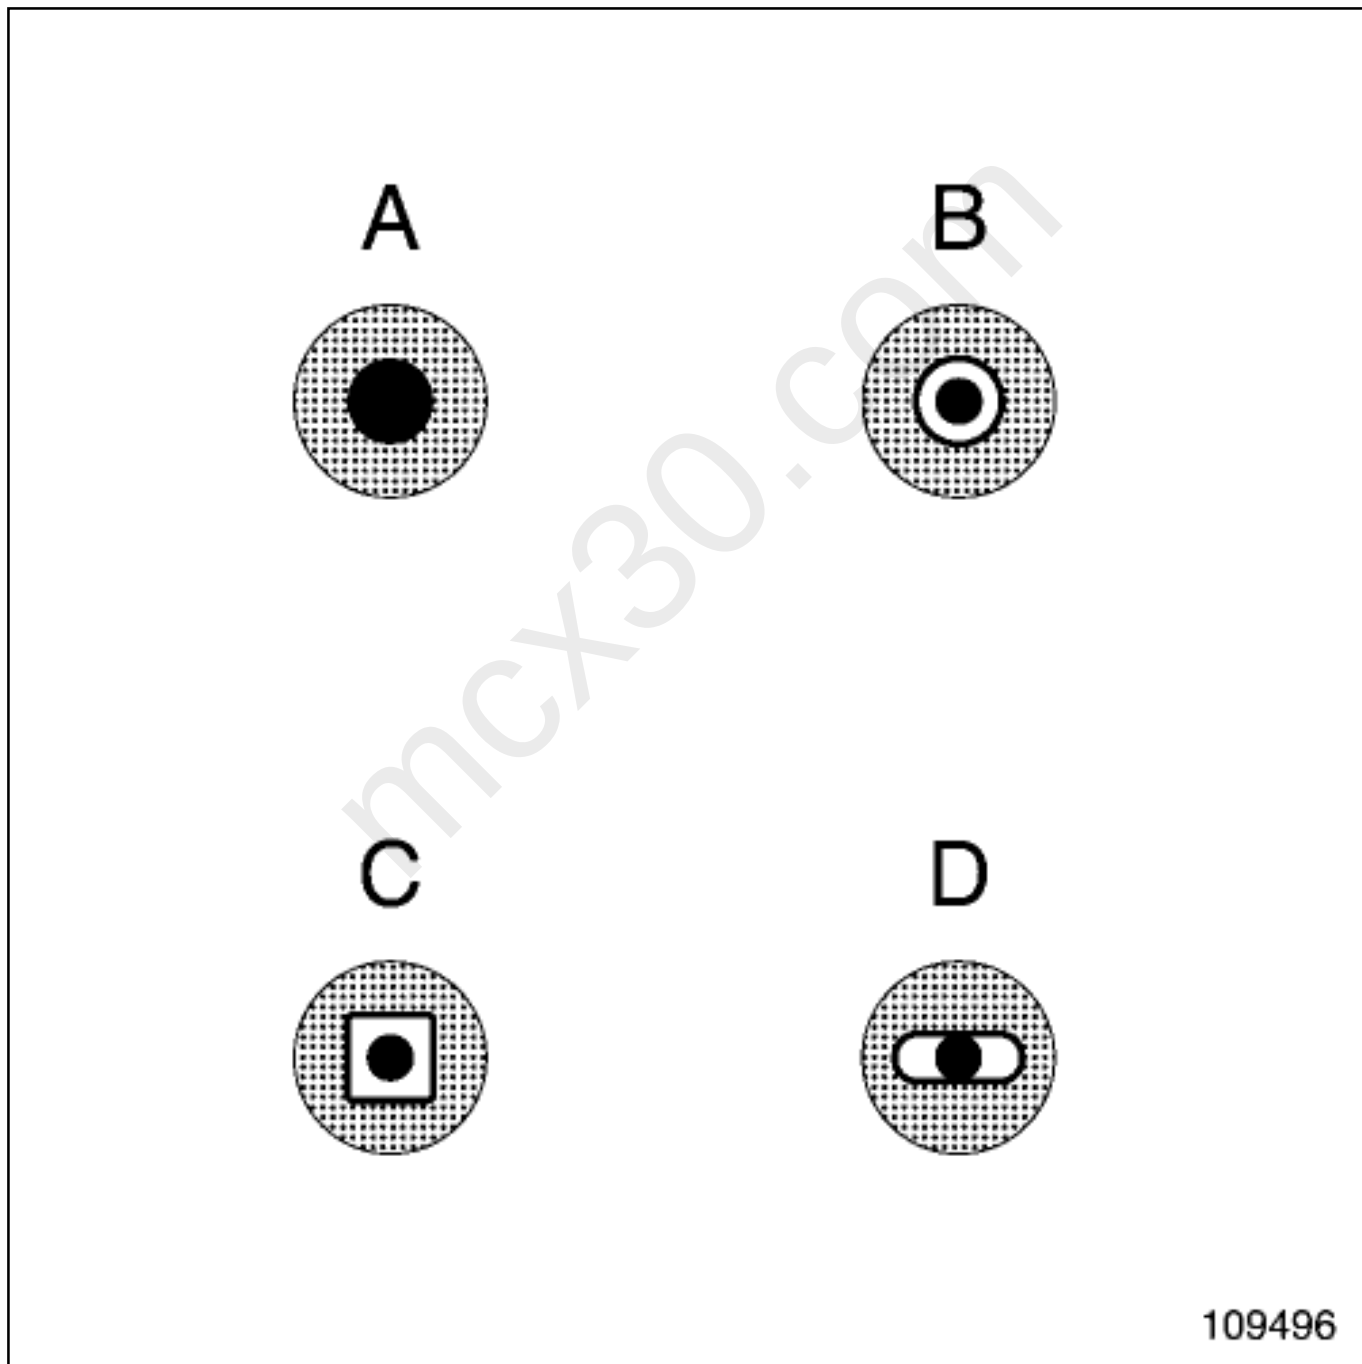


■ Symbols A, B, C and D show the adjustment options.

The black dot in the centre represents the body of the bolt.


The grey section represents the component to be adjusted.


The white section represents the adjustment area.

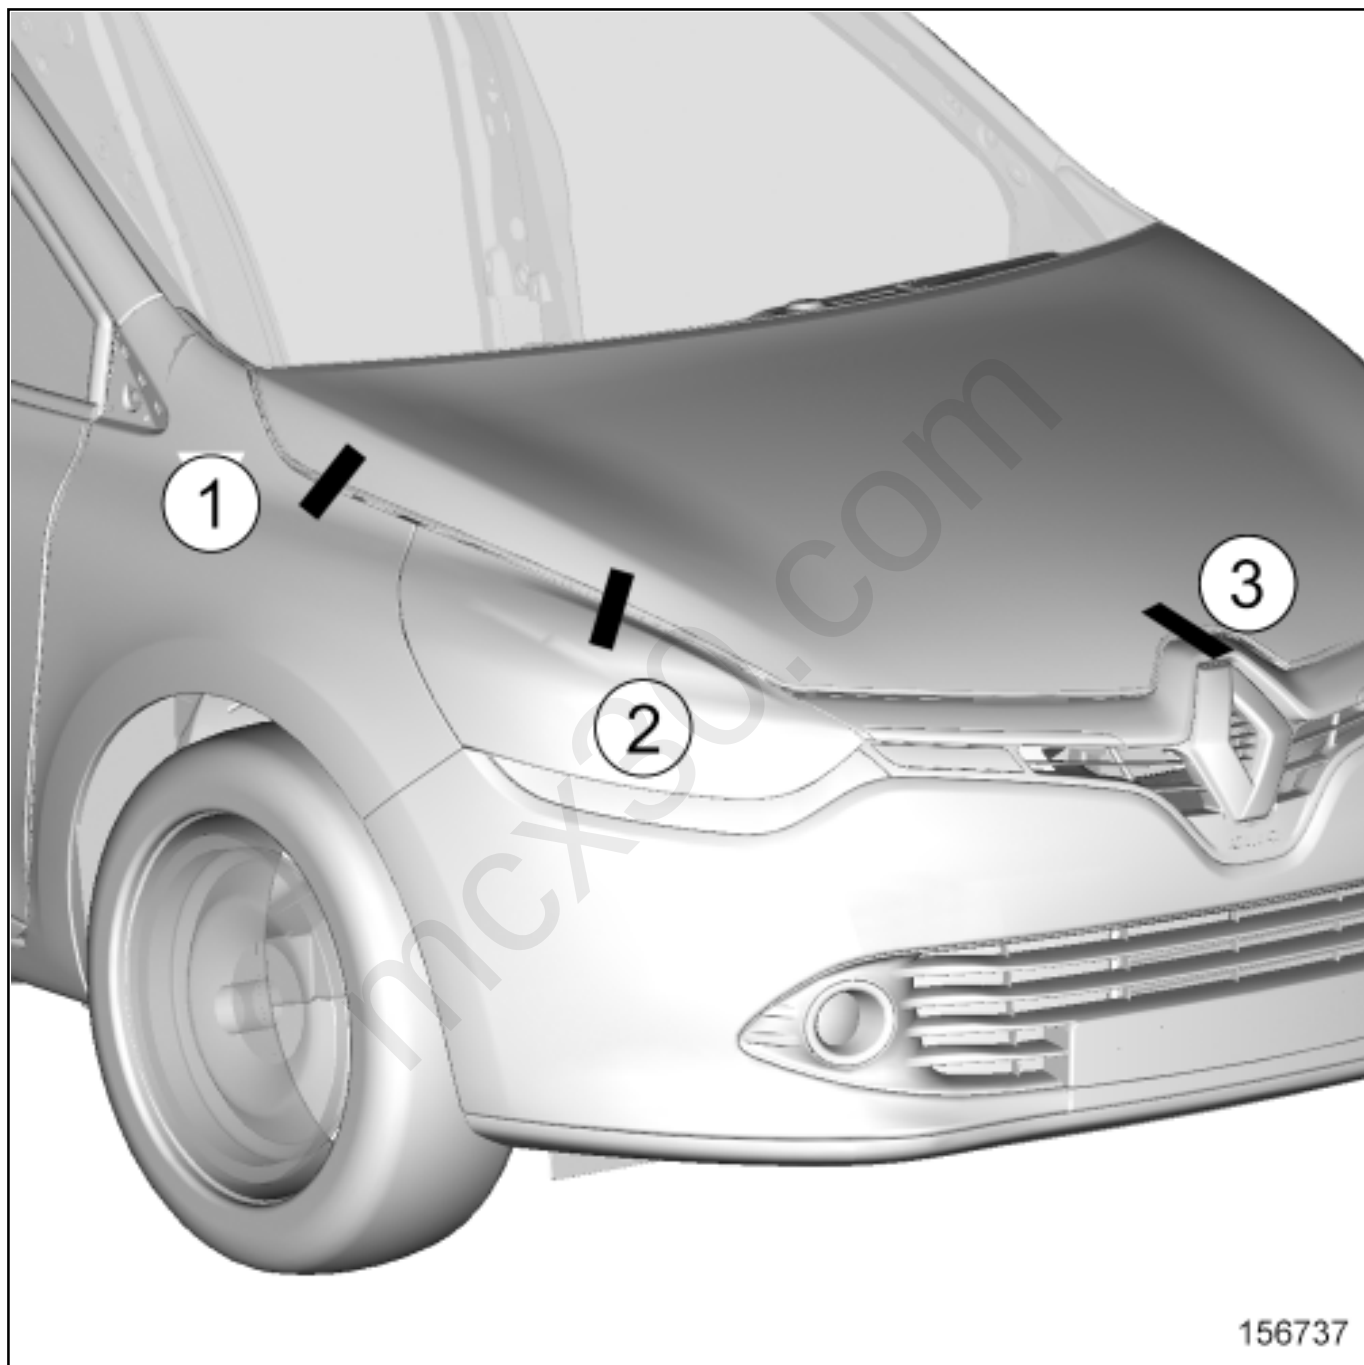

Observe the adjustment sequence(1) , (2) and (3) .

1. ADJUSTMENT BY MEANS OF THE BONNET BOLTS

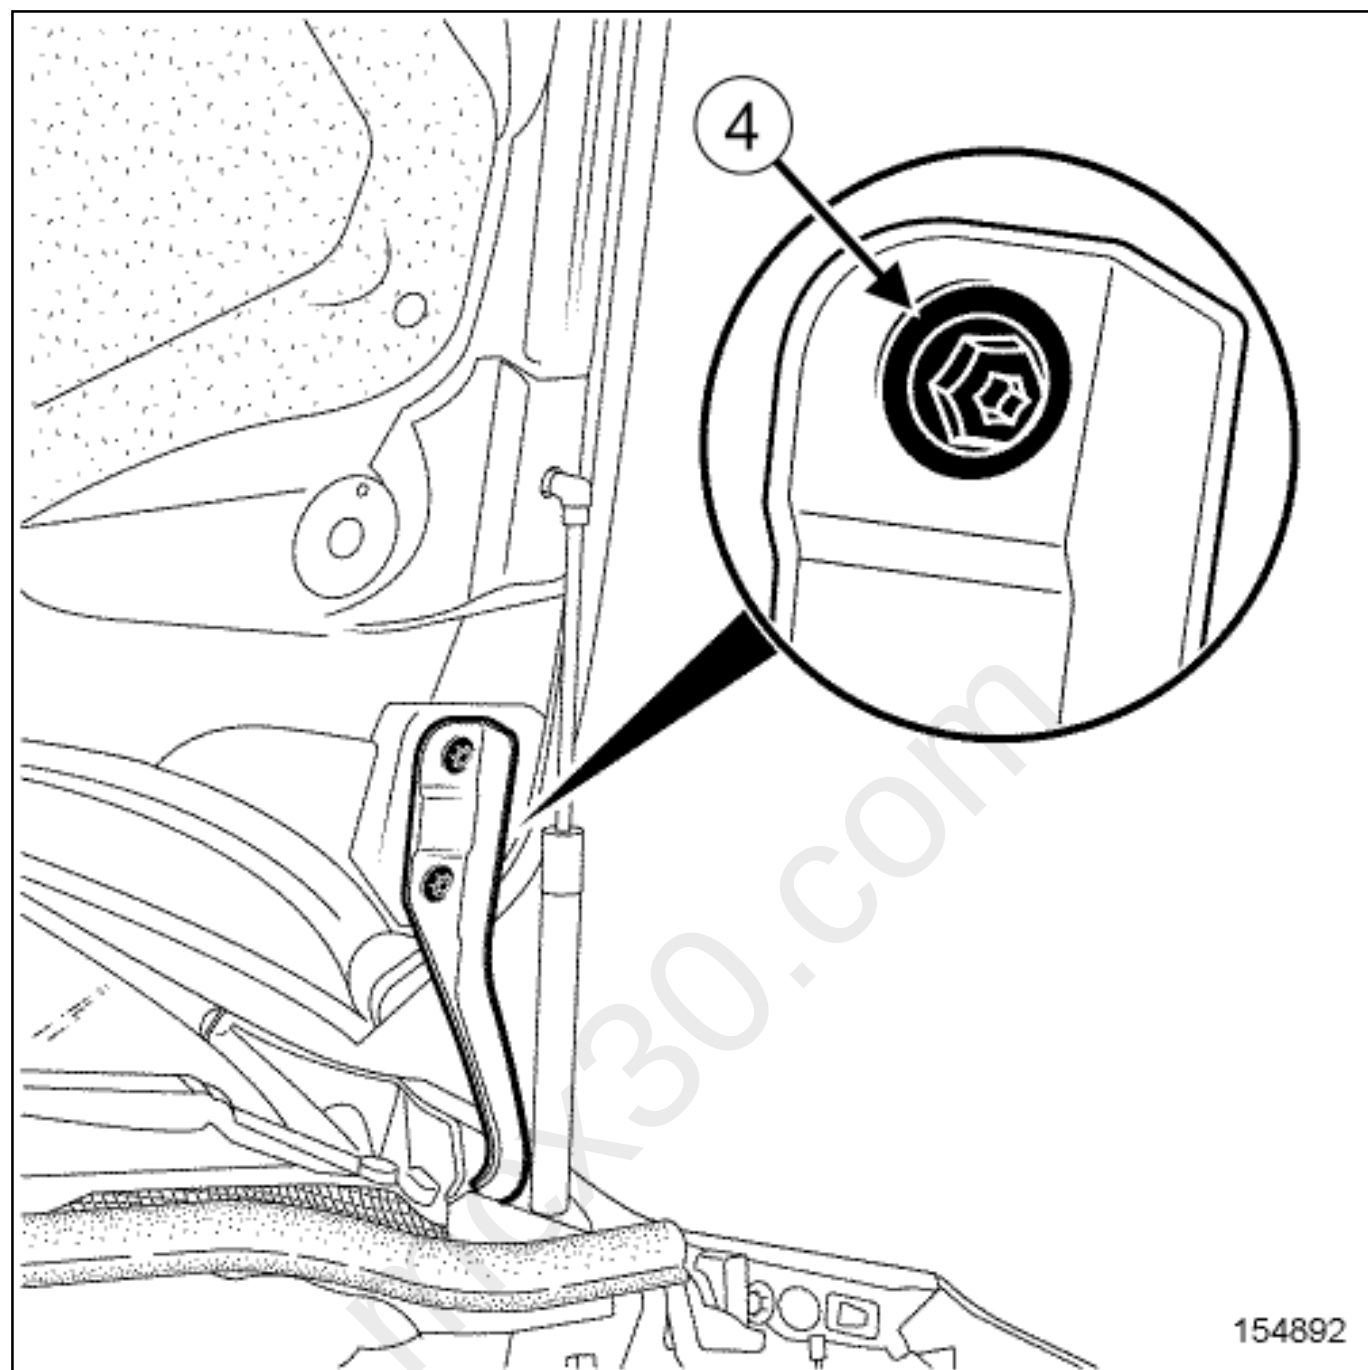

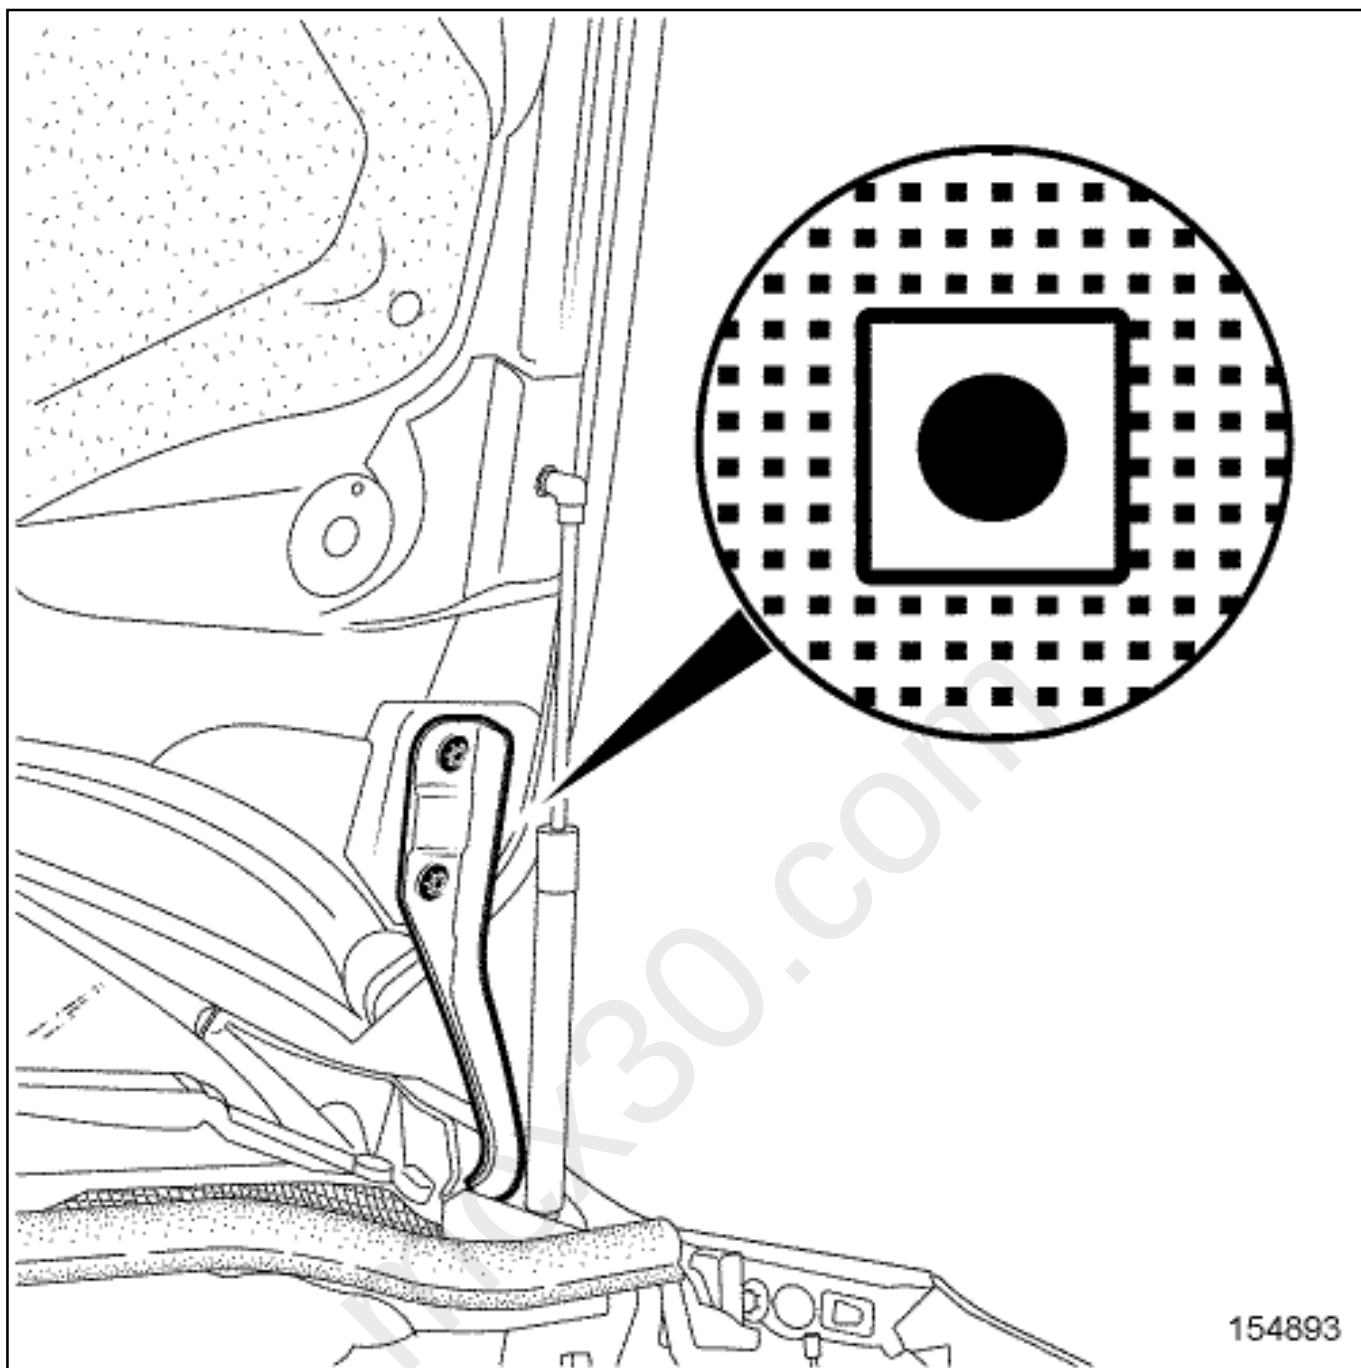

Loosen the bonnet bolts(4) .

Adjust the gaps and flush fittings of the bonnet.

Tighten the bonnet bolts(4) .