

Refit:

the brake hose and wheel speed sensor wiring support,

the bolt of the brake hose and wheel speed sensor wiring support.

Torque tighten the wheel speed sensor wiring support bolt [Front axle assembly: Exploded view](#) .

Clip:

the wheel speed sensor wiring,

the brake hose.

3. FINAL OPERATION

 
Proceed in the reverse order to removal.




Repair-13x01x01x02-01x37-1-65-1.xml



XSL version : 3.02 du 22/07/11




Vehicle: Precautions for the repair .

 

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#).

Marks	Designations	Informations
1	Front seat armrest	
2	Front seatback frame	
3	Front seat headrest guide	Front seat headrest guide: Removal - Refitting
4	Front seat headrest guide	Front seat headrest guide: Removal - Refitting
5	Armrest adjustment mechanism bolt	
6	Front seat lumbar pad	
7	Seat belt height adjustment system	
8	Front seat chest-level side airbag	Airbag and pretensioners: Precautions for the repair and Airbags and pretensioners: Recycling - Destruction Vehicle involved in an impact Vehicle involved in an impact: Mechanical impact fault finding
9	Front seat belt	Airbag and pretensioners: Precautions for the repair and Airbags and pretensioners: Recycling - Destruction Vehicle involved in an impact Vehicle involved in an impact: Mechanical impact fault finding
10	Front seat backrest tilt control cable	
11	Front seat height adjustment mechanism	(Car. 1922)
12	Bolt of front seat base exterior casing	
13	Front seat heated pad switch	
14	Trim of the front seat heated pad switch	
15	Front seat base exterior casing	
16	Front seat height adjustment control	
17	Front seat belt	Airbag and pretensioners: Precautions for the repair and Airbags and pretensioners: Recycling - Destruction Vehicle involved in an impact Vehicle involved in an impact: Mechanical impact fault finding
18	Front seat belt buckle bracket	
19	Bolt of front seat base exterior casing	
20	Front seat runner end cover	
21	Front seat runner end cover	
22	Front seat runner	(see 75A, Front seat frames and mechanisms, Front seat runner: Removal - Refitting) Centre to centre distance X = 418 mm
23	Front seat base pad	
24	Front seat base frame	
25	Front seat belt buckle	
26	Front seat base casing nuts	

27	Armrest adjustment mechanism	
28	Front seat base casing	
29	Front seat base casing	
30	Front seat backrest tilt control	
31	Front seat backrest tilt control	
32	Front seatback angle control trim	
33	Trim of the front seat height adjustment control	

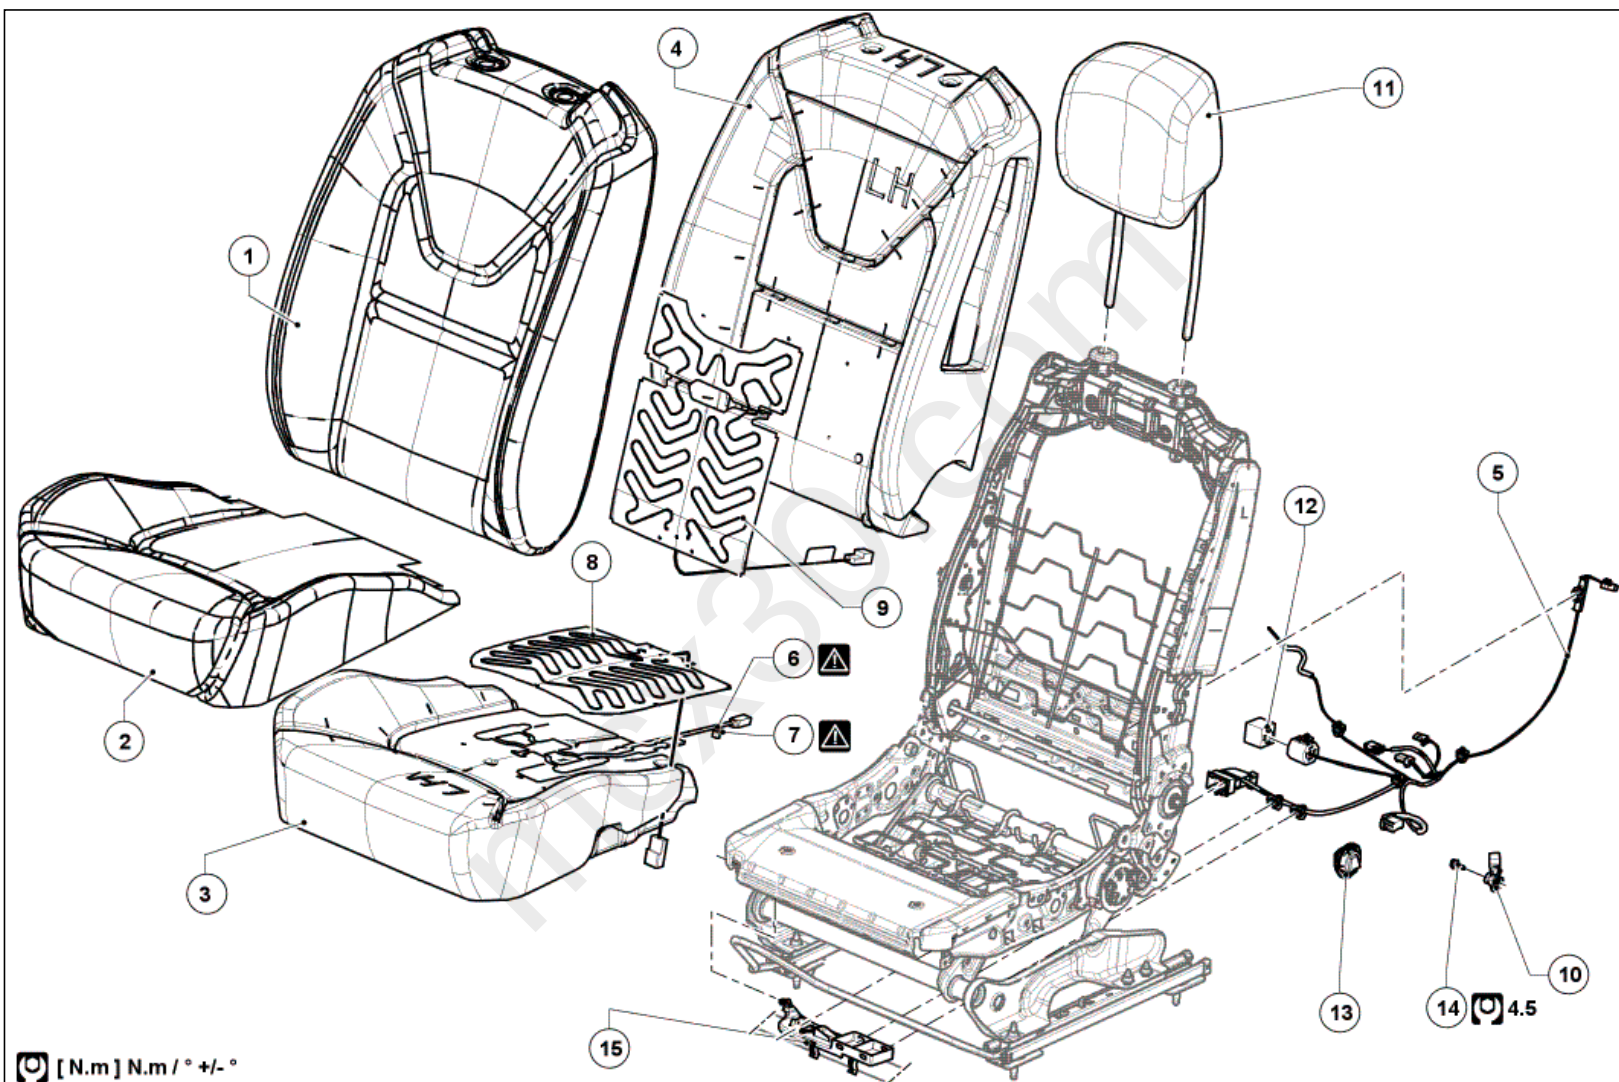

[Illustration key: Description](#) .

For fastenings with no specified tightening torque values, refer to the Table of Standard Torques [Tightening torques: General information](#) .