

Marks	Designations	Informations
1	Front seatback cover	
2	Front seat base cover	
3	Front seat base foam	
4	Front seat back foam	
5	Front seat electrical wiring	
6	"Stop and start" driver presence sensor	For driver
7	Passenger presence sensor	For passenger
8	Front seat base heated pad	
9	Front seatback heated pad	
10	Side impact sensor on body	Airbag and pretensioners: Precautions for the repair Vehicle involved in an impact Vehicle involved in an impact: Mechanical impact fault finding
11	Front seat headrest	
12	Driver's heated seat supply relay	
13	Side impact sensor on door	Airbag and pretensioners: Precautions for the repair Vehicle involved in an impact Vehicle involved in an impact: Mechanical impact fault finding
14	Side impact sensor on body bolt	
15	Front seat electrical wiring support	



Repair-70x06x01-02x50-1-9-1.xml



XSL version : 3.02 du 22/07/11

FRONT SEAT HEADREST GUIDE: REMOVAL - REFITTING



Note, one or more warnings are present in this procedure



REMOVAL

1. REMOVAL PREPARATION OPERATION

■ Disconnect the battery [Battery: Removal - Refitting](#) .

■ Remove [Front seat assembly: Exploded view](#) :



the front seat headrest,



the front seatback cover partially.


2. REMOVAL OPERATION



Remove the front seat headrest guides [Front seat assembly: Exploded view](#) .

REFITTING

1. REFITTING OPERATION

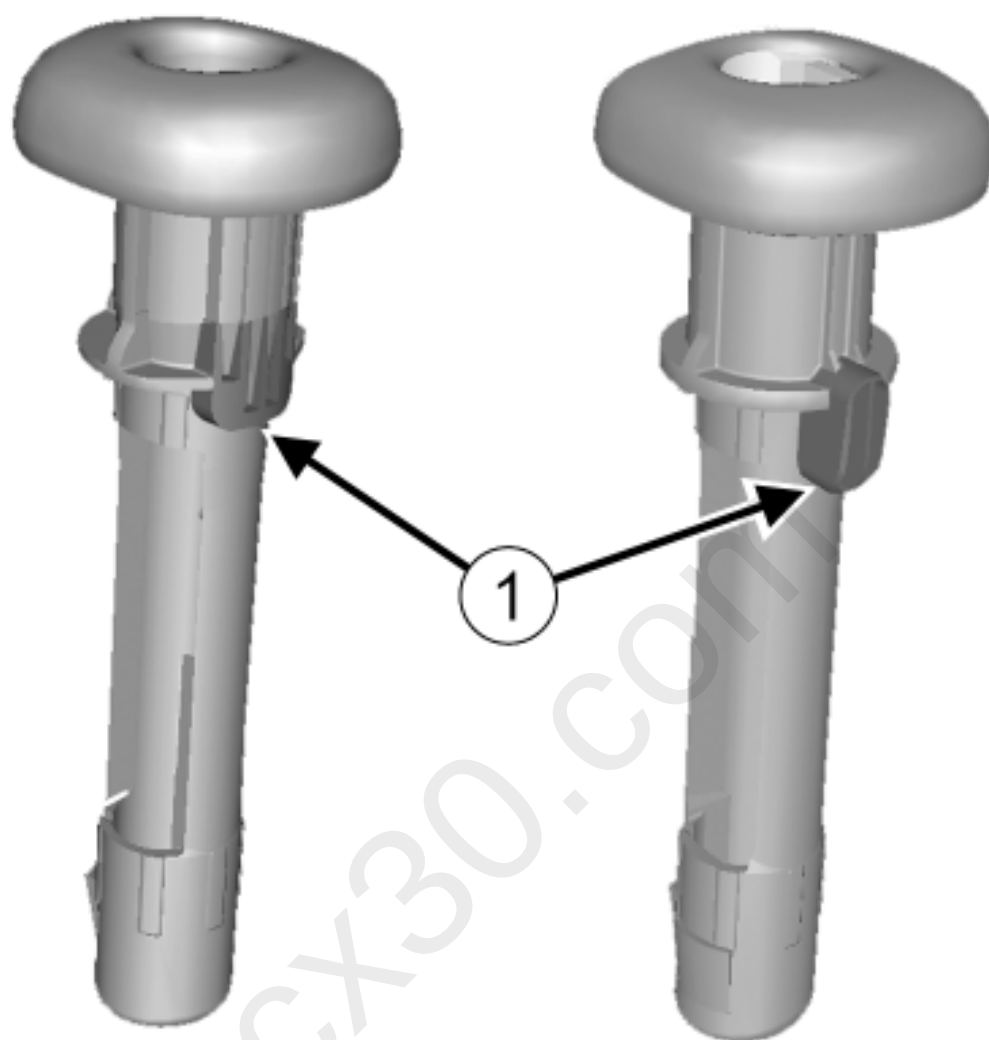

156823

Refit the headrest guides fully into the front seatback frame.

Note:



To prevent the headrest guides from being mixed up, each headrest guide has a specific indexing device(1) .

Check that the headrest guides are secure in the front seatback frame.