

Proceed in the reverse order to removal.

Check the front axle geometry [Axle assemblies: Check](#) .

Adjust the front axle, if necessary [Front axle system: Adjustment](#) .



Repair-13x02x04x03-01x37-1-37-1.xml



XSL version : 3.02 du 22/07/11

mcx30.com